

DTIC FILE COPY

ESL-TR-87-28
VOL II

**THERMAL DESORPTION/ULTRAVIOLET
PHOTOLYSIS PROCESS TECHNOLOGY
RESEARCH, TEST, AND EVALUATION
PERFORMED AT THE NAVAL
CONSTRUCTION BATTALION CENTER,
GULFPORT, MS, FOR THE USAF
INSTALLATION RESTORATION
PROGRAM, VOLUME II**

R.W. HELSEL, R.W. THOMAS

**EG&G IDAHO, INC.
P.O. BOX 1625
IDAHO FALLS ID 83415**

DECEMBER 1987

FINAL REPORT

MAY 1985 - JULY 1985

DTIC
SELECTED
DEC 16 1988
S E

APPROVED FOR PUBLIC RELEASE: DISTRIBUTION UNLIMITED



**ENGINEERING & SERVICES LABORATORY
AIR FORCE ENGINEERING & SERVICES CENTER
TYNDALL AIR FORCE BASE, FLORIDA 32403**

AD-A202 265

**Best
Available
Copy**

REPORT DOCUMENTATION PAGE				Form Approved OMB No. 0704-0188	
1a. REPORT SECURITY CLASSIFICATION			1b. RESTRICTIVE MARKINGS		
2a. SECURITY CLASSIFICATION AUTHORITY			3. DISTRIBUTION/AVAILABILITY OF REPORT Approved for public release Distribution Unlimited		
2b. DECLASSIFICATION/DOWNGRADING SCHEDULE					
4. PERFORMING ORGANIZATION REPORT NUMBER(S)			5. MONITORING ORGANIZATION REPORT NUMBER(S) ESL-TR-87-28		
6a. NAME OF PERFORMING ORGANIZATION EG&G Idaho		6b. OFFICE SYMBOL (if applicable)		7a. NAME OF MONITORING ORGANIZATION	
6c. ADDRESS (City, State, and ZIP Code) P.O. Box 1625 Idaho Falls, ID 83415			7b. ADDRESS (City, State, and ZIP Code)		
8a. NAME OF FUNDING/SPONSORING ORGANIZATION Air Force Engineering & Services Center		8b. OFFICE SYMBOL (if applicable) RDVW		9. PROCUREMENT INSTRUMENT IDENTIFICATION NUMBER	
8c. ADDRESS (City, State, and ZIP Code) HQ AFESC/RDVW Tyndall AFB, FL 32403-6001			10. SOURCE OF FUNDING NUMBERS		
			PROGRAM ELEMENT NO.	PROJECT NO.	TASK NO.
			WORK UNIT ACCESSION NO.		
11. TITLE (Include Security Classification) Thermal Desorption/Ultraviolet Photolysis Process Technology Research, Test, and Evaluation performed at the NCBC, Gulfport, MS, for the USAF Installation Restoration Program					
12. PERSONAL AUTHOR(S) R.W. Helsel and R.W. Thomas					
13a. TYPE OF REPORT FINAL		13b. TIME COVERED FROM May 85 TO July 85		14. DATE OF REPORT (Year, Month, Day) December 1987	
15. PAGE COUNT 920					
16. SUPPLEMENTARY NOTATION Availability of this report is specified on reverse of front cover.					
17. COSATI CODES			18. SUBJECT TERMS (Continue on reverse if necessary and identify by block number)		
FIELD	GROUP	SUB-GROUP			
07	01		Herbicide Orange) Thermal Treatment, 2,4-D		
14	01		Dioxin \ Incineration, 2,4,5, T		
			Analytical Methods, Agent orange. (agent) 2,3,7,8-TCDD		
19. ABSTRACT (Continue on reverse if necessary and identify by block number) The objective of this effort was to examine the feasibility of using a thermal desorption/ultraviolet (TD/UV) destruction technology to treat Herbicide Orange (HO)-contaminated soil at the Naval Construction Battalion Center (NCBC), Gulfport, Mississippi. The IT Corporation pilot -scale TD/UV apparatus was used to successfully treat 1700 pounds of sandy-loam, cement stabilized, soil that had been contaminated with HO and 2,3,7,8 tetrachlorobenzo-p-dioxin (TCDD). The TD/UV process volatilizes organic compounds from the soil matrix; collects the desorbed organics in a solvent; and, destroys the contaminants with high-intensity ultraviolet light. The desorption process occurs between 850 to 1150 degrees F. in a nitrogen atmosphere to prevent combustion of the organics. Analysis of feedstock showed TCDD levels ranged from 233-272 parts per billion (ppb). Concentration in the treated soil, measured as the sum of all dioxin/furan congeners, was less than 1ppb, the USAF criterion. The TD/UV process demonstrated the capability to treat dioxin-contaminated soil (cont'd. on reverse side)					
20. DISTRIBUTION/AVAILABILITY OF ABSTRACT <input checked="" type="checkbox"/> UNCLASSIFIED/UNLIMITED <input type="checkbox"/> SAME AS RPT. <input type="checkbox"/> DTIC USERS			21. ABSTRACT SECURITY CLASSIFICATION Unclassified		
22a. NAME OF RESPONSIBLE INDIVIDUAL Terry L. Stoddart, Maj., USAF, BSC			22b. TELEPHONE (Include Area Code) (904) 283-2942		22c. OFFICE SYMBOL RDVW

and a scaled up version could be considered as a bulk reduction process for restoration of sites contaminated with chlorinated organic compounds including other DOD Herbicide Orange contaminated sites. Sensitivity analyses of six variables (geographic) location, soil quantity, electrical power prices, labor, capital equipment use charge, and transportation) were performed to estimate the cost for conditions other than those found at NCBC. The cost to treat one ton of contaminated soil using a scaled up system, based on treatment of 20,000 tons at NCBC, is \$402/ton. The process may have application for treatment of other chlorinated organic compounds. The process may have unique application in geographical areas where incineration would not be accepted.

One negative aspect is that the photolysed solvent remains a hazardous waste and must be handled appropriately. Additional R&D is required to establish an alternate photolysis unit to overcome the problem.

This report is organized into four volumes: Volume I presents the final report on the performance of the Thermal Desorption/Ultraviolet Photolysis process for use in decontaminating soil containing Herbicide Orange/Dioxin. Volume II contains appendices A through O. Volume III contains appendix P. Volume IV contains appendices Q through V.

Accession For	
NTIS GRA&I	<input checked="" type="checkbox"/>
DTIC TAB	<input type="checkbox"/>
Unannounced	<input type="checkbox"/>
Justification	
By _____	
Distribution/	
Availability Codes	
Dist	Avail and/or Special
A-1	



PREFACE

This report was prepared for the Air Force Engineering and Services Center, Engineering and Services Laboratory, Tyndall AFB, Florida, under Job Order Number (JON) 2103 9027. The principal contractor, EG&G Idaho, Inc., is the prime contractor for the Department of Energy, Idaho National Engineering Laboratory. The major subcontractor for the project is the International Technologies Corporation, Knoxville, Tennessee.

This report is organized into four volumes: Volume I presents the final report on the performance of the Thermal Desorption/Ultraviolet Photolysis process for use in decontaminating soil containing Herbicide Orange/dioxin. Volume II contains appendices A through O. Volume III contains appendix P. Volume IV contains appendices Q through V.

Other contributors to this report include: E. Alperin, W.A. Prop, A.E. Grey, D.L. Miller, H.J. Welland, D.J. Harvego, H.D. Williams, and G. Peterson.

This report has been reviewed by the Public Affairs Office (PAO) and is releasable to the National Technical Information Services (NTIS). At NTIS, it will be available to the general public, including foreign nationals.

This report has been reviewed and approved for publication.

Terry L. Stoddart

TERRY L. STODDART, Maj, USAF, BSC
Chief, Environmental Restoration R&D

Thomas J. Walker

THOMAS J. WALKER, Lt Col, USAF, BSC
Chief, Environics Division

F. Thomas Lubozynski

F. THOMAS LUBOZYNSKI, Maj, USAF, BSC
Chief, Environmental Engineering Branch

Lawrence D. Hokanson

LAWRENCE D. HOKANSON, Colonel, USAF
Director, Engineering and Services
Laboratory

LIST OF APPENDICES

Appendix	Title	Page
A	REQUEST FOR AND EPA AUTHORIZATION LETTERS FOR AIR FORCE ENVIRONMENTAL RESTORATION TECHNOLOGY, RESEARCH, AND TEST EVALUATION PROGRAM AT NCBC	1
B	REQUEST FOR AND EPA AUTHORIZATION LETTERS FOR DIOXIN-CONTAMINATED WASTE DISPOSAL	7
C	PUBLIC NOTIFICATION AND LOCAL NEWS ARTICLES ON TECHNOLOGY, RESEARCH, AND TEST EVALUATION PROGRAM AT NCBC	13
D	PROPERTIES OF SOLVENT USED IN UV PHOTOLYSIS TESTING	19
E	ITC HEALTH AND SAFETY PLAN FOR SITE DEMONSTRATION OF THE THERMAL DESORPTION/UV PHOTOLYSIS PROCESS	23
F	MODIFIED PRIORITY POLLUTANT LIST FOR HERBICIDE ORANGE CONTAMINATION	53
G	MODIFIED EPA CARCINOGEN ASSESSMENT GROUP's (CAG) LIST FOR HERBICIDE ORANGE CONTAMINATION	61
H	MODIFIED LIST OF COMPOUNDS INDIGENOUS TO HERBICIDE ORANGE	65
I	ITC INDUSTRIAL HYGIENE MONITORING REPORT IN SUPPORT OF NCBC DEMONSTRATION TESTS	69
J	ITC WIPE SAMPLING PROCEDURES	77
K	COPIES OF UNIFORM HAZARDOUS WASTE SHIPMENT FORMS FOR SHIPMENTS THAT INCLUDED DIOXIN-CONTAMINATED WASTES FROM ITC NCBC TESTS	83
L	ECOLOGY AND ENVIRONMENT, INC. SAMPLING PROTOCOL FOR ITC NCBC TEST	93
M	PACKING LISTS FOR ITC NCBC TEST-RELATED SAMPLES BEING SHIPPED TO ANALYTICAL LABORATORIES	99
N	CALIFORNIA ANALYTICAL LABORATORIES PROTOCOL FOR ANALYSIS OF DIOXINS AND FURANS	127
O	CALIFORNIA ANALYTICAL LABORATORIES DATA SHEETS FOR DIOXIN/FURAN ANALYSES, ORGANIC COMPOUND ANALYSES, AND INORGANIC ANALYSES	165

APPENDIX A

REQUEST FOR AND EPA AUTHORIZING LETTERS
FOR AIR FORCE ENVIRONMENTAL RESTORATION TECHNOLOGY,
RESEARCH, AND TEST EVALUATION PROGRAM AT NCBC

	<u>Page</u>
Exhibit 1 Letter from Hazardous Waste Program transmitting technical information for USAF research and test evaluation	3
Exhibit 2 Letter from the EPA to Colonel Boyer at Tyndall Air Force Base	5

The documents contained in this appendix were published according to their own internal style, which deviates from ESL format. They have, therefore, been published without editing.



P.O. BOX 1625, IDAHO FALLS, IDAHO 83415

bcc: K. L. Falconer *KF*
F. C. Fogarty
T. H. Smith *[Signature]*
D. L. Uhl
Central Files
H. D. Williams File

March 14, 1985

Mr. Paul des Rosier
Deputy Chairman, Dioxin Disposal Advisory Group
Environmental Protection Agency
401 M Street SW
Washington, DC 20460

TRANSMITTAL OF TECHNICAL INFORMATION FOR USAF RESEARCH AND TEST EVALUATION
-HDW-4-85

Dear Mr. des Rosier:

Based on previous discussions with the Dioxin Disposal Advisory Group (DDAG) and following the guidance provided by DDAG, EG&G Idaho, Inc. has prepared the attached document for review by DDAG. The document presents technical information concerning the Research Test and Evaluation activities of the United States Air Force (USAF) Environmental Restoration Program for former Herbicide Orange storage sites.

Captain T. L. Stoddart, USAF, Engineering Services Center, (HQ AFESC) has arranged for a presentation of this information to the DDAG in Washington, DC, on March 21, 1985 at 1000 hours. Representatives of EG&G Idaho, Inc. and its subcontractors, the IT Corporation and J.M. Huber Company, will be present to provide additional information or answer questions as they arise. Enclosed are eleven copies of the document for you to distribute at your discretion.

On behalf of the USAF Engineering Services Center and our subcontractors, we are pleased to present this information to you and will look forward to further discussions on March 21, 1985. If questions arise prior to that date, please contact me at FTS 583-1763 or K. L. Falconer at FTS 583-1559.

Very truly yours,

A handwritten signature in cursive script, appearing to read 'H. D. Williams', written in dark ink.

H. D. Williams
Senior Program Specialist
Hazardous Waste Program

March 14, 1985
Mr. Paul des Rosier
NDW4-85
Page 2

ag

Enclosure:
as Stated

cc: I. Aoki, DOE-ID
M. Cook, EPA
K. Kleveno, EPA
J. McGraw, EPA
T. L. Stoddart, Captain, USAF
J. O. Zane, EG&G Idaho (w/o Enclosure)



UNITED STATES ENVIRONMENTAL PROTECTION AGENCY
WASHINGTON, D.C. 20460

APR 25 1985

OFFICE OF
SOLID WASTE AND EMERGENCY RESPONSE

Colonel Robert Boyer
HQ AFESC/RD
Tyndall Air Force Base, FL 32403

Dear Colonel Boyer:

We have reviewed your document entitled "Environmental Restoration Technology--Research and Test Evaluation," informing the Environmental Protection Agency (EPA) of your intent to treat soils contaminated with 2,3,7,8-tetra-chlorodibenzo-p-dioxin (2,3,7,8-TCDD). We understand that you wish to conduct a series of research tests on less than 3,700 pounds of soil (less than two tons, or two cubic yards) contaminated with approximately 200 ppb of 2,3,7,8-TCDD. The 2,3,7,8-TCDD-contaminated soil is located at the Naval Construction Battalion Center (NCBC), Gulfport, MS, the site of the research tests. We also understand that you plan to destroy the 2,3,7,8-TCDD in the soil by testing two treatment units for approximately three to five weeks. The two units are: 1) thermal pyrolysis using the Advanced Electric Reactor developed by the J. M. Huber Company, and 2) thermal desorption followed by ultraviolet light destruction, developed by the IT Corporation. Because the destruction tests are being conducted for research purposes, you have requested a waiver from notification under 40 CFR Part 775.

On March 21, 1985, the Dioxin Disposal Advisory Group (DDAG) met with the U.S. Air Force to discuss the details of the planned research and evaluation studies. As a result, the DDAG determined that the proposal involves potentially feasible technologies, that the technical, safety, and environmental factors have been adequately addressed, and that the research activities will provide useful information in the destruction of 2,3,7,8-TCDD-contaminated soils. Thus, a research waiver from the notification requirements under 40 CFR Part 775 is hereby granted to the U.S. Air Force (HQ AFESC) to conduct the research tests. The waiver is being granted since the quantity of soil is small, the equipment being used for the research is pilot scale, and the tests to be conducted are of short duration. If testing should continue beyond July 15, 1985, the effective date of the RCRA dioxin regulation (50 FR 1978-2006; January 14, 1985), the activities will be subject to the provisions of that rule.

Your research at Johnston Island, however, will occur after July 15, 1985. As such, it will be subject to the RCRA dioxin listing. As discussed with members of your staff, EPA is proceeding with the preparation of a research development and demonstration permit. If you have any questions, please feel free to contact Dr. Howard Fribush, Office of Solid Waste, on (202) 475-6678.

Sincerely yours,

/s/ Jack W. McGraw

Jack W. McGraw
Acting Assistant Administrator

cc: Captain Terry Stoddart
HQ AFESC/RDVW
Tyndall Air Force Base

APPENDIX B

REQUEST FOR AND EPA AUTHORIZING LETTERS
FOR DIOXIN-CONTAMINATED WASTE DISPOSAL

	<u>Page</u>
Exhibit 1 Air Force letter requesting EPA approval of disposal of TCDD contaminated waste	9
Exhibit 2 EPA letter to Air Force regarding disposal of waste materials contaminated with 2,3,7,8-TCDD	11

The documents contained in this appendix were published according to their own internal style, which deviates from ESL format. They have, therefore, been published without editing.



DEPARTMENT OF THE AIR FORCE
 HEADQUARTERS AIR FORCE ENGINEERING AND SERVICES CENTER
 TYNDALL AIR FORCE BASE, FL 32403

APR 25 1985

REPLY TO
 ATTN OF:

RDVW

SUBJECT:

Notification of Disposal of TCDD (Dioxin) Contaminated Waste from Air Force Environmental Restoration Activities

TO:

**Mr. Jack McGraw
 Acting Assistant Administrator for
 Pesticides and Toxic Substances
 U.S. Environmental Protection Agency
 Waterside Mall
 401 "M" Street, S.W.
 Washington D.C. 20460**

1. The U.S. Air Force Installation Restoration Program is involved with two major research activities at former Herbicide Orange storage sites. The purpose of this application/notification is to provide for the disposal of dioxin contaminated personnel protection and sampling equipment generated during various phases of our two programs. Presently, surface and subsurface sampling is being conducted at the Naval Construction Battalion Center (NCBC), Gulfport MS and Eglin AFB (EAFB), Fort Walton Beach FL, to determine the profile and extent of contamination. Follow on phases involve testing soil decontamination technologies at NCBC.

2. Application for approval is made for disposal of TCDD contaminated waste under provisions of 40CFR, Part 775, 190(b). Disposal will be accomplished prior to 15 Jul 85.

a. Name and address of firm: **HQ Air Force Engineering & Services Center
 Engineering and Services Laboratory
 (HQ AFESC/RD)
 Tyndall AFB FL 32403 6001
 ID No. FL 1570024124**

b. Site 1: **Naval Construction Battalion Center, Gulfport MS, ID
 #MS2170022626.**

Site 2: **Eglin AFB, Fort Walton Beach FL, ID# FL572024366.**

c. Point of Contact: **Capt Terry L. Stoddart
 HQ AFESC/RDVW
 Tyndall AFB FL 32403
 (904) 283-2942**

d. A review of current analytical data indicates the maximum levels of 2,3,7,8 TCDD contamination in soils from NCBC and EAFB is 300 ppb. The average concentration in these soils ranges from 20-30 ppb. Based on these data we anticipate that the drummed waste will contain substantially lower concentrations of 2,3,7,8 TCDD. The soil is also contaminated with varying concentrations of 2,4,D and 2,4,5T, ID Nos. D016 and D077, respectively.

d. Quantity of Waste: The first phase of soil sampling at NCBC resulted in the generation of 27 drums of contaminated clothing. The subsurface sampling scheduled for NCBC in early May will generate another 22 drums. Similar activities at EAFB are anticipated to generate 22 drums of contaminated clothing. The follow on phase of the project, which involves testing of soil decontamination technologies, scheduled for Jun 85, will generate approximately 54 drums of contaminated clothing. Currently, no technology demonstrations are scheduled for Eglin AFB FL. One of the technologies scheduled for demonstration at NCBC will produce 75 gallons of dioxin-contaminated solvent. The solvent, Solitrol®, is a petroleum product manufactured by Phillips. The solvent has a flashpoint of 185°F, pH 7, and a copper strip corrosion of 1.0. It is anticipated that the dioxin contamination in the solvent will be less than 100 ppb. A total of 127 drums are scheduled for disposal. The waste to be disposed consists of 125 drums of contaminated chemical protective equipment and two drums of contaminated solvents.

e. All waste will be packaged, labeled, and transported in accordance with existing EPA, DOT, and state regulations. Wastes will be disposed by incineration at Rollins Environmental Services, Inc., Deer Park TX, EPA ID No. TXD0551141378.

f. Status of Waste: The 27 fiber drums of contaminated wastes are stored in a open-sided metal storage shed at NCBC. The shed has a concrete floor. It is surrounded by a 6 foot high chain link fence topped with barbed wire. The drums are stacked one high on wood pallets and covered with 6-mil plastic sheeting. This storage facility is located inside the contaminated area, which is surrounded by a fence and posted as a restricted area. Waste presently generated will be stored in a similar manner until pickup for transportation to Rollins Environmental Services, Inc., which is scheduled for the last week of Jun 85.

3. Your time and effort for consideration of this approval request is appreciated. If questions should arise, please contact Capt Terry Stoddart, Headquarters Air Force Engineering and Services Center, Engineering and Services Laboratory (HQ AFESC/RDV), Tyndall AFB FL 32403-6001; (904) 283-2942.

James R. Van Orman

JAMES R. VAN ORMAN
Deputy Director of
Engineering & Services Laboratory

cc: EG&C Idaho (Mr. Williams)
U.S. EPA, Region 4
Mr. DesRosier, EPA/ORD
Mr. Kleveno, EPA/HRSD
Mr. Cummins, EPA/OSWER
325CES/DEEV
AD/DEV
NCBC/Code 470

Int cc AFESC/DEV

WH-562B/H. Fribush/ht/S242K/475-6726/05-23-85/02/ht/26

MAY 31 1985

Mr. James R. Van Orman
Deputy Director of
Engineering & Services Laboratory
Department of the Air Force
Headquarters Air Force Engineering and Services Center
Tyndall Air Force Base, FL 32403

Dear Mr. Van Orman:

We have reviewed your letter of April 25, 1985, informing the Environmental Protection Agency (EPA) of your intent to dispose of waste materials contaminated with 2,3,7,8-tetrachlorodibenzo-p-dioxin (2,3,7,8-TCDD). We understand that you have about 125 drums of 2,3,7,8-TCDD-contaminated clothing and two drums of 2,3,7,8-TCDD-contaminated solvent. We also understand that you wish to dispose of this waste by incineration at Rollins Environmental Services, Deer Park, Texas.

The Agency's Dioxin Disposal Advisory Group (DDAG) has no objections to your planned disposal. We recommend that the incinerator be operated under the conditions that have demonstrated a destruction and removal efficiency (DRE) of 99.9999 percent for PCBs.

If you are unable to proceed with the planned disposal or if you choose an alternative method, please be advised that you are required to submit a new notification prior to disposing of 2,3,7,8-TCDD-contaminated waste materials. It should be noted that, after July 15, 1985, the effective date of the RCRA listing regulation (50 FR 1978-2006; January 14, 1985), which designates certain 2,3,7,8-TCDD-contaminated wastes as hazardous, you will be subject to the provisions of that rule. If you have any questions, please feel free to contact Dr. Howard Fribush, Office of Solid Waste, on (202) 475-6726.

Sincerely,

Jack W. McGraw
Jack W. McGraw
Acting Assistant Administrator

APPENDIX C

PUBLIC NOTIFICATION AND LOCAL NEWS ARTICLES ON TECHNOLOGY, RESEARCH, AND TEST EVALUATION PROGRAM AT NCBC

	<u>Page</u>
Exhibit 1 Public notification of availability of TOSCA document, "Environmental Restoration Technologies: Research Test and Evaluation"	15
Exhibit 2 News article: "Permits for Soil Tests Not Needed"	16
Exhibit 3 News article: "Air Force's Dioxin Tests Won't Require State Permits"	17
Exhibit 4 News article: "Workers Begin Decontaminating Dioxin-Tainted Soil at Seabee"	18

The documents contained in this appendix were published according to their own internal style, which deviates from ESL format. They have, therefore, been published without editing.

PUBLIC NOTIFICATION

Notice is hereby given of the public availability of a Toxic Substance Control Act (TOSCA) document titled "Environmental Restoration Technologies: Research Test and Evaluation" covering work to be conducted by the United States Air Force, at the Naval Construction Battalions Center, Gulfport, Mississippi. The document, available for review at the Gulfport-Harrison County Library, 21st Avenue, Gulfport, Mississippi, covers the scope, procedures, background and goals of research to be conducted by the Engineering and Services Laboratory, Air Force Engineering and Services Center, Tyndall AFB, Florida. The research is aimed at discovering the most efficient, cost-effective method(s) of removing environmental contaminants from soil. For questions beyond the scope of this document, please contact the Directorate of Public Affairs, Air Force Engineering and Services Center, Tyndall AFB, Florida 32403, Telephone: (904) 223-4076, V-76,adv.21.41.

Gulfport
The Daily Herald
FRI. May 24, 1985

Permits for soil tests not needed

By TOM CHARLIER
STAFF WRITER

The U.S. Air Force will not need Mississippi environmental permits to carry out testing next week on dioxin-contaminated soil at the Gulfport Seabee Center, state officials said.

The Pollution Control Permit Board, which was briefed Tuesday on work to be done at the base, will not require the Air Force, or its two contractors in the work, to undergo the normal permitting procedure, said Jack McMillan, who heads the Bureau of Pollution Control's solid-waste section.

The two companies selected to do the testing — J.M. Huber Co. of Atlanta, and the IT Corp. of Washington, D.C. — have begun delivering equipment to the base in preparation for the work, which is scheduled to take place June 3. The contractors will test experimental methods involving the use of heat and chemicals to remove dioxin from soil.

"Right now, we don't see any reason for issuing a permit, because it's just such a minute amount (of dioxin) they'll be dealing with," McMillan said.

The state, however, will require permits before any full-scale cleanup effort begins at the site, he added.

Sgt. Jim Denny, a spokesman for the Engineering and Services Laboratory at Tyndall Air Force Base, Fla., said the Air Force has provided the Bureau of Pollution Control with complete details of the work, which he said will not

See AGENT, Page A-2

Agent

Continued from Page A-1
pose any environmental threat.
"Everything we're going to be doing is perfectly OK with them," he said.

The soil to be tested is on a sealed-off 12-acre portion of the base where thousands of drums of Agent Orange, a herbicide used to defoliate jungles during the Vietnam War, were stored from 1966 to 1971. The herbicide

contained dioxin, a contaminant produced during its manufacture, which remains in soil at the site as a result of leaks in the drums.

Dioxin has been shown to be extremely toxic in laboratory studies, with doses as little as 5 parts per trillion producing cancerous tumors in test animals, according to some researchers. But the substance's effects on humans are not fully understood.

In soil samples taken at the Seabee Center, dioxin has been detected in concentrations of up to 200 to 300 parts per billion. According to the Centers for Dis-

ease Control in Atlanta, a concentration of 1 part per billion in soil is sufficient to warrant concern.

The testing is part of a \$1.7-million research and development program from which the Air Force will devise a plan for the cleanup of three dioxin-contaminated sites — the Seabee Center, Eglin Air Force Base, Fla., and Johnston Island, located west of Hawaii in the Pacific Ocean.

The cleanup, designed to make the sites suitable for normal use, probably will not begin until late this year or early next year, Denny said.

1-7-74
5-2-2
5/29/8

Daily Herald 5/29/85

Air Force's dioxin tests won't require state permits

By TOM CHARLIER
Staff Writer

The U.S. Air Force will not need Mississippi environmental permits to carry out testing next week on dioxin-contaminated soil at the Gulfport Seabee Center, state officials said.

The Pollution Control Permit Board, which was briefed Tuesday on work to be done at the base, will not require the Air Force, or its two contractors in the work, to undergo the normal permitting procedure, said Jack McMillan, who heads the Bureau of Pollution Control's solid-waste section.

The two companies selected to do the testing — J.M. Huber Co. of Atlanta, and the IT Corp. of Washington, D.C. — have begun delivering equipment to the base in preparation for the work, which is scheduled to take place June 3. The contractors will test experimental methods involving the use of heat and chemicals to remove dioxin from soil.

"Right now, we don't see any reason for issuing a permit, because it's just such a minute amount (of dioxin) they'll be dealing with," McMillan said.

The state, however, will require permits before any full scale cleanup effort begins.

Sgt. Jim Denny, a spokesman for the Engineering and Service Laboratory at Tyndall Air Force Base, Fla., said the Air Force has provided the Bureau of Pollution Control with complete details of the work.

The soil to be tested is on a sealed-off 12-acre portion of the base where thousands of drums of Agent Orange, a herbicide used to defoliate jungles during the Vietnam War, were stored from 1968 to 1977. The herbicide contained dioxin, a contaminant produced during its manufacture, which remains in soil at the site as a result of leaks.

Dioxin has been shown to be extremely toxic in laboratory studies, with doses of as little as 5 parts per trillion producing cancerous tumors in test animals, according to some researchers. But the substance's effects on humans are not fully understood.

In soil samples taken at the Seabee Center, dioxin has been detected in concentrations of up to 200 to 300 parts per billion. According to the Centers for Disease Control in Atlanta, a concentration of 1 part per billion in soil is sufficient to warrant concern.

The Sun 6/6/85

Workers begin decontaminating dioxin-tainted soil at Seabee

By TOM CHARLIER
Staff Writer

Technicians on Wednesday began processing dioxin-tainted soil at the Seabee Center in Gulfport in preparation for the eventual cleanup of a site where the herbicide Agent Orange was stored.

Specially-suited workers from IT Corp. of Knoxville, Tenn., were scheduled late last night to begin treating soil by an untested device designed to separate and destroy dioxin through the use of heat. The work had been rescheduled from afternoon to nighttime because of the heat.

Later this month, crews from another firm, J.M. Huber Co. of Berger, Texas, are slated to demonstrate an experimental process using a device known as an advanced electrical reactor. That process destroys dioxin with extremely high temperatures.

Both firms are under contract with the U.S. Air Force to process a total of 1,200 pounds of contaminated soil each year. The work is part of a research effort directed by the Air Force, the U.S. Environmental Protection Agency and the U.S. Department of Energy to identify a "useful technology" to treat contaminated soil at three military installations — the Gulfport base, Eglin Air Force Base, Fla., and Johnston Island, in the Western Pacific Ocean.

With the tests, "we'll be able to determine whether or not it will be economically feasible to clean up the site," Air Force Maj. Jim Heaburg said.

It now costs between \$200 and \$1,000 a cubic yard to dispose of contaminated soil at high-tech incinerators throughout the country.

Decontaminating the soil may offer a less-expensive alternative, the Air Force officials said.

IT Corp. workers began work at Johnston Island, still unsure about the exact amount of dioxin in the soil, while Heaburg said an estimate for the cleanup is \$10 million.

Approximately 100 of the 200 million gallons of the herbicide were stored at the research effort — which includes soil sampling and other monitoring already done at the three bases — will be spent in Gulfport. The higher costs are attributed to the problems posed by the unique soil conditions there, officials said.

"We're picking our money against the most difficult problem," said Wayne R. Mathis, an EPA engineer.

Heaburg said the spraying of the storage site is composed of a mixture of asphalt, pea gravel and crushed shell.

Agent Orange, used to defoliate jungles during the Vietnam War, was stored at a 12-acre site on the Seabee Center between 1965 and 1977. The more than 600,000 gallons kept at the base in later years were among the 2.4 million gallons of the herbicide destroyed in a waste-burning site in the Pacific.

Dioxin, a byproduct of the manufacture of Agent Orange, has been shown to be extremely toxic in tests on laboratory animals. Soil samples at the former storage area have revealed dioxin concentrations of as high as 200 parts per billion — well above widely established safe levels.

The storage area is sealed off, and state and federal officials contend no significant contamination has been found off the site.

The testing at the Seabee Center must be completed by July 15. EPA and the Mississippi Bureau of Pollution Control have waived the usual hazardous-waste permit requirements for the testing until that date.

THE SUN 6-6-85

APPENDIX D

PROPERTIES OF SOLVENT USED IN UV PHOTOLYSIS TESTING

The documents contained in this appendix were published according to their own internal style, which deviates from ESL format. They have, therefore, been published without editing.

APPENDIX D. PROPERTIES OF SOLVENT USED IN UV PHOTOLYSIS TESTING

<u>Property</u>	<u>Soltrol 170^a value</u>
Distillation range	
Initial boiling point, °F	424
10%	433
50%	437
90%	448
Dry pt	462
API gravity, 60°F	50.5
Specific gravity, 60/60°F	0.778
Density, lb/gal	6.48
Flash pt, °F	185
Kinematic viscosity	
CS at 32°F	6.65
CS at 100°F	2.47
Purity, %	99 + % iso
Automatic content - total	nil (est.)
Sulfur	0.0008
Bv. No.	1.5
Odor	None
Color, Saybolt	+30
Acidity, Distill Redistribution	Neutral
Cu corrosion	1
Vn sulfonated residue	98.5
Doctor test	Negative
Kauri butanol	24
Aniline point	192.6

a. A product of Phillips Petroleum Co.

APPENDIX E

ITC HEALTH AND SAFETY PLAN FOR SITE DEMONSTRATION OF THE THERMAL DESORPTION/UV PHOTOLYSIS PROCESS

The documents contained in this appendix were published according to their own internal style, which deviates from ESL format. They have, therefore, been published without editing.



HEALTH AND SAFETY PLAN

FOR

EG&G/AIR FORCE SITE DEMONSTRATION OF
THE THERMAL DESORPTION/UV PHOTOLYSIS PROCESS

by

IT Corporation
Knoxville, Tennessee

Revised May 16, 1985

Reviewed and approved by

A handwritten signature, likely 'R. Helsel', is written over a horizontal line.

ITC Project Manager

A handwritten signature, likely 'Harry A. Pullum', is written over a horizontal line.

ITC Health and Safety Officer



Memorandum

To: E. Alperin, R. Fox, H. Pullum, H. Williams Date: May 21, 1985

From: R. Helsel *ruh*

Subject: ADDENDUM TO HEALTH & SAFETY PLAN FOR SITE DEMO AT NCBC

The enclosed Attachments (2-10) to the previously distributed text of the subject plan should be stapled to the text.

jjh

Attachment

IT Corporation
Health and Safety Plan
for
EG&G/Air Force Site Restoration Demonstration

1. Purpose

This health and safety plan prescribes workplace procedures which must be followed in order to protect the employees who are working with 2,3,7,8 tetrachloridibenzodioxin and other hazardous materials which may be present at the Naval Construction Battallion Center and Johnston Island. The requirements listed may change as work progresses due to changing conditions, but no changes will be made without prior approval by the ITC Regional Manager, Health and Safety Division. The program outlined is for both ITC employees and ITC's subcontractor personnel.

2. Discussion

2,3,7,8 tetrachloridibenzodioxin can be found as a contaminant of chemicals such as 2,4,5-trichlorophenoxyacetic acid (a herbicide), 2,4,5-trichlorophenol (used in the production of pesticides or herbicides), or hexachlorophene (a skin cleaner). It can also be a breakdown product resulting from the exposure of chlorinated hydrocarbons, such as PCBs, to intense heat. Like other organochlorine compounds, such as DDT and PCBs, dioxin is persistent in the environment and accumulates in living tissues.

3. Program Structure

The Project Occupational Safety and Health Officer will be responsible for the coordination of this plan. He, or one of his representatives, will be on site for the principal portion of the job. Liaison with officers or representatives of USAF or EG&G on matters relating to safety and health will be handled by the health and safety representative in conjunction with the ITC Project Leader.

The Project Leader is responsible for field implementations of the health and safety plan. This includes communicating the specific requirements to all personnel, conducting audits, and consulting with the health and safety representative regarding appropriate changes in safety and health requirements.

All on-site personnel are responsible for understanding and complying with the requirements of this plan, and must sign a statement that they have read, understood, and will abide by the plan (Attachment 1). Failure to comply with this plan will result in disciplinary action, which could lead to termination.

4. Worker Health Protection

All employees on this job shall have completed a preemployment medical examination and/or a periodic/update physical examination within two months of assignment. The follow-up examination must be repeated within one month of project completion. The medical examination must be reviewed by a physician specializing in occupational medicine and a report must be submitted to ITC which medically approves the employee for work with hazardous materials. Examples of a "medical examination report" and a "physical activity restriction" report are attached, Attachments 2 and 3, respectively.

The preemployment examinations must include at least the information included on the IT Preemployment Medical Examination form, Attachment 4. The periodic/update physical examination must include at least the information included on the Periodic/Update Physical Examination form, Attachment 5.

In the event of any injury or accident a "Supervisor Employee Injury Report" (Attachment 6) shall be completed by a supervisor as soon as practical after the event. This shall be reviewed by the senior manager and the health and safety coordinator on site. If an employee has been absent due to a work-related injury or illness, a "Return to Work Authorization Following Medical Absence" form (Attachment 7) must be completed prior to returning to the job assignment. This form shall have a medical release from a physician attached. If appropriate, a "physical activity restriction" report shall be included.

5. Procedures

A. Permissible Exposure Limits

1. 2,3,7,8 TCDD

Review of 2,3,7,8 TCDD risk assessments (performed by regulatory agencies and related to PCB Transformer Fires at Binghamton, NY and One Market Plaza, CA) indicates that a limit of 18 picograms per cubic meter (pg/m^3) is appropriate. Therefore, until further research is done, the limit will be 18 pg/m^3 for 2,3,7,8 TCDD.

2. Herbicide Orange

2,4-D -10 mg/m^3 air

2,4,5-T -10 mg/m^3 air

3. Other Materials

The permissible exposure limits for other materials are:

o Soltrol 170 - 14 parts per million parts of air

o Isopropyl alcohol - 400 parts per million parts of air

4. Engineering controls and operational procedures shall be used to maintain levels of hazardous materials within the limits set forth above. This may be accomplished by the use of dust-suppression techniques with 2,3,7,8 TCDD and closed systems and ventilation controls. These controls will be coupled with protective equipment of the appropriate level for exposures encountered.

B. Employee Training and Information

All employees who work on site shall have completed a formal training program which shall include, as a minimum, the following:

1. Basic Safety Training - This course stresses fundamentals such as the cause and prevention of slip, trip, and fall hazards, safe drum handling and opening, safe lifting techniques, heat stress illnesses and their prevention, etc.
2. Hazards and Protection - This course deals with the identification, recognition, and safe work procedures involving toxic materials. Understanding the use and limitations of applicable protective clothing, respirators, and decontamination procedures is an important part of this course. Respirator fit testing is given to each attendee.
3. First Aid and Cardiopulmonary Resuscitation - At least two employees at the site will have completed these standard Red Cross First Aid and CPR courses.
4. 2,3,7,8 TCDD Hazard Awareness - This course discusses the specific nature of the operations which could result in exposure to 2,3,7,8 TCDD, a description of the medical surveillance program, the specific protective clothing and respirators to be worn on the job, the adverse health effects associated with exposure to 2,3,7,8 TCDD, the routes of exposure (skin penetration, inhalation, ingestion), and the safe work procedures associated with the employee's job assignment.
5. Other Hazard Awareness - Information will be given concerning other materials to which the employee may be exposed. Information will include routes of exposure, toxic effects, appropriate protective equipment, medical surveillance, and the specific nature of the job which could result in exposure.

6. The following training sessions and informational materials will be provided on site:
 - a. Tailgate Safety Meeting - A tailgate safety meeting will be conducted at the beginning of each shift or whenever new employees arrive at the job site once the job commences. This meeting discusses the health and safety considerations for that day's activities, and outlines protective equipment necessary. Attachment 8 shows a copy of a Tailgate Safety Meeting form.
 - b. Material Safety Data Sheets (MSDS) - Completed MSDS for the toxic materials present at the site shall be posted at the job site. An example of an MSDS for 2,3,7,8 TCDD is attached (Attachment 9).

C. Regulated Areas

1. Delineated Zones - The site shall be divided into three well-delineated zones, as follows:
 - a. Contaminated Zone - This zone includes the actual areas of contamination. This zone has the highest inhalation exposure potential and/or presents a high probability of skin contact with cutaneous- or percutaneous-affecting chemicals.
 - b. Contamination Reduction Zone - This zone includes the areas immediately surrounding the Contamination Zone. This zone has the next highest inhalation hazard, but does not have a high probability of skin contact with cutaneous- or percutaneous-affecting chemicals.
 - c. Clean Zone - This zone covers all areas outside the contamination-reduction zone. Adverse exposure to chemicals is unlikely.
2. Access - Access to 2,3,7,8 TCDD-contamination work areas (contaminated and contamination reduction zones) shall be regulated and limited to authorized persons. A daily roster shall be kept of all persons entering such areas.
3. Posting - Warning signs shall be affixed in readily visible locations in or near 2,3,7,8 TCDD (Dioxin) work areas. The information contained thereon shall be arranged as in the following example:

CAUTION

DIOXIN CONTAMINATED AREA

AUTHORIZED PERSONNEL ONLY

D. Employee Decontamination

1. A decontamination unit shall be positioned at the entrance to the contamination-reduction zone with a step-off area just inside the contamination-reduction zone. All persons entering the contamination zones shall pass through the decontamination unit to change from street clothing to protective clothing. All persons leaving the contamination zones shall pass through the unit to remove the protective clothing and shower before donning their street clothing. An example of a decontamination unit is shown as Attachment 10.
2. All employees shall be required to shower in the decontamination unit at the end of the work shift.
3. The decontamination unit shall have clean change rooms equipped with separate storage facilities which prevent cross-contamination for protective clothing and equipment and street clothing.
4. An area shall be designated as the break area. Employees shall wash their faces and hands before eating, drinking or smoking.
5. An eyewash and shower shall be provided in the immediate work area for employees who may come into contact with contaminated materials.
6. If there is a rip or tear in an employee's protective clothing and if there was contact with potentially contaminated material, the employee shall return to the decontamination unit immediately, wash the affected skin area, and report the incident to the on-site health and safety officer. The officer will then determine and authorize, if appropriate, the employee to don new protective clothing and return to the work area.
7. The decontamination procedure is outlined in Appendix A.

E. Respiratory Protection

The respiratory protection to be used is outlined as follows:

1. For initial set-up of work activities, such as assembling the thermal desorber, a half-face air purifying respirator, with organic vapor/highly toxic particulate (HEPA) cartridges, shall be worn. Respirators with higher protective factors, such as a full-face, air-purifying respirator, powered air purifying respirators (PAPR), or air supplied respirators, may also be worn.
2. All operations involving contaminated soil handling, including the collection of soil, crushing of soil, placing the soil in the storage drums, and transferring the soil to the thermal desorber will require the use of air-supplied respirators.
3. For operation of the thermal desorption or UV photolysis systems, full-face air-purifying respirators or PAPR will be required. This assumes no soil-handling activity in the area.
4. An industrial hygienist will be on site during initial start-up activities. If monitoring results indicate potential exposures which are higher, or lower, than expected, or if the industrial hygienist observes operations which indicate that respiratory protection needs to be changed, then protection will be upgraded, or downgraded, as appropriate.
5. Cartridges for air-purifying respirators will be replaced at the end of each shift. The PAPR will be checked with the flow meter before each day's use to determine if filters need to be changed.
6. Only employees who have had pre-issue qualitative fit tests, and annual fit tests thereafter, shall be allowed to work in atmospheres where respirators are required.
7. If an employee has demonstrated difficulty in breathing during the fitting test or during use, he or she shall have a physical examination to determine whether the employee can wear a respirator while performing the required duty.

8. No employee shall be assigned to tasks requiring the use of respirators if, based on the most recent examination, a physician determines that the employee will be unable to function normally wearing a respirator, or that the health or safety of the employee or other employees will be impaired by use of a respirator.
9. The employee shall be permitted to change cartridges whenever an increase in breathing resistance is detected.

F. Protective Clothing

1. The protective clothing to be worn during initial set-up will be:
 - a. Polyethylene coated tyvek coveralls with hoods
 - b. Nitrile gloves
 - c. Polyvinyl chloride (PVC) boots
 - d. Hard hat
 - e. Eye protection
2. The protective clothing to be worn during dirt-loading activities, such as loading the dirt into drums, will be:
 - a. Medium to heavy weight PVC coveralls with hood
 - b. PVC or leather outer gloves with nitrile and surgical undergloves
 - c. PVC boots
 - d. Hard hat
3. The protective clothing to be worn during operation of the thermal desorber/UV photolysis process will be:
 - a. Polyethylene coated tyvek coveralls with hoods
 - b. White tyvek or cotton coveralls as an undergarment
 - c. Viton gloves with surgical undergloves for the thermal desorber/UV photolysis process. Leather outer gloves may be worn to protect the viton gloves where appropriate. These leather gloves can be used, but must be left on site and disposed of at the end of the job. High temperature gloves must be worn during handling of hot treated soil containers or when in contact with the desorber furnace. Leather gloves should be used as outer gloves when working near the hot desorber.
 - d. PVC boots
 - e. Hard hat

4. The protective clothing sleeves will be taped to the gloves, the legs taped to the boots, and the hood to the respirator (if appropriate). All openings shall be sealed.
5. The protective coveralls shall be removed in the inside out fashion.

G. Monitoring

Industrial hygiene monitoring will be conducted at the beginning of the job and periodically thereafter to determine the employee's exposures to 2,3,7,8 TCDD and other materials. The results of the monitoring will dictate the selection of the personal protective equipment.

The industrial hygiene dioxin samples will be collected by using a personal pump sampling air at a rate of 3.0 liters per minute. The dioxin will be collected on a glass fiber filter in a three-piece cassette, operated in the open-face mode. A minimum sampling time of 420 minutes (1260 liters) will be necessary. Appropriate analytical methods can detect a level of 0.5 nanograms per sample; therefore, the lower detection limit will be 0.4 nanograms per cubic meter for 1260 liters of air collected. Note that this level is above the PEL established, but, since full-face, air-purifying respirators are minimal protection required when working with 2,3,7,8 TCDD, this level is below the exposure level when applying the respiratory protection factor. Any measure concentration above 0.5 mg/m^3 requires the use of air-supplied respirators.

Since TCDD has a low vapor pressure, very little gaseous phase TCDD is expected to be present. Therefore, sorbent tube samples will be taken only during the early phases of the job. If no TCDD is detected, this sampling method will be discontinued. To obtain these samples, XAD-2 sorbent tubes will be used as a back-up to the filters described previously. Therefore, the same volume of air will be sampled and the same detection limits will be used. Also, the analytical procedures will be the same.

The dioxin samples taken will be prepared for analysis by extraction of the filters (or sorbent tubes) with subsequent cleanup by liquid chromatography. Analysis will be high-resolution gas chromatography/low-resolution mass spectrometry operating in a selected ion mode. Turnaround time for analyses will be no greater than 48 hours.

The NIOSH Sampling and Analytical Methods will be followed when evaluating other chemical hazards (outlined in Section 5.A.2.) at the site. The amount of sampling activity will vary according to the location of work crews. The Regional Manager for Health and Safety will coordinate the sampling for these chemicals.

The quality assurance/quality control will be as follows:

- o The personal sampling pumps will be calibrated before and after each use with the standard bubble meter. All volumes will be adjusted to standard temperature and pressure, if necessary.
- o A chain-of-custody form will be kept for each sample. The form will be signed by the person taking the sample, the person(s) transferring the sample to the laboratory, and by the laboratory receiving the sample.
- o There will be one blank filter and one blank spike with 0.5-2.5 nanograms of dioxin included with each set of dioxin samples sent to the laboratory. The blanks and spikes will be labeled in such a way as to be indistinguishable from the field sample. The blanks and spikes will be utilized to determine precision and accuracy of the laboratory.

H. General Work Practices

1. At least one copy of this procedure shall be available at each 2,3,7,8 TCDD job work site.
2. Contaminated protective equipment, such as respirators, hoses, boots, etc., shall not be removed from the regulated area until it has been cleaned, or properly packaged and labeled.
3. Legible and understandable precautionary labels shall be affixed prominently to containers of contaminated scrap, waste, debris, and clothing.
4. Removal of dioxin-contaminated soil from protective clothing or equipment by blowing, shaking, or any other means which disperses contaminated material into the air is prohibited.
5. No food or beverages shall be present or consumed in the regulated area.
6. No tobacco products shall be present or used, and cosmetics shall not be applied in the regulated area.
7. 2,3,7,8 TCDD-contaminated materials shall be stored in tightly closed containers in well ventilated areas.
8. Containers shall be moved only with the proper equipment and shall be secured to prevent dropping or loss of control during transport.

9. Emergency equipment shall be located outside storage areas in readily accessible locations which will remain minimally contaminated with 2,3,7,8 TCDD.
10. All areas that have been determined as uncontaminated inside the regulated area will be clearly marked as such. No personnel, equipment, etc. shall be in these areas until they have been decontaminated.
11. The ultraviolet process shall be controlled as follows:
 - a. Shielding of the lamp is necessary to prevent burns to the skin and eyes. The shields must be fireproof, opaque, and not degenerate under the UV.
 - b. There shall be no direct light visible to the operators.
 - c. The exposure to reflected light shall be avoided. This may be accomplished by coating reflective surfaces with black UV-adsorbing paint.
 - d. Protective lenses on the respirators shall be utilized if shielding is not complete.
 - e. Since the UV light operates at a very high temperature, exposed hot surfaces shall have guards.
 - f. Signs shall be affixed in the UV area warning of UV radiation and potential hot surfaces.
12. For operation of rotating equipment, such as grinders, rotary desorber, and screw feeder, appropriate guards must be in place. Standard lock-out/red tag procedures must be followed for any maintenance or inspection.

I. Heat Stress

The heat stress of employees on site will be monitored by the Wet Bulb Globe Temperature Index (WBGT) technique. This method will require the use of a heat stress monitoring device, such as the Wibget Heat Stress Monitor (Renter Stokes).

The WBGT shall be compared to the Threshold Limit Values (TLV) outlined in the ACGIH TLV's Manual, and a work-rest regimen established, as necessary, according to the WBGT obtained. Note that 3°C must be subtracted from the TLVs for heat stress listed to compensate for the wearing of impermeable protective clothing.

One or more of the following control measures can be used to help control heat stress:

1. Provision of adequate liquids to replace lost body fluids. Employees must replace water and salt lost from sweating. Employees must be encouraged to drink more than the amount required to satisfy thirst. Thirst satisfaction is not an accurate indicator of adequate salt and fluid replacement.
2. Replacement fluids can be a 0.1% salt water solution, commercial mixes such as Gatorade or Quick Kick, or a combination of these with fresh water. Employees should be encouraged to salt their foods more heavily.
3. Establishment of a work regimen that will provide adequate rest periods for cooling down. This may require additional shifts of workers.
4. Cooling devices such as vortex tubes or cooling vests can be worn beneath protective garments.
5. All breaks are to be taken in a cool rest area (77°F is best).
6. Employees shall remove impermeable protective garments during rest periods.
7. Employees shall not be assigned other tasks during rest periods.
8. All employees shall be informed of the importance of adequate rest, acclimation, and proper diet in the prevention of heat stress.
9. Since the UV process can generate radiant heat, employees should avoid this area as much as practical.

6. Emergency Actions

In the event of an emergency, the following procedures will be followed:

- A. All employees on site will become familiar with the emergency procedures of the facility. These procedures will be followed in case of an incident.
- B. Facilities will be located in the work area to enable employees to immediately wash any affected skin area or the eyes if they come into contact with contaminated materials.

- C. If an injury/illness is the result of a chemical exposure, information about the specific chemical will be given to the attending physician. Data on the chemicals involved will be distributed to the nearest medical facilities at both sites. At MCBC, a community hospital is located immediately outside the base, and at JI, a dispensary with two doctors is available.
- D. At least two fire extinguishers shall be located in the thermal desorber/UV photolysis area. These extinguishers shall have a minimal rating of 10B:C.
- E. Emergency shutdown procedures for the process equipment will be included in the Standard Process Operating Procedures and will be posted at the equipment. All ITC operational personnel will be trained in their use.

Attachment 1

PERSONNEL DECONTAMINATION

I. Decontamination and Break Area 1 Set-Up

The decontamination area, approximately an 8' X 20' area, and break area 1, approximately a 10' X 14' area, will be completely covered by a double layer of polyethylene sheeting. The edges of the poly sheeting will be secured by appropriate means (such as blocks, sand bags, timbers, ect.).

II. Sequence for Total Decontamination

Once an employee is ready to exit the site, the following procedures will be followed:

A. Station 1 - Wash

A large wash tub (approximately 3' in diameter) will be filled with a detergent (such as trisodium phosphate)/water solution. The employee will step into this tub and a scrub brush will be available to remove gross decontamination from the boots, protective suit, and gloves. Artificial turf will be placed in the bottom of the tub to assist in cleaning the soles of the boots.

B. Station 2 - Rinse

A large wash tub will be filled with water. The employee will step directly from the wash tub to this tub for total rinse.

C. Station 3 - Tape and Outer Glove Removal

A trash container with heavy duty trash bags will be available to deposit tape and outer gloves. Note: Viton gloves will be desposited in a separate smaller bucket made available.

D. Station 4 - Suit and Boot Removal

A trash container with heavy duty trash bags will be available to deposit disposable suits. A rack will be available to hang reusable protective suits. Boots will be placed next to the trash container. Note: Suits are to be removed in an inside out fashion.

E. Station 5 - Respirator Removal

A rack will be available to hang the respirators on.

F. Station 6 - Inner Glove and Undergarment Removal

A trash container with heavy duty trash bags will be available to deposit inner gloves and disposable undergarments.

G. Decontamination - Trailer

All employee will thoroughly shower in the doncontamination trailer before leaving the site. Street clothes will be donned in the clean side of the trailer.

III. Break Procedures

A. Lunch

All employees will do total decontamination as described in Section II prior to lunch. The lunch break will be taken at Break Area 2.

B. Breaks

For break purposes, the following procedures will be followed:

1. Follow steps A-C of the total decontamination procedure.
2. At Station 4, if disposable yellow tyvek suits are worn, remove boots and suit (for disposal). Don white tyvek booties to wear to break area 1. If PVC suits are worn, leave boots and suit on and open the suit to the waist.
3. At Station 5, remove the respirator. The respirator will be identified and you will don it after break. Alcohol wipe pads will be available to clean the respirator.
4. At Station 6, remove inner gloves
5. Wash face and hands in the break area prior to drinking or smoking. Food is not allowed in the break area.
6. Protective clothing will be available in the break area to don prior to reentry into the contaminated zone. The boots and respirators left at Stations 4 and 6 will be donned. Clean the respirator with an alcohol wipe prior to putting it on.



CORPORATION

MEDICAL EXAMINATION REPORT

Date _____

To: _____

Company: _____

Location: _____

_____ has received the appropriate:

- ☐ preemployment examination
- ☐ baseline examination
- ☐ periodic examination
- ☐ DOT examination
- ☐ Other _____

and has been found to be:

- ☐ acceptable, without restriction
- ☐ acceptable, subject to the attached
"Physical Activity Restriction"
- ☐ not acceptable

as a:


- ☐ casual employee
- ☐ permanent employee

Occupational Safety & Health

* For "Physical Activity Restriction":

1. Have employee read and sign restriction.
2. Provide manager signature
3. Retain a copy
4. Return to the Occupational Safety & Health Department

Distribution: Occupational Safety & Health
 Regional Administration
 Corporate Personnel
 Manager

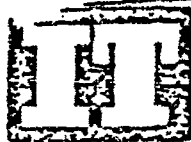

IT CORPORATION

Physical Activity Restriction

EMPLOYEE'S NAME _____

DATE _____

DIVISION _____

LOCATION _____

DATE OF INJURY/EXAM _____

JOB TITLE _____

Employee is subject to the following physical activity restriction(s):

☐ Acceptable for work under restriction stated above

By _____

☐ Not acceptable for work under restriction stated above

Date _____

Duration: ☐ Permanent

Employee _____

Date _____

☐ Temporary

Manager _____

Date _____

From: _____

Health & Safety _____

Date _____

To: _____

Distribution: Occupational Safety & Health
Regional Administration
Manager

OCCUPATIONAL HISTORY

LIST KINDS OF WORK DONE

WHAT MACHINES AND MATERIALS HAVE YOU HANDLED?

JOB, #2 YEARS

ALL OCCUPATIONAL ILLNESS & INJURIES

NATURE OF ILLNESS OR INJURIES

NAME OF COMPANY & CITY

DATE

MILITARY SERVICE - CONNECTED DISABILITIES

NATURE OF DISABILITY

1

AMT. REC. PER MO.

BRANCH OF SERVICE

SERIAL NO.

CLASH NO.

V.A. REGIONAL OFFICE

HOSPITALIZATION

WHEN

WHERE

ALL HOSPITALIZATIONS - ACCIDENTS - SICKNESS - (EXCEPT OCCUPATIONAL)

NATURE

DATE

NATURE

DATE

ALL PHYSICAL DEFECTS OR ABNORMALITIES AT THIS TIME

PARTS OF BODY

EXTENT OF DEFECT

I HEREBY CERTIFY THAT TO THE BEST OF MY KNOWLEDGE THE FOREGOING ANSWERS ARE COMPLETE AND CORRECT AND I UNDERSTAND THAT ANY FALSIFICATION OF THIS RECORD IS CAUSE FOR TERMINATION. I FURTHER UNDERSTAND THAT THIS PHYSICAL EXAMINATION IS CONDUCTED FOR THE EMPLOYER AS A PREREQUISITE TO EMPLOYMENT. I AGREE THAT THIS FORM AND ANY INFORMATION ACQUIRED AS A RESULT OF THIS EXAMINATION WILL BECOME THE PROPERTY OF THE EMPLOYER. I HEREBY GRANT PERMISSION TO OBTAIN RECORDS FROM MY PREVIOUS PHYSICIAN(S) OR HOSPITAL(S) WHERE I HAVE BEEN TREATED. UPON MY TERMINATION OF EMPLOYMENT I AGREE TO PARTICIPATE IN A COMPANY MEDICAL EXAMINATION.

JOB LOCATION

DATE

SIGNATURE

PHYSICIAN'S REVIEW OF THE ABOVE HISTORY

MEDICAL EXAMINATION

HEIGHT _____ WEIGHT _____ RESPIRATORY _____ B.P. _____ PULSE _____ TEMPERATURE _____

1. DISTANT VISION SNELLEN	WITHOUT GLASSES		GLASSES/CONTACTS	
	RIGHT	LEFT	RIGHT	LEFT
	20/	20/	20/	20/

2. NEAR VISION SLOAN	RIGHT	LEFT	RIGHT	LEFT
	20/	20/	20/	20/

	NORMAL		TEST NOT PERFORMED	MEDICAL EXAMINER'S FINDINGS
	YES	NO		
Psychiatric-Neurologic				
General Appearance - Physique				
Head & Neck				
Chest				
Cardiovascular				
Abdomen				
Back				
Hernia - Genitalia				
Arms - Legs				
Skin				
Rectal				
LABORATORY				
Urinalysis				
CBC				
Chemistry Panel				
Audiometry				
Spirometry				
EKG				
Chest x-ray				
Back x-ray				
DOT				
May wear respirator				
May work with carcinogens				

SUMMARY OF EXAMINATION -WORK RESTRICTIONS- RECOMMENDATIONS

EXAMINING PHYSICIAN

NAME (Please Print) _____

PROFESSIONAL DEGREE _____

SIGNATURE _____

DATE _____

PHONE NO. _____

ADDRESS _____

CITY _____

STATE _____



☐ EDUCATION ☐ JOB
☐ ENVIRONMENTAL ☐ HOME
☐ OCCUPATIONAL ☐ SERVICES
☐ PETS & TRAVEL ☐ TRANSPORTATION

☐ BIRTHDAY ☐ PARENTS ☐ TAT
☐ DESIGN MARK ☐ HOBBIES ☐ TOYS
☐ OFFICIAL VALLEY ☐ HOBBIES
☐ LOS ANGELES ☐ TAX BILLS ☐ TRAIL

POPULATION

Attachment 5

UPDATE/PERIODIC PHYSICAL EXAMINATION

DATE

NAME _____ WORK POSITION _____ SEX _____ AGE _____
ADDRESS _____ CITY _____ STATE _____
BIRTH DATE _____ SSN _____ PHONE NO. _____

IT IS IMPORTANT TO BRING TO THE ATTENTION OF THE DOCTOR ANY CHANGES IN YOUR HEALTH STATUS OCCURRING SINCE YOUR LAST HEALTH EXAMINATION. THEREFORE PLEASE CAREFULLY ANSWER THE FOLLOWING QUESTIONS. EXPLAIN ALL ITEMS CHECKED YES.

- | | YES | NO |
|--|-----|----|
| 1. Have you had any injury or illness other than colds? | | |
| 2. Have you been hospitalized for any reason? | | |
| 3. Have you had any surgery (in or out of the hospital)? | | |
| 4. Have you been under the care of a physician or other medical practitioner? | | |
| 5. Have you had any abnormal x-rays or electrocardiograms; any abnormal blood, urine, or laboratory tests? | | |
| 6. Have you been nervous, depressed, or tense or had any emotional trouble? | | |
| 7. Have you had headaches, dizzy spells or black-outs? | | |
| 8. Have you had trouble with your eyes - change in vision, blurring, seeing double, pain or glaucoma? | | |
| 9. Have you had trouble with nose and throat - persistent hoarseness, voice change? | | |
| 10. Have you had trouble with ears - pain, change in hearing; noise exposure? | | |
| 11. Have you had chronic cough; any sputum that was bloody, excessive or colored; any pain on breathing? | | |
| 12. Have you had shortness of breath, difficulty breathing, any swelling of the ankles? | | |
| 13. Have you had any chest pain, or history of heart trouble or high blood pressure? | | |
| 14. Have you had abdominal pain (or distress) or persistent vomiting? | | |
| 15. Have you had any change in bowel habits; any bloody or tarry black stools? | | |
| 16. Have you had trouble starting, stopping, or holding urine, any bloody or very dark urine; any discharge? | | |
| 17. Are you now taking any medication? | | |
| 18. Have you had skin rashes, sores, new or growing lumps, or changing moles? | | |
| 19. Have you gained or lost 10 pounds or more? | | |
| 20. Have you had any pain, swelling or stiffness of back or joints? | | |
| 21. Have you been bleeding or bruising more than at time of last examination? | | |
| 22. Has there been any change in the family medical history, such as appearance of diabetes, heart disease, strokes, blood problems or conditions that you think may be inherited? | | |
| 23. Are you a Diabetic? | | |
| 24. Are you pregnant? | | |
| 25. Have you had a Tetanus Immunization within the last 10 years? | | |
| 26. If you still smoke, how much? _____ How many years have you smoked? _____ | | |
| 27. Present use of alcohol: social _____ moderate _____ heavy _____ | | |
| 28. If you have any medical problems you wish to discuss, please write them in. | | |
- EXPLAIN ITEMS CHECKED YES
- _____
- _____
- _____
- _____

I HEREBY CERTIFY THAT TO THE BEST OF MY KNOWLEDGE THE FOREGOING ANSWERS ARE COMPLETE AND CORRECT AND I UNDERSTAND THAT ANY FALSIFICATION OF THIS RECORD IS CAUSE FOR TERMINATION. I AGREE THAT THIS FORM AND INFORMATION ACQUIRED AS A RESULT OF THIS EXAMINATION WILL BECOME THE PROPERTY OF THE EMPLOYER. I HAVE NO INTENTION TO OBTAIN RECORDS FROM MY PREVIOUS PHYSICIAN(S) OR HOSPITAL(S) WHERE I HAVE BEEN TREATED.



Attachment b

SUPERVISORS EMPLOYEE INJURY REPORT

☐ State Compensation
☐ Federal L & M

Date Received

Date Employer's First Submitted

*This is an official document to be initiated by the Supervisor.
Be thorough and accurate. Answer all questions.*

Injured's Name _____ Sex _____ SS # _____ Birthdate _____

Home Address _____ City _____ Phone _____

Classification _____ Hourly Wage _____ Hire Date _____

IT Division _____ Location _____

Who work was being performed for? _____ Address _____

Exact location of incident _____

Date of Injury _____ Time Shift Began _____ Time Injured _____

Time Reported _____ Did employee leave work? _____ Left When? _____

Date & Time Employee Returned To Work _____

Supervisor/foreman _____ Leadman _____

Nature of Injury _____ Exact Body Part Affected _____

☐ NEAR MISS☐ FIRST AID☐ DOCTOR CASE☐ HOSPITALIZED

Doctor's Name _____ Address _____ City _____

Hospital _____ Address _____ City _____

What was employee doing at time of incident? _____

How did incident occur? _____

Incident witnesses _____ Statements Attached ☐ Yes ☐ NoDid you witness incident? ☐ Yes ☐ No

Why did incident occur? _____

Has corrective action been initiated to prevent recurrence? ☐ Yes ☐ No

Explain _____

Supervisor's Signature

Date Report Prepared

Injured's Signature

Date

MANAGER

What unsafe condition or act caused incident? _____

Your recommendation? _____

Signature

Date


OCCUPATIONAL SAFETY & HEALTH

Concur with action taken? ☐ Yes ☐ No Remarks _____

Signature

Date

Distribution: Insurance
Medical
Safety
Manager

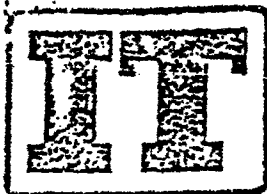

CORPORATION

**RETURN TO WORK AUTHORIZATION
FOLLOWING MEDICAL ABSENCE**

Date

To: _____

Company: _____

Location: _____

_____ has been absent from work due to a:

- ☐ work related illness or injury _____
(Date of injury)
- ☐ nonindustrial illness or injury
- ☐ other _____

and has provided a satisfactory medical release certificate for:

- ☐ - return to work, without restriction
- ☐ return to work subject to the attached
"Physical Activity Restriction"

Occupational Safety and Health

*For "Physical Activity Restriction":

1. Have employee read and sign restriction
2. Provide manager signature
3. Retain a copy
4. Return to the Occupational Safety & Health Department

Distribution: Occupational Safety & Health
Regional Administration
Corporate Personnel
Manager



TAILGATE SAFETY MEETING

Division/Subsidiary _____ Facility _____

Date: _____ Time: _____ Job Number: _____

Customer _____ Address: _____

Specific Location: _____

Type of Work: _____

Chemicals Used: _____

SAFETY TOPICS PRESENTED

Protective Clothing/Equipment: _____

Chemical Hazards: _____

Physical Hazards: _____

Emergency Procedures: _____

Hospital / Clinic: _____ Phone: () _____ Paramedic Phone: () _____

Hospital Address _____

Special Equipment _____

Other _____

ATTENDEES

NAME PRINTEDSIGNATURE

Meeting conducted by: _____

NAME PRINTED

SIGNATURE

SUPERVISOR _____ MANAGER _____

MATERIAL SAFETY DATA SHEET

Required under USDL Safety and Health Regulations for Ship Repairing,
Shipbuilding, and Shipbreaking (29 CFR 1915, 1916, 1917)

SECTION I

MANUFACTURER'S NAME N/A	EMERGENCY TELEPHONE NO. N/A
ADDRESS (Number, Street, City, State, and ZIP Code) N/A	
CHEMICAL NAME AND SYNONYMS Dioxin, 2,3,7,8 tetrachlor-dibenzo-p-dioxin	TRADE NAME AND SYNONYMS 2,3,7,8-TCDD, TCDD, TCDD
CHEMICAL FAMILY Chlorinated hydrocarbon	FORMULA C ₁₂ H ₄ Cl ₄ O ₂

SECTION II - HAZARDOUS INGREDIENTS

PAINTS, PRESERVATIVES, & SOLVENTS	%	TLV (Units)	ALLOYS AND METALLIC COATINGS	%
PIGMENTS			BASE METAL	
CATALYST			ALLOYS	
VEHICLE N/A			METALLIC COATINGS N/A	
SOLVENTS			FILLER METAL PLUS COATING OR CORE FLUX	
ADDITIVES			OTHERS	
OTHERS				
HAZARDOUS MIXTURES OF OTHER LIQUIDS, SOLIDS, OR GASES				%
An impurity in herbicide 2,4,5-T				
CAS Number 1746-01-6				
RTECS HP 3500000				

SECTION III - PHYSICAL DATA

BOILING POINT (°F) @ 1ATM >1292F	Decomposes	SPECIFIC GRAVITY (H ₂ O=1)	N
VAPOR PRESSURE (mm Hg.) @ 77°F	1.7X10 ⁻⁶ mmHg	PERCENT VOLATILE BY VOLUME (%)	Unknown
VAPOR DENSITY (AIR=1)		EVAPORATION RATE	Unknown
SOLUBILITY IN WATER G/100 G water at 20°C	200ppm	Melting point	
APPEARANCE AND ODOR Colorless, crystalline solid, Decomposes when exposed to UV			

SECTION IV - FIRE AND EXPLOSION HAZARD DATA

FLASH POINT (Mills) N/A	FLAMMABLE LIMITS	LEL	
EXTINGUISHING MEDIA Use alcohol foam, CO ₂ , dry chemical, or water fog on surrounding areas		UEL	
SPECIAL FIRE FIGHTING PROCEDURES Wear SCBA and full protective clothing			

FIRE AND EXPLOSION HAZARDS

N/A

Chloracne, kidney/liver damage, skin/eye irritation, fatigue, cough

CNS depression, cancer (lab animals)

EMERGENCY AND FIRST AID PROCEDURES

Wash eyes 15 minutes with copious amounts of water and skin with water and soap. After exposure by inhalation remove to fresh air immediately. Upon ingestion seek medical attention immediately. Seek medical attention after any exposure.

SECTION VI - REACTIVITY DATA

STABILITY	UNSTABLE		CONDITIONS TO AVOID
	STABLE	X	N/A
INCOMPATIBILITY (Materials to avoid)			
Unknown			
HAZARDOUS DECOMPOSITION PRODUCTS			
None			
HAZARDOUS POLYMERIZATION	MAY OCCUR		CONDITIONS TO AVOID
	WILL NOT OCCUR	X	

SECTION VII - SPILL OR LEAK PROCEDURES

STEPS TO BE TAKEN IN CASE MATERIAL IS RELEASED OR SPILLED

Contain dry or liquid material and keep from spreading poisonous solid N.O.S. or Poison B, Solid, N.O.S.

Reportable Quantities 2 lb

WASTE DISPOSAL METHOD

UN 2811

SECTION VIII - SPECIAL PROTECTION INFORMATION

RESPIRATORY PROTECTION (Specify type)

Full face air purifying respirator with organic vapor cartridges with dust, fume, mist

VENTILATION

LOCAL EXHAUST

Use whenever possible

* SPECIAL

Supplied air or SCBA

MECHANICAL (General)

OTHER

PROTECTIVE CLOVES

Viton gloves with PVC or Neoprene (GG) Outer Glove

EYE PROTECTION

Faceshield, goggles or FF Respirator

OTHER PROTECTIVE EQUIPMENT

PVC suits/poly Tyvek depending on the situation; PVC or Neoprene boots with disposable shoe coverlets. Taping necessary.

SECTION IX - SPECIAL PRECAUTIONS

PRECAUTIONS TO BE TAKEN IN HANDLING AND STORING

Eyewash and shower in vicinity. Eating, smoking, drinking, etc prohibited in the work area. Minimize contact at all times

OTHER PRECAUTIONS

Material is very persistent in the environment. Highly toxic. Carcinogen, mutagen, teratogen in animals

PAGE (2)

CPD 12-14

*with higher concentrations or greater potential per exposure

Fe

2.

APPENDIX F

MODIFIED PRIORITY POLLUTANT LIST FOR HERBICIDE ORANGE CONTAMINATION

The documents contained in this appendix were published according to their own internal style, which deviates from ESL format. They have, therefore, been published without editing.

APPENDIX F

MODIFIED PRIORITY POLLUTANT LIST FOR HERBICIDE ORANGE CONTAMINATION

The Priority Pollutant List (PPL) referenced in Section 307.(a)(1) of the Federal Water Pollution Control Act as amended by the Clean Water Act of 1977 consisted of 129 toxic pollutants or combinations of pollutants. This list was subsequently reduced to 126 by formal deletions presented in the Federal Register (di- and tri-chlorofluoromethanes, January 8, 1981, 46 FR 2266; and bis-(chloromethyl) ether, February 4, 1981, 46 FR 10723).

Based on a review of this list by Chemical Sciences personnel at EG&G Idaho, Inc., the list of 125 priority pollutants in Table F-1 was evaluated as necessary for laboratory analysis of the treated soil to support soil restoration evaluation. The one chemical not included is 1,2-diphenylhydrazine (PPL #37) because its reactivity rules out the presence of the chemical because of the time since the HO storage area was used.

The list is organized into six groups: purgeable organics, base/neutral extractable organic compounds, acid extractable organic compounds, pesticides/PCBs, metals, and miscellaneous. The PPL number and chemical analysis serial (CAS) number are included for cross reference.

TABLE F-1. MODIFIED PPL FOR HO CONTAMINATION

Priority Pollutant Number	Name	CAS Number
<u>Purgeable Organics (28)</u>		
	Acrolein	107-02-8
	Acrylonitrile	107-13-1
4V	Benzene	71-43-2
6V	Carbon tetrachloromethane (carbon tetrachloride)	56-23-5
7V	Chlorobenzene	108-90-7
10V	1,2-Dichloroethane	107-06-2
11V	1,1,1-Trichloroethane	71-55-6
13V	1,1-Dichloroethane	75-34-3
14V	1,1,2-Trichloroethane	79-00-5
15V	1,1,2,2-Trichloroethane	79-34-5
16V	Chloroethane (ethyl chloride)	75-00-3
19V	2-Chloroethyl vinyl ether	100-75-8
23V	Trichloromethane (chloroform)	67-66-3
29V	1,1-Dichloroethene	75-35-4
30V	Trans-1,2-dichloroethene	156-60-5
32V	1,2-Dichloropropane	78-87-5
33V	1,3-Dichloropropane	10061-01-05
38V	Ethyl benzene	100-41-4
44V	Dichloromethane (methylene chloride)	75-09-2
44V	Chloromethane (methyl chloride)	74-87-3
46V	Bromomethane (methyl bromide)	74-83-9
47V	Tribromomethane (bromoform)	75-25-2
48V	Bromodichloromethane	75-27-4
51V	Dibromochloromethane	124-48-1
85V	Tetrachloroethene	127-18-4
86V	Tuolene	108-88-3
87V	Trichloroethene	79-01-6
88V	Chloroethene (vinyl chloride)	75-01-4
<u>Base/Neutral Extractable Organic Compounds (45)</u>		
1B	Acenaphthene	83-32-9
5B	Benzidine	92-87-5
8B	1,2,4-Trichlorobenzene	120-82-1

TABLE F-1. MODIFIED PPL FOR HO CONTAMINATION
(CONTINUED)

Priority Pollutant Number	Name	CAS Number
9B	Hexachlorobenzene	118-74-1
12B	Hexachloroethane	67-72-1
18B	bis (2-Chloroethyl) ether	111-44-4
20B	2-Chloronaphthalene	91-50-1
25B	1,2-Dichlorobenzene	95-58-1
26B	1,3-Dichlorobenzene	541-73-1
27B	1,4-Dichlorobenzene	106-46-7
28B	3,3'-Dichlorobenzidine	91-94-1
33B	2,4-Dinitrotoluene	131-11-3
36B	2,6-Dinitrotoluene	606-20-3
39B	Fluoranthene	206-44-0
40B	4-Chlorophenyl phenyl ether	7005-72-3
41B	4-Bromophenyl phenyl ether	101-55-3
42B	bis (2-Chloroisopropyl) ether	108-60-1
43B	bis (2-Chloroethoxy) methane	111-91-1
52B	Hexachlorobutadiene	87-68-3
53B	Hexachlorocyclopentadiene	77-47-4
54B	Isophorone	78-59-1
55B	Naphthalene	91-20-3
56B	Nitrobenzene	98-95-3
62B	Diphenyl nitrosamine (N-nitrosodiphenylamine)	62-75-9
63B	Di-n-propyl nitrosamine (N-Nitrosodi-n-propylamine)	621-64-7
66B	bis (2-Ethylhexyl) phthalate	117-81-7
67B	Benzyl butyl phthalate	85-68-7
68B	Di-n-butyl phthalate	84-74-2
69B	Di-n-octyl phthalate	117-84-0
70B	Diethyl phthalate	84-66-2
71B	Dimethyl phthalate	131-11-3
72B	Benzo(a)anthracene	56-55-3
73B	Benzo(a)pyrene	50-32-8
74B	Benzo(b)fluoranthene	205-99-2
75B	Benzo(k)fluoranthene	207-08-9
76B	Chrysene	218-01-9

TABLE F-1. MODIFIED PPL FOR HO CONTAMINATION
(CONTINUED)

Priority Pollutant Number	Name	CAS Number
77B	Acenaphthylene	208-96-8
78B	Anthracene	120-12-7
79B	Benzo(g,h,i)perylene	191-24-2
80B	Fluorene	86-73-7
81B	Phenathrene	81-01-8
82B	Dibenzo(a)anthracene	53-70-3
83B	Indeno(1,2,3-c,d)pyrene	193-39-5
84B	Pyrene	129-00-0
?	Dimethyl nitrosamine (N-nitrosodimethylamine)	86-30-6
<u>Acid Extractable Organic Compounds (11)</u>		
21A	2,4,6-Trichlorophenol	88-06-2
22A	4-Chloro-3-methylphenol (p-Chloro-m-cresol)	59-50-7
24A	2-Chlorophenol	95-57-8
31A	2,4-Dichlorophenol	120-83-2
34A	2,4-Dimethylphenol	105-67-9
57A	2-Nitrophenol	88-75-2
58A	4-Nitrophenol	100-02-7
59A	2,4-Dinitrophenol	51-28-5
60A	2-Methyl-4,6-dinitrophenol (4,6-Dinitro-o-cresol)	534-52-1
64A	Pentachlorophenol	87-86-5
65A	Phenol	108-95-1
<u>Pesticides/PCBs (26)</u>		
	Aldrin	309-00-2
	Alpha-BHC	319-84-6
	Beta-BHC	319-85-7
	Gamma-BHC (Lindane)	58-89-9
	Delta-BHC	319-86-8
	Chlordane	57-74-9
	4,4'-DDD	72-55-8
	4,4'-DDE	72-54-8

TABLE F-1. MODIFIED PPL FOR HQ CONTAMINATION
(CONCLUDED)

Priority Pollutant Number	Name	CAS Number
	4,4'-DDT	50-29-3
	Dieldrin	60-57-1
	Endosulfan I	959-98-8
	Endosulfan II	33212-65-9
	Endosulfan sulfate	1031-07-8
	Endrin	72-20-8
	Endrin aldehyde	7421-93-4
	Heptachlor	76-44-8
	Heptachlor epoxide	1024-57-3
	Toxaphene	800-35-2
	PCB-1016	12674-11-2
	PCB-1221	1104-28-2
	PCB-1232	11141-16-5
	PCB-1242	53469-21-9
	PCB-1248	12672-29-6
	PCB-1254	11097-69-1
	PCB-1260	11096-82-5

Metals (13)

Antimony
Arsenic
Beryllium
Cadmium
Chromium

Copper
Lead
Mercury
Nickel
Selenium

Silver
Thallium
Zinc

Miscellaneous (1)

Total Cyanides

APPENDIX G

MODIFIED EPA CARCINOGEN ASSESSMENT GROUP'S (CAG)
LIST FOR HERBICIDE ORANGE CONTAMINATION

The documents contained in this appendix were published according to their own internal style, which deviates from ESL format. They have, therefore, been published without editing.

APPENDIX G

MODIFIED EPA CARCINOGEN ASSESSMENT GROUP'S (CAG) LIST FOR HERBICIDE ORANGE CONTAMINATION

A copy of the draft "The Carcinogen Assessment Group's List of Carcinogens, July 14, 1980", dated 1984, was obtained from EPA (Headquarters) to review for compounds which could be associated with Herbicide Orange (HO). The Carcinogen Assessment Group's (CAG) list consists of chemicals for which there is substantial evidence of carcinogenicity.

Due to the generality of the CAG list, many of the listed chemicals are not applicable. Based on a screening review by Chemical Sciences personnel at EG&G Idaho, Inc., creosote and identified chemicals that are also on the EPA Priority Pollutant List (PPL) were determined as applicable for analytical testing of the treated NCBC soil to support the soil restoration evaluation. The PPL modified for HO is shown in Appendix F.

APPENDIX H

MODIFIED LIST OF COMPOUNDS INDIGENOUS TO HERBICIDE ORANGE

The documents contained in this appendix were published according to their own internal style, which deviates from ESL format. They have, therefore, been published without editing.

APPENDIX H

MODIFIED LIST OF COMPOUNDS INDIGENOUS TO HERBICIDE ORANGE

Prior to the destruction of the Herbicide Orange (HO) stored at the NCBC, samples were taken from drums so that the chemical composition of HO by each manufacturing source could be determined. Analytical results were presented in Aerospace Research Laboratories Report AD-A011 597, Analytical Methodology for Herbicide Orange. Volume 1: Determination of Chemical Composition, May 1975. While a number of chemicals were common to each manufacturer's HO, some chemicals of low concentration were found to be unique to a single manufacturer. Based on a review of the report data by Chemical Sciences personnel of EG&G Idaho, Inc., the following list of chemicals in Table H-1 was prepared as a spectrum of possible HO chemical constituents in the treated NCBC soil that should be analytically tested for the soil restoration evaluation.

TABLE H-1. MODIFIED SUMMARY OF COMPOSITION OF HERBICIDE ORANGE

CHEMICAL COMPOUND

2,4-Dichlorophenol
 2,4,6-Trichlorophenol
 Trichloroanisole
 Dichloro-Methoxyanisole

Butoxydichlorophenol
 Butoxytrichlorophenol
 Butyl-monochlorophenoxyacetate
 Butyl-dichlorophenoxyacetate

Butyl-trichlorophenoxyacetate
 Butyl-methoxy-dichlorophenoxyacetate
 Octyl-dichlorophenoxyacetate
 Octyl-dichlorophenoxypropionate

Octyl-trichlorophenoxyacetate
 1,1-Dibutoxy-2-trichlorophenoxyethane
 Octyl-methoxy-dichlorophenoxyacetate
 Butyl-bis-dichlorophenoxyacetate

Butyl ester of bis Trichlorophenoxyacetic acid
 Butyl ester of Trichlorophenoxy-(methoxy-dichlorophenoxy)-acetic acid
 2,4-Dichlorophenoxyacetic acid (free acid)
 2,4,5-Trichlorophenoxyacetic acid (free acid)

APPENDIX I

ITC INDUSTRIAL HYGIENE MONITORING REPORT
IN SUPPORT OF NCBC DEMONSTRATION TESTS

The documents contained in this appendix were published according to their own internal style, which deviates from ESL format. They have, therefore, been published without editing.



Memorandum

To D. Helsel, JT
Robin L. Ballau, EG&G

Date August 29, 1985

From H. Pullum *HAP*

Subject EG&G/Air Force Site Demonstration of the Thermal Desorption/UV Photolysis Process - Health and Safety Report

A health and safety plan was prepared and approved on May 16, 1985 for the referenced project. Coordination of this plan was performed on-site on the following dates:

May 22-23, 1985 (Corey Briggs)
May 28-31, 1985
June 5-7, 1985
June 21-24, 1985

The purpose of the on-site coordination was for initial implementation of the health and safety plan, atmosphere monitoring to assess employees potential exposure, and auditing the continuing implementation, by project management, of the plan.

The health and safety plan was followed as written with minor exceptions. The employees on the project should be commended for their awareness and concerns for health and safety. Two changes of the plan were made during my visit. They were:

1. The polyethylene coated (yellow) tyvek appeared to be strong enough to be worn when doing soil grinding, crushing, and loading activities. It was therefore decided to use the yellow tyvek instead of PVC for these activities.
2. Since no contaminated clothing was worn into the break area, and the break area was cleaned frequently, food in wrappers, such as candy bars, were allowed to be eaten in this area.

These amendments have been made in the health and safety plan for the Johnston Island demonstration.

The results of atmospheric monitoring are given in Table 1. These results are summarized as follows:

1. Employees grinding soil inside the grinding room had potential exposures of up to 35,668 picograms 2,3,7,8 TCDD per cubic meter of air (pg/m^3).
2. Employees pulverizing soil inside the grinding room had potential exposure of up to 63,241 pg/m^3 .

3. Employees in the tent (outside the grinding room) operating the thermal desorber and/or UV photolysis process had potential exposures of less than 827 pg/m³, with one measured potential exposure of 675 pg/m³. These measurements were taken during grinding of soil inside the grinding room with 2,3,7,8 TCDD exposures outside the grinding room attributed to leaks from the room.
4. Area samples in the tent during grinding, but outside the grinding room, showed concentrations of less than 608 pg/m³, with one measured concentration of 238 pg/m³.
5. An area sample in the decontamination area showed a concentration of less than 877 pg/m³.

Conclusions made from the atmospheric monitoring are as follows:

1. Employees grinding soil wore supplied air respirators which have a protection factor (PF) of 2000. Using a permissible exposure limit of 18 pg/m³ for 2,3,7,8 TCDD would give a protection for these respirators of 36,000 pg/m³. All measured concentrations for the employees grinding soil were less than 36,000 pg/m³.
2. Employees pulverizing soil in the grinding room also wore supplied air respirators with a PF of 2000, giving protection of up to 36,000 pg/m³. These employees were potentially exposed to concentrations of up to 63,241 pg/m³. Since exposure time was short (several hours at most) and the respirators operated without any problems, adverse health effects for these employees in extremely minimal. In the future, all pulverizing operations will be done in self contained breathing apparatus, which has a PF of 10,000 plus.
3. Employees working outside the grinding room operating the other equipment (thermal desorber UV photolysis, etc.) wore powered air purifying respirators (PAPR). The PF for PAPR is listed as 1000, but there is general disagreement on this PF. Many authorities on the subject indicate the PF should be much lower, but no value has been established. These employees had potential exposures of less than 827 pg/m³. A PF of 46 would be necessary to protect these workers, and it can be confidently assumed that a PAPR would have a PF of much greater than 46.
4. Visitors and other employees entering the work area (outside of the grinding room) wore full face air purifying respirators, with organic vapor/HEPA cartridges, which have a listed PF of 50, giving a protection of up to 900 pg/m³. Area samples showed potential exposures of less than 608 pg/m³ for these employees.
5. Spiked samples from this job, and other jobs, show a recovery of approximately 65% of labeled 2,3,7,8 TCDD from filters taken to the field. Some spikes have air drawn through them (such as Sample J4017 which had a recovery of 67%) and some spikes

do not (such as Sample J4027 which had a recovery of 68%). This indicates that the spiking method used by the laboratory is only 68% effective. It is also important to note that Sample J4017, a GFF, was spiked and a XAD-2 sorbent tube was used as a back-up to collect any labeled 2,3,7,8 TCDD which might be lost. The analysis of the XAD-2 tube showed nondetectable concentrations (at 260 pg) for both the labeled and other 2,3,7,8 TCDD. From this data it is apparent that the 2,3,7,8 TCDD is being collected on the glass fiber filter since there is no evidence that it is being lost and collected in the XAD-2 sorbent tube. Therefore, XAD-2 back-up tubes will not be used at Johnston Island for atmospheric monitoring.

Noise readings were taken on April 30, 1985 in the hearing zone of the grinding operator. The highest sound level was 85 dB(A). Hearing protection was provided and worn by the operator. Noise readings were taken on June 5, 1985 in the hearing zone of the thermal desorber operator. The sound level ranged from 84-86 dB(A) with an average of 85 dB(A) during operation. Hearing protection was also available for these operators.

Isopropyl alcohol readings were taken at the UV photolysis operation on June 6, 1985. None was detected on the Drager detector tube. The permissible exposure limit for isopropyl alcohol is 400 parts per million parts of air.

Heat stress readings using the WBGT method were taken throughout the demonstration. Work was performed at night due to the tremendous heat during the day. The heat stress reading established a work/rest regimen, and this regimen was followed during all on-site activities. There was no evidence of heat stress related illnesses during the - job.

The health and safety log for this job is located in my office in Knoxville. This log has all calibration data for sampling pumps, heat stress readings, atmospheric monitoring data, general comments, etc. Please contact me if you need any of this information.

jn

TABLE I
ATMOSPHERIC MONITORING 2,3,7,8, TCDD
GULFPORT, MISSISSIPPI DEMONSTRATION

Date	Sample Number	Filter Media	Type of Sample	Location	Activity	Volume of Air Sampled, Cubic Meters	2,3,7,8 TCDD On Sample, Nanograms	Results, Picogram per Cubic Meter
4/30/85	J4012	XAD-2* Back-up to J4013	Area	Inside work tent, outside and adjacent to grinding room next to thermal desorber	Grinding soil and Thermal Desorber set-up	2.136	ND** at 1.30	<608.6
4/30/85	J4013	GFF***	Area	Same as J4012	Same as J4012	2.136	ND at 0.35	<164.9
4/30/85	J4013	GFF	Spiked with labeled 2,3,7,8 TCDD - Recovery of 51%					
4/30/85	J4014	XAD-2 Back-up to J4015	Area	Decontamination area where respirators are taken off	Grinding soil and Thermal Desorber set-up	1.938	ND at 0.67	<345.7
4/30/85	J4015	GFF	Area	Same as J4014	Same as J4014	1.938	ND at 1.7	<877.2
4/30/85	J4016	XAD-2 Back-up to J4017	Personnel	Rick Auten	Grinding soil	0.81	ND at 0.26	<321.0
4/30/85	J4017	GFF	Personnel	Same as J4016	Same as J4016	0.81	28	34568
4/30/85	J4017	GFF	Spiked with labeled 2,3,7,8 TCDD - Recovery of 67%					
4/30/85	J4018	GFF	Personnel	Bryant Wright	Grinding soil	1.542	55	35668
4/30/85	J4019	GFF	Personnel	Tom Geisler	Set-up of Thermal Desorber (outside grinding room)	1.482	1.0	675

*XAD Sorbent Tube

**None detected

***Glass Fiber Filter

TABLE I (cont.)

<u>Date</u>	<u>Sample Number</u>	<u>Filter Media</u>	<u>Type of Sample</u>	<u>Location</u>	<u>Activity</u>	<u>Volume of Air Sampled, Cubic Meters</u>	<u>2,3,7,8 TCDD On Sample, Nanograms</u>	<u>Results Picogram per Cubic Meter</u>
4/30/85	J4020	GFF	Field Blank				ND at 0.61	
4/30/85	J4021	XAD-2	Field Blank				ND at 0.95	
6/5/85	J4022	GFF	Personnel	Tom Geisler - Operating Thermal Desorber	Grinding soil and operating Thermal Desorber	1.451	ND at 1.2	<827.0
6/5/85	J4023	GFF	Personnel	Ken Fureson - Same as J4022	Same as J4022	1.533	ND at 0.82	<534.9
6/5/85	J2024	GFF	Area	Feed end of Thermal Desorber	Same as J4023	5.031	1.2	238.5
6/6/85	J4025	GFF	Personnel	Rick Auten - Grinding soil (for part of shift)	Grinding soil, operating Thermal Desorber, and operating UV photolysis	1.085	5.9	5437.8
6/6/85	J4026	GFF	Personnel	Arie Greon - Operating UV Photolysis	Same as J4025	1.430	ND at 0.58	<405.6
6/6/85	J4027	GFF	Field Blank				ND at 0.12	
6/6/85	J4027	GFF	Spiked with labeled 2,3,7,8 TCDD - Recovery of 68%					
6/7/85	J4028	GFF	Personnel	Rick Auten - Pulverizing and screening soil	Pulverizing soil and operating Thermal desorber	1.012	64	63241.1

APPENDIX J

ITC WIPE SAMPLING PROCEDURES

The documents contained in this appendix were published according to their own internal style, which deviates from ESL format. They have, therefore, been published without editing.

APPENDIX J
ITC WIPE SAMPLING PROCEDURES

The following ITC NCBC equipment was identified to be decontaminated after the testing. Wipe sample locations are indicated.

- a. Desorber
 - Inside feed hopper
 - Outside furnace/frame
 - Inside inlet plenum or bellows section
- b. Solvent scrubber skid
 - Inside bottom of decanter tank
 - Outside under filters-frame or filter housings
- c. Photolysis system
 - Outside bottom of feed tank and framing
- d. Grinder-outside surface-not frame
- e. Control panel-exterior side
- f. Electrical panel-interior bottom and lower side
- g. Tools and small items-composite wipe from several different items. No wipe from nonmetallic materials-assume contaminated.

The standard operating procedures established for collecting wet wipe samples are as follows:

a. Materials and Apparatus

- 3 inch x 3 inch sterile cotton gauze pads, individually wrapped
- Sample bottles, glass with Teflon^R-lined caps
- Hexane (pesticide grade)
- Distilled water
- Glass graduated cylinder
- Sample labels
- Sample log and chain-of-custody records
- Indelible ink pen
- Ruler or square area guide
- Tape or other marking material to outline wipe area

b. Select area for collecting a series of wet wipe samples for a matrix type. Ensure surface area is sufficient to collect all required samples.

c. Mark the location of the wipe on the item(s).

d. To collect a wipe sample, use the following procedure:

- Put on a clean pair of disposable gloves
- Remove a pad from its individually wrapped package
- Hold pad in hand
- Soak pad with 8 ml of hexane using the graduated cylinder to measure volume. Fill cylinder from laboratory squeeze bottle.

e. Sample an area by applying pressure to the pad, then draw it across the area in both directions, ensuring that the entire area is well contacted.

- f. Upon completion of the wet wipe sample, carefully fold the pad over at least twice, being careful not to touch the contaminated side of the wipe pad, and place in labeled sample collection bottle. Bottles should be temporarily stored in plastic bags until all samples have been collected.
- g. The sampling person in charge of field data should ensure the following information is accurately recorded.
 - Sample description/item description
 - Sample date and time
 - Area date and time
 - Area sampled
 - Observations/problems, if pertinent
 - Names of sampling personnel
- h. Change gloves after taking each sample.
- i. Upon removal of samples from the site, a Chain-of-Custody form shall be established for the samples. The Chain-of-Custody will act as a transmittal form from sampling personnel to laboratory personnel and will be signed at this time to document that samples are properly delivered and received by appropriate staff members.

APPENDIX K

COPIES OF UNIFORM HAZARDOUS WASTE SHIPMENT FORMS FOR SHIPMENTS THAT INCLUDED DIOXIN-CONTAMINATED WASTES FROM ITC NCBC TESTS

	<u>Page</u>
Exhibit 1 E&E Letter on Hazardous Waste Shipment	85
Exhibit 2 Uniform Hazardous Waste Manifest for First Shipment	88
Exhibit 3 Uniform Hazardous Waste Manifest for Second Shipment	90

The documents contained in this appendix were published according to their own internal style, which deviates from ESL format. They have, therefore, been published without editing.



ecology and environment, inc.

195 SUGG ROAD, P.O. BOX D, BUFFALO, NEW YORK 14225, TEL. 716-632-4491, TELEX 91-9183

International Specialists in the Environment

May 22, 1985

Naval Construction Battalion Center
Code Orange
Gulfport, Mississippi 39501
ATTN: Harry Williams
864-0056

Dear Mr. Williams:

Ecology and Environment, Inc. (E & E) has been conducting sampling at the Naval Construction Battalion Center and Eglin Air Force Base for dioxin under a contract to EG&G Idaho, Inc. During this sampling, sampling wastes consisting of protective clothing, sampling equipment (spoons, drills, aluminum trays, etc.), and drill borings (soil) have been generated. The sampling wastes were packaged in fiber drum containers and left on the respective sites. These wastes are now being processed for disposal by Rollins Environmental Services, Inc.

Paragraph 6 of Rollins form 101-81 (attached) presents a list of chemicals unacceptable to Rollins. None of the chemicals listed in paragraph 6 are in the fiber drums filled by E & E. It is further noted that the requirement for steel drums has been changed by Rollins to fiber drums.

Sincerely,

Louis W. Adams
Project Manager



Rollins Environmental Services (TX) Inc.

P.O. Box 808, Deer Park, Texas 77636 (713) 479-6001

101-81

RES Ref. No. _____

This letter, upon receipt by Rollins Environmental Services (TX) Inc. ("RES"), of your acceptance, shall be the agreement between RES and _____ ("Company") with respect to Waste (defined below), term, price and representations:

WARRANTY-RES. To comply with all existing laws, ordinances and regulations of the United States and of any state, county, township or municipal subdivision thereof, or other governmental agency which may be applicable to the removal of Waste. RES shall obtain all permits, licenses and other forms of documentation required in order to comply with such laws and regulations.

RES INDEMNIFICATION. Following loading and departure from Company's plant, if RES provides transportation or, following delivery f.o.b. RES' facility, if Company provides transportation, Company shall be relieved of responsibility and RES shall become solely responsible for any and all loss, damage or injury to persons or property and RES shall indemnify and hold Company harmless from any and all liability, damages, costs, claims, demands, and expenses of whatever type or nature, including, but not limited to, pollution or other damage, which shall be caused by, arise out of, or in any manner be connected with the Waste, except as provided in COMPANY INDEMNIFICATION below.

COMPANY WARRANTIES. Company represents and warrants that the Waste loaded and removed under this Agreement shall be the Waste defined on Schedule "A", attached hereto and made a part hereof, and has been thoroughly characterized on the waste data sheet submitted to RES. Company agrees to prepare and execute RES' waste data sheet for each shipment of Waste. If the Waste is packaged, Company warrants that such Waste shall be prepared for shipment and packaged in containers specified by the then current and applicable regulations of the United States Department of Transportation, Environmental Protection Agency or any successors thereof and/or any state, municipal and/or Federal agency having jurisdiction, as the case may be. Company shall be responsible for packaged Waste on RES' trailers if RES is providing transportation.

COMPANY INDEMNIFICATION. Company will indemnify and hold harmless RES from any and all loss, damages, including damage or undue wear and tear to equipment, claims, suits, or costs which shall arise or grow out of any injury to any person or persons or any property (including the person or property of Company or its employees) caused by or resulting in any way from Company's failure to comply with Company's Warranty concerning the Waste. Company shall be responsible for and indemnify RES against any and all liability, damages, costs, claims, demands, and expenses of whatever type or nature resulting from the acts and/or omissions of Company and/or its employees, until departure of RES vehicles from Company's plant, if RES provides transportation or, if Company provides transportation, until delivery f.o.b. RES' facility.

1. **TERM.** Subject to the right of either party to terminate this Agreement at any time upon thirty (30) days prior written notice, this Agreement shall automatically terminate on _____.

2. **PAYMENT.** RES shall invoice Company for the hauling and treatment of Waste at the rates and terms set forth on Schedule "A" attached hereto and made part hereof. RES shall add an amount equal to one and one-half percent (1½%) or the maximum legally permissible amount to invoices which remain unpaid for more than thirty (30) days after date of invoice. Like charges may be made for each subsequent thirty (30) day period that such invoice remains unpaid.

3. **RES REJECTION.** Company understands and agrees that RES, upon notice to Company, has the absolute and unqualified right to reject any shipment of Waste which does not conform to the description of Schedule "A" (the "Waste Data Sheet") supplied by Company to RES. After any such rejection, RES will, with Company's assistance and approval, pursue all other reasonable means of disposal. If the Waste is rejected, Company shall be obligated (a) to pay the cost of transportation to RES' facility if such transportation was performed by RES, and (b) to pay the cost of return transportation from RES' facility to Company's premises (Company having the right to select the carrier) and (c) to pay all other reasonable charges incurred by RES with the prior consent of Company.

4. **TITLE.** Following loading and departure from Company's plant, if RES provides transportation or, following delivery f.o.b. RES' facility, if Company provides transportation, Company shall be relieved of title responsibility and risk of loss for the Waste, and RES shall take title, responsibility and risk of loss. However, title, risk of loss and all other incidents of ownership to non-conforming Waste shall be deemed to revert in the Company at the time revocation of acceptance is communicated to Company and RES shall be responsible for its own negligence or willful acts.

FORCE MAJEURE. Delays or failure of either party in the performance of its required obligations shall be excused if caused by instances beyond the reasonable control of the party affected, including but not limited to, acts of God, strikes, labor holiday, fire, flood, windstorm, explosion, riot, war, sabotage, action or request of governmental authority, accident, inability to obtain material, equipment or transportation, provided that a prompt notice of such delay is given and the parties shall be diligent in attempting to remove such cause(s).

2. OSHA. Company represents and warrants that Waste does not contain the following substances in concentrations greater than those specified below:

2-acetylaminofluorene, Chemical Abstracts Service Registry No. 62759	1%
alpha-naphthylamine, Chemical Abstracts Service Registry No. 134327	1%
4-iodobiphenyl, Chemical Abstracts Service Registry No. 92671	0.1%
1,2-dichlorobenzene, Chemical Abstracts Registry No. 92875	0.1%
1,2-naphthylamine, Chemical Abstracts Service Registry No. 91598	0.1%
beta-propiolactone, Chemical Abstracts Service Registry No. 57576	1%
bis-chloromethyl ether, Chemical Abstracts Service Registry No. 54288	0.1%
3,3'-dichlorobenzidine, Chemical Abstracts Service Registry No. 91941, and its salts	1%
4-dimethylaminoazobenzene, Chemical Abstracts Service Registry No. 60117	1%
ethyleneimine, Chemical Abstracts Service Registry No. 151564	1%
methyl chloromethyl ether, Chemical Abstracts Service Registry No. 107302	0.1%
4,4'-methylene bis (2-chloroaniline), Chemical Abstracts Service Registry No. 101144	1%
4-nitrobiphenyl, Chemical Abstracts Service Registry No. 92933	0.1%
N-nitrosodimethylamine, Chemical Abstracts Service Registry No. 62759	1%
polychlorinated biphenyls	0.005%

Additions may be made by RES to the foregoing list of substances from time to time, such additions by RES becoming effective and binding after three days' written notice to Company.

Company agrees that all Waste containing asbestos (including actinolite, amosite, anthophyllite, chrysotile, crocidolite, and tremolite) fibers longer than 5 micrometers detectable by phase contrast microscopy shall be subject to the following conditions:

- a. The presence of asbestos in the Waste shall be clearly noted on RES' waste data sheet.
- b. Waste shall be packaged in closed steel drums bearing a label which conforms with 29 CFR 1910.1001.

Company further represents and warrants that, to the best of its knowledge, Waste does not contain vinyl chloride monomer in a liquid or gaseous form except as specified on RES' waste data sheet.

All previous representations, including but not limited to, proposal(s), purchase order(s) and/or invoice(s), either written or oral are hereby annulled and superseded. No modification shall be binding unless in writing and executed by RES and Company.

Please indicate your agreement to the above recitals by executing and returning a copy of this letter.

WITNESSED this 10 day of June, 19 85.

HQ AFSC / RDVW ("Company")

BY: Terry L. Stoddart

Address: Cpt USAF BSC
Project Manager

ROLLINS ENVIRONMENTAL SERVICES (TX) INC. ("RES")

BY: _____

Address: P.O. Box 609
Deer Park, Texas 77536

Appendix K, Exhibit 2

print or type. (Form designed for use on elite (12-pitch) typewriter.)

Form Approved. OMB No. 2000-0404. Expires 7-31-88




UNIFORM HAZARDOUS WASTE MANIFEST		1. Generator's US EPA ID No. MS 2170022626	Manifest Document No. EG1050-3		2. Page 1 of	Information in the shaded areas is not required by Federal law.	
3. Generator's Name and Mailing Address United States Navy Naval Construction Battalion Center Gulfport, MS 39501 4. Generator's Phone (601) 865-2484					A. State Manifest Document Number		
5. Transporter 1 Company Name Tri State Motor Transit Co., Inc.					B. State Generator's ID 99928		
6. US EPA ID Number MOD 095038998					C. State Transporter's ID		
7. Transporter 2 Company Name					D. Transporter's Phone 800-641-7580		
8. US EPA ID Number					E. State Transporter's ID		
9. Designated Facility Name and Site Address Rollins Environmental Services 2027 Battleground Road Deer Park, Texas 71536					F. Transporter's Phone		
10. US EPA ID Number TXD 055141378					G. State Facility's ID		
					H. Facility's Phone (713) 479-6001		
11. US DOT Description (Including Proper Shipping Name, Hazard Class and ID Number)					12. Containers	13. Total Quantity	14. Unit Wt/Vol
					No.	Type	Waste No.
a. X Hazardous Waste Solid N.O.S. ORM-E NA9189					40	DF SH TS	3,113 P778 D017
b.							
c.							
J. Additional Descriptions for Materials Listed Above					K. Handling Codes for Wastes Listed Above		
15. Special Handling Instructions and Additional Information Disposable clothing and/or sampling equipment contained in the drums may be contaminated with 2,4,5-trichlorophenol or its pesticide derivative (TCDD). Do not open or reuse containers. Handle with care.							
16. GENERATOR'S CERTIFICATION: I hereby declare that the contents of this consignment are fully and accurately described above by proper shipping name and are classified, packed, marked, and labeled, and are in all respects in proper condition for transport by highway according to applicable international and national governmental regulations.							
Printed/Typed Name CLUFF, JAMES H.					Signature <i>James H. Cluff</i>		Date Month Day Year 6 12 85
17. Transporter 1 Acknowledgement of Receipt of Materials					Date		
Printed/Typed Name TRI-STATE H. STAUDE					Signature <i>H. Staudt</i>		Month Day Year 6 12 85
18. Transporter 2 Acknowledgement of Receipt of Materials					Date		
Printed/Typed Name					Signature		Month Day Year
19. Discrepancy Indication Space							
20. Facility Owner or Operator: Certification of receipt of hazardous materials covered by this manifest except as noted in Item 19.					Date		
Printed/Typed Name					Signature		Month Day Year

1. State, Motor USN. CBR, GPT, MG

INV. TATION NUMBER 10 CONTRACT NUMBER

ITEM	DESCRIPTION OF MATERIAL	UNIT	QUANTITY RELEASED
1.	Hz- Waste	1	T/C
<p>Gen VAV</p> <p>secreted to East Gate and Reported NZBC</p> <p>0955 hr 6/26/85</p> <p>T. Haddock</p>			

SHIPMENT NUMBER	SA. "X" TYPE OF SHIPMENT <input type="checkbox"/> PARTIAL <input checked="" type="checkbox"/> FINAL	10. TIME LOADED	11. VEHICLE LICENSE NO.
12. RELEASED BY (Signature of PDO or Authorized Representative)		13. TITLE OF AUTHORIZED DISPOSAL REPRESENTATIVE	
<p>Black</p> <p>T. Haddock Capt USAF</p>		<p>T. Haddock</p> <p>6/26/85</p>	
4. SIGNATURE OF PURCHASER OR AGENT		14. DATE PROPERTY IS RELEASED	
SHIPMENT LEAVES INSTALLATION		17. SECURITY INITIALS	

UNIFORM HAZARDOUS WASTE MANIFEST		1. Generator's US EPA ID No. MS 2170022626		Manifest Document No. EE1058-3		2. Page 1 of 1		Information in the shaded areas, is not required by Federal law.	
		3. Generator's Name and Mailing Address United States Navy Naval Construction Battalion Center ATTN CODE 470 Gulfport, MS 39501 Generator's Phone (601) 265-2484		6. US EPA ID Number MO0 095038998		C. State Transporter's ID		D. Transporter's Phone 800-641-7530	
5. Transporter 1 Company Name Tri State Motor Transit Co., Inc.		8. US EPA ID Number		E. State Transporter's ID		F. Transporter's Phone		G. State Facility's ID	
7. Transporter 2 Company Name		10. US EPA ID Number		H. Facility's Phone (713) 479-6001					
9. Designated Facility Name and Site Address Rollins Environmental Services 2027 Battleground Road Deer Park, Texas 71536									
11. US DOT Description (Including Proper Shipping Name, Hazard Class and ID Number)		12. Containers		13. Total Quantity		14. Unit Wt/Vol		1. Waste No.	
a. X Hazardous Waste Solid H.O.S. 004-E 309189(-1)		No. 31 Type DF DN		6,265		P		0017	
b.									
c.									
d.									
J. Additional Descriptions for Materials Listed Above						K. Handling Codes for Wastes Listed Above			
15. Special Handling Instructions and Additional Information Disposable clothing and/or sampling equipment contained in the drums may be contaminated with 2,4,5-trichlorophenol or its pesticide derivative (TCDD). Do not open or reuse containers. Handle with care.									
16. GENERATOR'S CERTIFICATION: I hereby declare that the contents of this consignment are fully and accurately described above by proper shipping name and are classified, packed, marked, and labeled, and are in all respects in proper condition for transport by highway according to applicable international and national governmental regulations.									
Printed/Typed Name CLIFF, JAMES H						Signature 		Date 6-21-85	
17. Transporter 1 Acknowledgement of Receipt of Materials						Signature 		Date 6-21-85	
18. Transporter 2 Acknowledgement of Receipt of Materials						Signature		Date	
19. Discrepancy Indication Space									
20. Facility Owner or Operator. Certification of receipt of hazardous materials covered by this manifest except as noted in Item 19.						Signature 		Date 6-21-85	

THIS MEMORANDUM is an acknowledgment that a Bill of Lading has been issued and is not the Original Bill of Lading, nor a copy or duplicate, covering the property named herein, and is intended solely for filing or record.

[illegible]

1. NAVY		DATE SHIPPED 6-8-55		SHIPPER'S NUMBER 1400	
AI - F. M. S.					
ORIGINATING CARRIER		EXECUTIVE OFFICES PO BOX 113, JOPLIN, MO 64801			
CONSIGNEE TO		(Must be exact address of consignee - For purposes of notification only)			
HOLLINS-ENVIRONMENTAL SERVICE					
DESTINATION		STATE		COUNTY	
SPRING POND TX					
DELIVERY ADDRESS		(To be filled in only when shipper desires and government agency provides for delivery receipt)			
2. 1400 1/2 JOPLIN ST					
CONNECTING CARRIER(S)		DELIVERING CARRIER		TRACTOR NO. TRAILER NO.	

UNLESS A GREATER VALUE IS DECLARED, THE SHIPPER HEREBY RELEASES THE VALUE TO \$5000.00 PER TON OF 2000 POUNDS FOR EACH ARTICLE THIS IS TO CERTIFY THAT THE ABOVE NAMED MATERIALS ARE PROPERLY CLASSIFIED, DESCRIBED, PACKAGED, MARKED, AND LABELED, AND ARE IN PROPER CONDITION FOR TRANSPORTATION, ACCORDING TO THE APPLICABLE REGULATION OF THE DEPARTMENT OF TRANSPORTATION.

ARRIVED AT SHIPPER	DATE 1/1/74	TIME A.M. P.M.	PREARRANGED SCHEDULE	<input type="checkbox"/> YES <input type="checkbox"/> NO	DATE	TIME A.M. P.M.	LOADING STARTED	DATE	TIME A.M. P.M.
LOADING COMPLETED	DATE	TIME A.M. P.M.	VEHICLE RELEASED	DATE	TIME A.M. P.M.	SHIPPER'S SIGNATURE TH [Signature] C-124 USA			
THIRD PARTY BILLING. BILL TO:					SHIPPER. PER		AGENT. PER		

DATE SHIPMENT RECEIVED FROM CONSIGNOR			2ND TIME CARGO CHANGED CUSTODY			4TH TIME CARGO CHANGED CUSTODY		
DATE	TIME	TRACTOR NO.	DATE	TIME	TRACTOR NO.	DATE	TIME	TRACTOR NO.
DRIVER'S SIGNATURE		HOME TERMINAL	DRIVER'S SIGNATURE		HOME TERMINAL	DRIVER'S SIGNATURE		HOME TERMINAL
DRIVER'S SIGNATURE		HOME TERMINAL	DRIVER'S SIGNATURE		HOME TERMINAL	DRIVER'S SIGNATURE		HOME TERMINAL
1ST TIME CARGO CHANGED CUSTODY			3RD TIME CARGO CHANGED CUSTODY			5TH TIME CARGO CHANGED CUSTODY		
DATE	TIME	TRACTOR NO.	DATE	TIME	TRACTOR NO.	DATE	TIME	TRACTOR NO.
DRIVER'S SIGNATURE		HOME TERMINAL	DRIVER'S SIGNATURE		HOME TERMINAL	DRIVER'S SIGNATURE		HOME TERMINAL
DRIVER'S SIGNATURE		HOME TERMINAL	DRIVER'S SIGNATURE		HOME TERMINAL	DRIVER'S SIGNATURE		HOME TERMINAL

91 (The reverse of this page is blank.)

APPENDIX L

ECOLOGY AND ENVIRONMENT, INC., SAMPLING PROTOCOL
FOR ITC NCBC TEST

The documents contained in this appendix were published according to their own internal style, which deviates from ESL format. They have, therefore, been published without editing.

APPENDIX L

ECOLOGY AND ENVIRONMENT, INC., SAMPLING PROTOCOL FOR ITC NCBC TEST

General

A bound sampling logbook will be individually assigned to each site. The logbook will be kept by the onsite sampling team. Field data sheets also will be used. At a minimum, the following information will be kept in the logbook and on the field data sheets:

- o Site name
- o Demonstration project name
- o Test run number
- o Sample test point number
- o Sample number
- o Date and time sampled
- o Ambient air temperature
- o General weather conditions
- o Name of sampler
- o Name of laboratory performing the analysis
- o Date sample was shipped
- o Airbill number.

To enhance decontamination, a small plastic bag will be placed around the outside of the sample bottles and held in place by a rubber band so that any sample spilled during the collection or compositing process will not contaminate the outside of the jar. After sample collection, the sample bottles will be decontaminated by first removing and discarding the rubber band and outer plastic bag. The sample bottle will be washed with clean water, dried, and placed in a clean bag; then the bag will be sealed.

Process Sampling

Soil samples will be collected in disposable aluminum trays using stainless steel scoops or spoons. Enough soil will be collected to fill two 16-ounce wide-mouth jars. Pretreated soils will be sampled as they are fed into the furnace feed bins. Treated soil exits the furnace at extremely high temperatures and will be sampled after it has cooled to ambient air temperature. All soil samples will be composites of at least five aliquots. They will be sieved into the wide-mouth jars through 10-mm screen, and the jars will be sealed with aluminum-lined caps.

Representative carbon filter bed samples will be collected during the equipment purging and cleaning cycle. They will be placed in two 16-ounce wide-mouth jars and sealed with aluminum-lined caps.

Effluent water samples will be collected hourly throughout the test run and will be composited. It is expected that the demonstration test apparatus will have valve test ports to withdraw the samples. Four sets of samples will be collected. It is assumed that each test run will be at least 8 hours. Water will be collected as follows:

- o One quart of water every hour. At the end of the test run, the eight 1-quart bottles will be composited into four half-gallon amber bottles.

- o Two 40-mL volatile organic analysis (VOA) bottles of water every hour. Immediately upon collecting the samples, bottles will be packed in ice. These samples will be composited by the laboratory prior to analysis.
- o One plastic 125-mL bottle of water every hour. Nitric acid will be added as a preservative. At the end of the test run, the eight bottles will be composited into two 500-mL plastic bottles.
- o One plastic 125-mL bottle of water every hour. Sodium hydroxide will be added as a preservative. At the end of the test run, the eight bottles will be composited into two 500-mL plastic bottles.

The scrubber/quench liquid samples from the ITC process will be collected at the end of the test run. Since they are recycled continuously through UV destruction, they will be drawn directly into four half-gallon amber bottles and two 40-mL VOA bottles at the end of the run. The VOA bottles immediately will be packed in ice.

Sampling of vent gas and off-gases from the two thermal desorption technologies will be performed using procedures and techniques developed for permitting requirements of the Resource Conservation and Recovery Act (RCRA) and Toxic Substances Control Act (TSCA) for hazardous waste incinerators. Sampling of the gas streams will be conducted for subsequent analysis of 2,3,7,8-TCDD and isomers of CDD and CDF, volatile organics, molecular weight, oxygen (O_2), carbon dioxide (CO_2), N_2 , hydrogen chloride (HCl), total organic carbon (TOC), nitrogen oxides (NO_x), and particulates. Flow rates of each process will be determined.

Ambient Air Sampling

An ambient air sampling program will be conducted to determine the fugitive particulate matter (FPM) concentrations during pretest activities (i.e., soil crushing). FPM will be sampled using flow-controlled, high-volume (hi-vol) samplers operating at a minimum flow rate of 40 cfm.

The hi-vols will be operated during the soil-crushing operation (i.e., 8 to 10 hours per work day) for three work days. Three samplers, one located upwind from the operation and two located downwind, will be used. The units will be calibrated and operated in accordance with 40 CFR 50, Appendix B, "Reference Method for the Determination of Suspended Particulate Matter in the Atmosphere" (1983). Filters collected during this phase will be forwarded to the laboratory for gravimetric analysis.

Packaging and Shipment of Samples

All samples will be packaged in accordance with the User's Guide to the EPA Contract Laboratory Program, EPA Region VII protocol, and the appropriate United States Department of Transportation (DOT) regulations. Shipment of NCBC samples in the continental United States will be via Federal Express.

Disposition of Waste Generated During Sampling

The demonstration sampling program will result in the generation of contaminated disposable clothing and sampling supplies. It is estimated that eighteen 32-gallon fiber drums of waste will be generated at NCBC.

APPENDIX M

PACKING LISTS FOR ITC NCBC TEST-RELATED
SAMPLES BEING SHIPPED TO
ANALYTICAL LABORATORIES

The documents contained in this appendix were published according to their own internal style, which deviates from ESL format. They have, therefore, been published without editing.

Cooler No.: NCBC #1
Date Shipped: 6/14/85
Federal Express Airbill No.: 289-581-106

PACKING LIST

USAF SAMPLING & ANALYTIC PROGRAM
ENVIRONMENTAL RESTORATION & TECHNOLOGY
RESEARCH & TEST EVALUATION PROJECT

EG&G Idaho, Inc.
Code Orange/USAF Project Trailer
Naval Construction Battalion Center
Gulfport, MS 39501
601/864-0056

Quant.	Container	Sample # / Description
2	16 oz jars	IT-NCBC-R1-01 Run 1 soil prior to pyrolysis
2	16 oz jars	IT-NCBC-R2-01 Run 2 soil prior to pyrolysis
1	16 oz jar	IT-NCBC-R1-03 Run 1 scrubber solv before photolysis
5	TOTAL CONTAINERS	

Requested Analyses:

Sample # IT-NCBC-R1-01 taken 5/31/85 at 2300 no preservatives
Sample # IT-NCBC-R2-01 taken 5/31/85 at 2315 no preservatives

2,3,7,8-TCDD DL < = 0.1 ppb

Total isomers of tetra-, penta-, & hexa-chlorodibenzo-p-dioxins DL < = 0.1 ppb

Total isomers of tetra-, penta-, & hexa-chloro-dibenzofurans DL < = 0.1 ppb

Modified CAG list DL < = 10 ppb

Modified PPL list DL < = 1 ppm

Organics indigenous to herbicide orange DL < = 10 ppb

Sample # IT-NCBC-R1-03 taken 6/6/85 at 2210 no preservatives

2,3,7,8-TCDD DL < = 0.1 ppb

Cooler No.: NCBC #2
Date Shipped: 6/14/85
Federal Express Airbill No.: 289-581-106

PACKING LIST

USAF SAMPLING & ANALYTIC PROGRAM
ENVIRONMENTAL RESTORATION & TECHNOLOGY
RESEARCH & TEST EVALUATION PROJECT

EG&G Idaho, Inc.
Code Orange/USAF Project Trailer
Naval Construction Battalion Center
Gulfport, MS 39501
601/864-0056

Quant.	Container	Sample # / Description
2	16 oz jars	IT-NCBC-R3-01 Run 3 soil prior to pyrolysis
2	16 oz jars	IT-NCBC-R4-01 Run 4 soil prior to pyrolysis
2	16 oz jars	IT-NCBC-R5-01 Run 5 soil prior to pyrolysis
6	TOTAL CONTAINERS	

Requested Analyses:

Sample # IT-NCBC-R3-01 taken 5/31/85 at 2330 no preservatives
Sample # IT-NCBC-R4-01 taken 5/31/85 at 2345 no preservatives
Sample # IT-NCBC-R5-01 taken 5/31/85 at 2400 no preservatives

2,3,7,8-TCDD DL < = 0.1 ppb

Total isomers of tetra-, penta-, & hexa-chlorodibenzo-p-dioxins DL < = 0.1 ppb

Total isomers of tetra-, penta-, & hexa-chloro-dibenzofurans DL < = 0.1 ppb

Modified CAG list DL < = 10 ppb

Modified PPL list DL < = 1 ppm

Organics indigenous to herbicide orange DL < = 10 ppb

Cooler No.: NCBC #3
Date Shipped: 6/14/85
Federal Express Airbill No.: 289-581-106

PACKING LIST

USAF SAMPLING & ANALYTIC PROGRAM
ENVIRONMENTAL RESTORATION & TECHNOLOGY
RESEARCH & TEST EVALUATION PROJECT

EG&G Idaho, Inc.
Code Orange/USAF Project Trailer
Naval Construction Battalion Center
Gulfport, MS 39501
601/864-0056

Quant.	Container	Sample # / Description
2	16 oz jars	IT-NCBC-R1-02 Run 1 soil after pyrolysis
2	16 oz jars	IT-NCBC-R1-09 Run 1 front half of 1st gas carbon bed
2	16 oz jars	IT-NCBC-R1-09A Run 1 back half of 1st gas carbon bed
6	TOTAL CONTAINERS	

Requested Analyses:

Sample # IT-NCBC-R1-02 taken 6/5/85 at 0230 no preservatives
Sample # IT-NCBC-R1-09 taken 6/7/85 at 0520 no preservatives
Sample # IT-NCBC-R1-09A taken 6/7/85 at 0510 no preservatives

2,3,7,8-TCDD DL < = 0.1 ppb

Total isomers of tetra-, penta-, & hexa-chlorodibenzo-p-dioxins DL < = 0.1 ppb

Total isomers of tetra-, penta-, & hexa-chloro-dibenzofurans DL < = 0.1 ppb

Modified CAG list DL < = 10 ppb

Modified PPL list DL < = 1 ppm

Organics indigenous to herbicide orange DL < = 10 ppb

If the above tests result in concentrations greater than those limits set for any of the contaminants in RCRA Sec. 261.24, Table I (EP Toxicity), then perform an EP Toxicity Test.

PACKING LIST

Cooler No.: NCBC #4
Date Shipped: 6/14/85
Federal Express Airbill No.: 353-895-986

TO: California Analytical Laboratories, Inc.
2544 Industrical Blvd.
West Sacramento, CA 95691

FROM: USAF Sampling & Analytical Program
Environmental Restoration & Technology
Research & Test Evaluation Project

EG&G Idaho, Inc.
Code Orange/USAF Project Trailer
Naval Construction Battalion Center
Gulfport, MS 39501
601/864-0056

Ref: RFP # C85-130686

Quant.	Sample # / Description
1	IT-NCBC-R2-11 / VOST, TENAX TRIP BLANK
1	IT-NCBC-R2-12 / VOST, TENAX/CHARCOAL TRIP BLANK
1	IT-NCBC-R2-13 / VOST, TENAX, #1 GRAB
1	IT-NCBC-R2-14 / VOST, TENAX/CHARCOAL #1 GRAB
1	IT-NCBC-R2-15 / VOST, TENAX FIELD BLANK
1	IT-NCBC-R2-16 / VOST, TENAX/CHARCOAL FIELD BLANK
1	IT-NCBC-R2-17 / VOST, TENAX GRAB #2
1	IT-NCBC-R2-18 / VOST, TENAX/CHARCOAL GRAB #2
1	IT-NCBC-R2-19 / VOST, TENAX GRAB #3
1	IT-NCBC-R2-20 / VOST, TENAX/CHARCOAL GRAB #3
1	IT-NCBC-R2-21 / VOST, TENAX GRAB #4
1	IT-NCBC-R2-22 / VOST, TENAX/CHARCOAL GRAB #4
1	IT-NCBC-R2-23 / VOST, TENAX GRAB #5
1	IT-NCBC-R2-24 / VOST, TENAX/CHARCOAL GRAB #5
1	IT-NCBC-R2-25 / VOST, TENAX GRAB #6
1	IT-NCBC-R2-26 / VOST, TENAX/CHARCOAL GRAB #6
1	IT-NCBC-R2-29 STACK TEST XAD-2 SAMPLE
1	IT-NCBC-R2-30 STACK TEST XAD-2 FIELD BLANK
1	IT-NCBC-R2-33 ACETONE RINSE-PROBE, FILTER, CONDENSOR
1	IT-NCBC-R2-34 ACETONE RINSE FIELD BLANK
22	TOTAL SAMPLES

Cooler No.: NCBC #4
Page 2

Requested Analyses:

Sample #'s IT-NCBC-R2-11 to IT-NCBC-R2-26 taken 6/12/85 from 2300 to 2400 and 6/13/85 from 0000 to 0500. Preserved with ice.

Analyze for volatile organics DL < = 1 ppm.

SAMPLE # IT-NCBC-R2-29
IT-NCBC-R2-30
IT-NCBC-R2-31
IT-NCBC-R2-32
IT-NCBC-R2-33
IT-NCBC-R2-34

Taken from 6/12/85 at 2300 to 6/13/85 at 0500. Preserved with ice.

Combine extract from sample IT-NCBC-R2-29 (XAD-2) with condensate sample IT-NCBC-R2-31 and rinsate sample IT-NCBC-R2-33. Combine extract from IT-NCBC-R2-30 (XAD-2 blank) with condensate blank sample IT-NCBC-R2-32 and with rinsate blank sample IT-NCBC-R2-34.

Analyze for: 2,3,7,8-TCDD DL < = 0.1 ppb.

Total isomers of tetra-, penta-, & hexa-chlorodibenzo-p-dioxins
DL < = 0.1 ppb.

Total isomers of tetra-, penta-, & hexa-chloro-dibenzofurans
DL < = 0.1 ppb.

PACKING LIST

Cooler No.: NCBC #5
Date Shipped: 6/17/85
Federal Express Airbill No.: 353-895-964

TO: California Analytical Laboratories, Inc.
2544 Industrial Blvd.
West Sacramento, CA 95691

FROM: USAF Sampling & Analytical Program
Environmental Restoration & Technology
Research & Test Evaluation Project

EG&G Idaho, Inc.
Code Orange/USAF Project Trailer
Naval Construction Battalion Center
Gulfport, MS 39501
601/864-0056

Ref: RFP # C85-130686

Quant. Sample # / Description

1	IT-NCBC-R1-04 / IT PHOTOLYSIS RUN 1 SOLVENT AFTER TREATMENT
1	IT-NCBC-R2-03 / IT PHOTOLYSIS RUN 2 SOLVENT BEFORE TREATMENT
1	IT-NCBC-R2-09A / IT PHOTOLYSIS RUN 2 REAR PART OF 1st GAS CARBON
1	IT-NCBC-R2-27 / IT STACK TEST IN-LINE PARTICULATE FILTER
1	IT-NCBC-R2-28 / IT STACK TEST FIELD BLANK PARTICULATE FILTER
1	IT-NCBC-R2-35 / IT STACK TEST KOH (IMPINGER #3)
1	IT-NCBC-R2-36 / IT STACK TEST KOH FIELD BLANK
1	EE-NCBC-R1-01 / HI-VOL SAMPLER #1, RUN 1 OFF-SITE CONTROL FILTER
1	EE-NCBC-R1-02 / HI-VOL SAMPLER #2, RUN 1 ON-SITE CONTROL FILTER
1	EE-NCBC-R1-03 / HI-VOL SAMPLER #3, RUN 1 ON-SITE DOWNWIND FILTER
1	EE-NCBC-R1-04 / HI-VOL SAMPLER #4, RUN 1 OFF-SITE DOWNWIND FILTER

11 TOTAL SAMPLES

Sample # IT-NCBC-R1-04 taken 6/7/85 at 0430. 1, 1/2 gallon jug. No preservatives.

Analyze for: 2,3,7,8-TCDD DL < = 0.1 ppb.

Total isomers of tetra-, penta-, & hexa-chlorodibenzo-p-dioxins
DL < = 0.1 ppb.

Total isomers of tetra-, penta-, & hexa-chloro-dibenzofurans DL < = 0.1 pp

Modified CAG list DL < = 10 ppb.

Modified PPL list DL < = 1 ppm.

Organic indigenous to herbicide orange (Appendix D) DL < = 10 ppb.

Suspended solids content.

Sample # IT-NCBC-R2-03 taken 6/14/85 at 1800. 1, 16 oz jar. No preservatives.

Analyze for: 2,3,7,8-TCDD DL < = 0.1 ppb.

Sample # IT-NCBC-R2-09A taken 6/13/85 at 1950. 2, 16 oz jars. No preservatives.

Analyze for: 2,3,7,8-TCDD DL < = 0.1 ppb.

Total isomers of tetra-, penta-, & hexa-chlorodibenzo-p-dioxins
DL < = 0.1 ppb.

Total isomers of tetra-, penta-, & hexa-chloro-dibenzofurans
DL < = 0.1 ppb.

Modified CAG list DL < = 10 ppb.

Modified PPL list DL < = 1 ppm.

Organics indigenous to herbicide orange (Appendix D) DL < = 10 ppb.

If the above test result in concentrations greater than those limits set for any of the contaminants in RCRA Sec. 261.24, Table I (EP Toxicity), then perform an EP Toxicity Test.

Total amount of carbon.

Sample #'s IT-NCBC-R2-27 and IT-NCBC-R2-28 taken between 2300 on 6/12/85 and 0500 on 6/13/85. 1, 16 oz jar each. 1, petri dish each. No preservatives. IT-NCBC-R2-27 has an initial tare of 0.2533 g. IT-NCBC-R2-28 has an initial tare of 0.2543 g.

Analyze for: Particulate loading DL < = 0.0001 gr/scf.

NCBC Cooler #5

Page 3

Sample #'s IT-NCBC-R2-35 and IT-NCBC-R2-36 taken between 2300 on 6/12/85 and 0500 on 6/13/85. 1, 16 oz jar each. No preservatives.

Analyze for: Hydrogen chloride DL < = 1.0 ppm.

Sample #'s EE-NCBC-R1-01, EE-NCBC-R1-02, EE-NCBC-R1-03, and EE-NCBC-R1-04. Each contains a plastic bag with a particulate filter in a folder. Initial tares are listed below:

EE-NCBC-R1-01 (filter # 1131): 3.03360 g.
EE-NCBC-R1-02 (filter # 1132): 3.02484 g.
EE-NCBC-R1-03 (filter # 1133): 2.98913 g.
EE-NCBC-R1-04 (filter # 1134): 3.03537 g.

Volumes of air passing through each filter are as follows:

EE-NCBC-R1-01: 4845.99 cu m
EE-NCBC-R1-02: 4635.54 cu m (estimate)
EE-NCBC-R1-03: 4845.99 cu m
EE-NCBC-R1-04: 2877.06 cu m

Analyze for: Total suspended particulates.

2,3,7,8-TCDD DL < = 0.1 ppb.

PACKING LIST

Cooler No.: NCBC #6
Date Shipped: 6/17/85
Federal Express Airbill No.: 298-581-110

TO: Battelle Analytical Laboratories, Inc.
Columbus, OH

FROM: USAF Sampling & Analytical Program
Environmental Restoration & Technology
Research & Test Evaluation Project

EG&G Idaho, Inc.
Code Orange/USAF Project Trailer
Naval Construction Battalion Center
Gulfport, MS 39501
601/864-0056

Quant. Sample # / Description

1	IT-NCBC-R1-01 / IT RUN 1 SOIL BEFORE TREATMENT
1	IT-NCBC-R1-02 / IT RUN 1 SOIL AFTER TREATMENT
1	IT-NCBC-R1-04 / IT RUN 1 SCRUBBER SOLVENT BEFORE PHOTOLYSIS
3	TOTAL SAMPLES

Sample # IT-NCBC-R1-01 taken 6/3/85 at 2300. 2, 16 oz jars packed in 2-gallon paint cans. No preservatives.

Analyze for: 2,3,7,8-TCDD DL < = 0.1 ppb.

Total isomers of tetra-, penta-, & hexa-chlorodibenzo-p-dioxins
DL < = 0.1 ppb.

Total isomers of tetra-, penta-, & hexa-chloro-dibenzofurans
DL < = 0.1 ppb.

Modified CAG list DL < = 10 ppb.

Modified PPL list DL < = 1 ppm.

Organics indigenous to herbicide orange (Appendix D) DL < = 10 ppb.

Cooler No.: NCBC #6
Page 2

Sample # IT-NCBC-R1-02 taken 6/5/85 at 0230. Contains 2, 16 oz jars packed in 2-gallon paint cans. No preservatives.

Analyze for: 2,3,7,8-TCDD DL < = 0.1 ppb.

Total isomers of tetra-, penta-, & hexa-chlorodibenzo-p-dioxins
DL < = 0.1 ppb.

Total isomers of tetra-, penta-, & hexa-chloro-dibenzofurans
DL < = 0.1 ppb.

Modified CAG list DL < = 10 ppb.

Modified PPL list DL < = 1 ppm.

Organics indigenous to herbicide orange (Appendix D) DL < = 10 ppb.

If the above test results in concentrations greater than those limits set for any of the contaminants in RCRA SEc. 261.24, Table I (EP Toxicity), then perform an EP Toxicity Test.

Sample # IT-NCBC-R1-04 taken 6/7/85 at 0430. Contains 1, 1/2-gallon jug packed in a styrofoam cooler. No preservatives.

Analyze for: 2,3,7,8-TCDD DL < = 0.1 ppb.

Total isomers of tetra-, penta-, & hexa-chlorodibenzo-p-dioxins
DL < = 0.1 ppb.

Total isomers of tetra-, penta-, & hexa-chloro-dibenzofurans
DL < = 0.1 ppb.

Modified CAG list DL < = 10 ppb.

Modified PPL list DL < = 1 ppm.

Organics indigenous to herbicide orange (Appendix D) DL < = 10 ppb.

Suspended solids content.

PACKING LIST

Cooler No.: NCBC #7
Date Shipped: 6/17/85
Federal Express Airbill No.: 353-895-964

TO: California Analytical Laboratories, Inc.
2544 Industrial Blvd.
West Sacramento, CA 95691

FROM: USAF Sampling & Analytical Program
Environmental Restoration & Technology
Research & Test Evaluation Project

EG&G Idaho, Inc.
Code Orange/USAF Project Trailer
Naval Construction Battalion Center
Gulfport, MS 39501
601/864-0056

Ref: RFP # C85-130686

Quant. Sample # / Description

1	HU-NCBC-R1-02 / HUBER RUN 1 SOIL AFTER TREATMENT
1	IT-NCBC-R2-02 / IT RUN 2 SOIL AFTER TREATMENT
1	IT-NCBC-R2-09 / IT RUN 2 FRONT PART OF 1st GAS CARBON BED
1	HU-NCBC-R1-09 / HUBER RUN 1 FIRST GAS CARBON DRUM
1	HU-NCBC-R1-09A / HUBER RUN 1 SECOND (DOWNSTREAM) GAS CARBON DRUM
1	IT-NCBC-R3-02 / IT RUN 3 SOIL AFTER TREATMENT
6	TOTAL SAMPLES

Sample HU-NCBC-R1-02 taken 7/14/85 at 0220. 2, 16 oz jars. No preservatives.

Analyze for: 2,3,7,8-TCDD DL < = 0.1 ppb.

Total isomers of tetra-, penta-, & hexa-chlorodibenzo-p-dioxins
DL < = 0.1 ppb.

Total isomers of tetra-, penta-, & hexa-chloro-dibenzofurans
DL < = 0.1 ppb.

Modified CAG list DL < = 10 ppb.

Modified PPL list DL < = 1 ppm.

Organics indigenous to herbicide orange (Appendix D) DL < = 10 ppb.

If the above tests result in concentrations greater than those limits set for any of the contaminants in RCRA Sec. 261.24, Table I (EP Toxicity), then perform an EP Toxicity Test.

Sample # IT-NCBC-R2-02 taken 6/13/85 at 0624. 2, 16 oz jars. No preservatives.

Analyze for: 2,3,7,8-TCDD DL < = 0.1 ppb.

Total isomers of tetra-, penta-, & hexa-chlorodibenzo-p-dioxins
DL < = 0.1 ppb.

Total isomers of tetra-, penta-, & hexa-chloro-dibenzofurans
DL < = 0.1 ppb.

Modified CAG list DL < = 10 ppb.

Modified PPL list DL < = 1 ppm.

Organics indigenous to herbicide orange (Appendix D) DL < = 10 ppb.

If the above tests result in concentrations greater than those limits set for any of the contaminants in RCRA Sec. 261.24, Table I (EP Toxicity), then perform an EP Toxicity Test.

Sample # IT-NCBC-R2-09 taken 6/13/85 at 1950. Contains 2, 16 oz jars. No preservatives.

Analyze for: 2,3,7,8-TCDD DL < = 0.1 ppb.

Total isomers of tetra-, penta-, & hexa-chlorodibenzo-p-dioxins
DL < = 0.1 ppb.

Total isomers of tetra-, penta-, & hexa-chloro-dibenzofurans
DL < = 0.1 ppb.

Modified CAG list DL < = 10 ppb.

Modified PPL list DL < = 1 ppm.

Organics indigenous to herbicide orange (Appendix D) DL < = 10 ppb.

Total amount of carbon present.

Sample # HU-NCBC-R1-09 taken 6/14/85 at 0315. Contains 2, 16 oz bottles. No preservatives.

Analyze for: 2,3,7,8-TCDD DL < = 0.1 ppb.

Total isomers of tetra-, penta-, & hexa-chlorodibenzo-p-dioxins
DL < = 0.1 ppb.

Total isomers of tetra-, penta-, & hexa-chloro-dibenzofurans
DL < = 0.1 ppb.

Modified CAG list DL < = 10 ppb.

Modified PPL list DL < = 1 ppm.

Organics indigenous to herbicide orange (Appendix D) DL < = 10 ppb.

Total amount of carbon present.

Hydrogen chloride DL < = 1 ppm.

Nitrogen oxide DL < = 1 ppm.

Sample # HU-NCBC-R1-09A taken 6/14/85 at 0315. Contains 2, 16 oz jars. No preservatives

Analyze for: 2,3,7,8-TCDD DL < = 0.1 ppb.

Total isomers of tetra-, penta-, & hexa-chlorodibenzo-p-dioxins
DL < = 0.1 ppb.

Total isomers of tetra-, penta-, & hexa-chloro-dibenzofurans
DL < = 0.1 ppb.

Modified CAG list DL < = 10 ppb.

Modified PPL list DL < = 1 ppm.

Organics indigenous to herbicide orange (Appendix D) DL < = 10 ppb.

Total amount of carbon present.

Hydrogen chloride DL < = 1 ppm.

Nitrogen oxide DL < = 1 ppm.

Sample # IT-NCBC-R3-02 taken 6/14/85 at 0330. Contains 2, 16 oz jars. No preservatives

Analyze for: 2,3,7,8-TCDD DL < = 0.1 ppb.

Total isomers of tetra-, penta-, & hexa-chlorodibenzo-p-dioxins
DL < = 0.1 ppb.

Total isomers of tetra-, penta-, & hexa-chloro-dibenzofurans
DL \leq 0.1 ppb.

Modified CAG list DL \leq 10 ppb.

Modified PPL list DL \leq 1 ppm.

Organics indigenous to herbicide orange (Appendix D) DL \leq 10 ppb.

If the above tests result in concentrations greater than those limits set for any of the contaminants in RCRA Sec. 261.24, Table I (EP Toxicity), then perform an EP Toxicity Test.

PACKING LIST

Cooler No.: NCBC #8
Date Shipped: 6/21/85
Federal Express Airbill No.: 289-581-132

TO: California Analytical Laboratories, Inc.
2544 Industrial Blvd.
West Sacramento, CA 95691

FROM: USAF Sampling & Analytical Program
Environmental Restoration & Technology
Research & Test Evaluation Project

EG&G Idaho, Inc.
Code Orange/USAF Project Trailer
Naval Construction Battalion Center
Gulfport, MS 39501
601/864-0056

Ref: RFP # C85-130686

Quant. Sample # / Description

1	IT-NCBC-R2-04 / IT RUN 2 SOLVENT AFTER PHOTOLYSIS
1	IT-NCBC-R3-09 / IT RUN 3 FIRST 1/2 GAS CARBON BED
1	IT-NCBC-R3-09A / IT RUN 3 LAST 1/2 GAS CARBON BED
1	IT-NCBC-R4-09 / IT RUN 4 FIRST 1/2 GAS CARBON BED
1	IT-NCBC-R4-09A / IT RUN 4 LAST 1/2 GAS CARBON BED

5 TOTAL SAMPLES

Sample # IT-NCBC-R2-04 taken 6/15/85 at 0315. Contains 1, 80 oz amber bottle.
No preservatives.

Analysis for: 2,3,7,8-TCDD DL < = 0.1 ppb.

Total isomers of tetra-, penta-, & hexa-chlorodibenzo-p-dioxins
DL < = 0.1 ppb.

Total isomers of tetra-, penta-, & hexa-chloro-dibenzofurans
DL < = 0.1 ppb.

Modified CAG list DL < = 10 ppb.

Modified PPL list DL < = 1 ppm.

Organics indigenous to herbicide orange (Appendix D) DL < = 10 ppb.

Suspended solids content.

NCBC Cooler #8
Page 2

Sample # IT-NCBC-R3-09 taken 6/15/85 at 0330. Consists of 2, 16 oz jars.
No preservatives.

Sample # IT-NCBC-R3-09A taken 6/15/85 at 0340. Consists of 2, 16 oz jars.
No preservatives.

Sample # IT-NCBC-R4-09 taken 6/18/85 at 1830. Consists of 2, 16 oz jars.
No preservatives.

Sample # IT-NCBC-R4-09A taken 6/18/85 at 1845. Consists of 2, 16 oz jars.
No preservatives.

Analysis for: 2,3,7,8-TCDD DL < = 0.1 ppb.

Total isomers of tetra-, penta-, & hexa-chlorodibenzo-p-dioxins
DL < = 0.1 ppb.

Total isomers of tetra-, penta-, & hexa-chloro-dibenzofurans
DL < = 0.1 ppb.

Modified CAG list DL < = 10 ppb.

Modified PPL list DL < = 1 ppm.

Organics indigenous to herbicide orange DL < = 10 ppb.

Total amount of carbon.

If the above tests result in concentrations greater than those limits set for any of the contaminants in RCRA Sec. 261.24, Table I (EP Toxicity), then perform an EP Toxicity Test.

PACKING LIST

Cooler No.: NCBC #9
Date Shipped: 6/21/85
Federal Express Airbill No.: 289-581-132

TO: California Analytical Laboratories, Inc.
2544 Industrial Blvd.
West Sacramento, CA 95691

FROM: USAF Sampling & Analytical Program
Environmental Restoration & Technology
Research & Test Evaluation Project

EG&G Idaho, Inc.
Code Orange/USAF Project Trailer
Naval Construction Battalion Center
Gulfport, MS 39501
601/864-0056

Ref: RFP # C85-130686

Quant. Sample # / Description

2	IT-NCBC-R3-04 / RUN 3 SOLVENT AFTER PHOTOLYSIS (16 hrs.)
1	IT-NCBC-R4-02 / RUN 4 SOIL AFTER PYROLYSIS
1	IT-NCBC-R5-02 / RUN 5 SOIL AFTER PYROLYSIS

4 TOTAL CONTAINERS

Sample # IT-NCBC-R3-04 taken 6/19/85 at 0410. Consists of 2, 80 oz amber bottles.
No preservatives.

Analyze for: 2,3,7,8-TCDD DL < = 0.1 ppb.

Total isomers of tetra-, penta-, and hexa-chlorodibenzo-p-dioxins
DL < = 0.1 ppb.

Total isomers of tetra-, penta-, and hexa-dibenzofurans DL < = 0.1 ppb.

Modified CAG list DL < = 10 ppb.

Modified PPL list DL < = 1 ppm.

Organics indigenous to herbicide orange (Appendix D) DL < = 10 ppb.

Suspended solids content.

NCBC Cooler #9
Page 2

Sample # IT-NCBC-R4-02 taken 6/18/85 at 0310. Consists of 2, 16 oz jars.
No preservatives.

Sample # IT-NCBC-R5-02 taken 6/19/85 at 0410. Consists of 2, 16 oz jars.
No preservatives.

Analyze for: 2,3,7,8-TCDD DL < = 0.1 ppb.

Total isomers of tetra-, penta-, and hexa-chlorodibenzo-p-dioxins
DL < = 0.1 ppb.

Total isomers of tetra-, penta-, and hexa-dibenzofurans DL < = 0.1 ppb.

Modified CAG list DL < = 10 ppb.

Modified PPL list DL < = 1 ppm.

Organics indigenous to herbicide orange (Appendix D) DL < = 10 ppb.

If the above tests result in concentrations greater than those limits set for any of the contaminants in RCRA Sec. 261.24, Table I (EP Toxicity), then perform an EP Toxicity Test.

PACKING LIST

Cooler No.: NCBC #10
Date Shipped: 6/21/85
Federal Express Airbill No.: 289-581-132

TO: California Analytical Laboratories, Inc.
2544 Industrial Blvd.
West Sacramento, CA 95691

FROM: USAF Sampling & Analytical Program
Environmental Restoration & Technology
Research & Test Evaluation Project

EG&G Idaho, Inc.
Code Orange/USAF Project Trailer
Naval Construction Battalion Center
Gulfport, MS 39501
601/864-0056

Ref: RFP # C85-130686

Quant. Sample # / Description

1	IT-NCBC-R3-03 / RUN 3 SOLVENT BEFORE PHOTOLYSIS
1	IT-NCBC-R5-09 / RUN 5 FIRST 1/2 GAS CARBON BED
1	IT-NCBC-R5-09A / RUN 5 LAST 1/2 GAS CARBON BED
1	IT-NCBC-R1-5-10 / RUNS 1 through 5 GAS CARBON GUARD BED FILTER
2	IT-NCBC-R1-5-06 / RUN 1 through 5 COMPOSITED SCRUBBER FILTER SOLIDS

6	TOTAL CONTAINERS

Sample # IT-NCBC-R3-03 taken 6/17/85 at 1915. Consists of 1, 16 oz jar.
No preservatives.

Analysis for: 2,3,7,8-TCDD to DL < = 0.1 ppb.

Sample # IT-NCBC-R5-09 taken 6/19/85 at 0300. Consists of 2, 16 oz jars.
No preservatives.

Sample # IT-NCBC-R5-09A taken 6/19/85 at 0315. Consists of 2, 16 oz jars.
No preservatives.

Sample # IT-NCBC-R1-5-10 taken 6/19/85 at 0330. Consists of 2, 16 oz jars.
No preservatives.

Cooler No.: NCBC #10
Page 2

Analyses for: 2,3,7,8-TCDD to DL < = 0.1 ppb.

Total isomers of tetra-, penta-, and hexa-chlorodibenzo-p-dioxins
DL < = 0.1 ppb.

Total isomers of tetra-, penta-, and hexa-dibenzofurans DL < = 0.1 ppb.

Modified CAG list DL < = 10 ppb.

Modified PPL list DL < = 1 ppm.

Organics indigenous to herbicide orange (Appendix D) DL < = 10 ppb.

Total amount of carbon.

If the above tests result in concentrations greater than those limits set for any of the contaminants in RCRA Sec. 261.24, Table I (EP Toxicity), then perform an EP Toxicity test.

Sample # IT-NCBC-R1-5-06 taken 6/5/85 through 6/19/85. Consists of 3, 16 oz jars.
No preservatives.

Analyses for: 2,3,7,8-TCDD to DL < = 0.1 ppb.

Hydrocarbon used as scrubber/quench liquid (scrubber solvent)
to DL < = 1 ppm.

Modified PPL list to DL < = 1 ppm.

Total amount present.

Packing List

Cooler No. 11

Date Shipped: 6/28/85

Federal Express Airbill No.: 353-895-942

TO: California Analytical Laboratories, Inc.
2544 Industrial Blvd.
West Sacramento, CA 95691

FROM: USAF Sampling & Analytic Program
Environmental Restoration & Technology
Research & Test Evaluation Project

EG&G Idaho, Inc.
Code Orange/USAF Project Trailer
Naval Construction Battalion Center
Gulfport, MS 39501
601/864-0056

Ref: RFP # C85-130-130686

Quant. Sample # / Description

1	HU-NC8C-R1-01 / SOIL BEFORE DESTRUCTION PROC. (HUBER RUN #1)
1	HU-NC8C-R2-01 / SOIL BEFORE DESTRUCTION PROC. (HUBER RUN #2)
1	HU-NC8C-R2-02 / SOIL AFTER DESTRUCTION PROC. (HUBER RUN #2)
1	HU-NC8C-R2-09 / HUBER RUN #2 FIRST GAS DRUM
1	HU-NC8C-R2-09A / HUBER RUN #2 SECOND GAS DRUM
1	HU-NC8C-R2-03 / HUBER RUN #2 BAGHOUSE PARTICULATE
1	EE-NC8C-R2-01 / HI VOL. SAMPLER #1, RUN #2 OFF-SITE CONTROL
1	EE-NC8C-R2-02 / HI VOL. SAMPLER #2, RUN #2 ON-SITE CONTROL
1	EE-NC8C-R2-03 / HI VOL. SAMPLER #3, RUN #2 ON-SITE DOWNWIND
1	EE-NC8C-R2-04 / HI VOL. SAMPLER #4, RUN #2 OFF-SITE DOWNWIND
1	EE-NC8C-R3-01 / HI VOL. SAMPLER #1, RUN #3 OFF-SITE CONTROL
1	EE-NC8C-R3-02 / HI VOL. SAMPLER #2, RUN #3 ON-SITE CONTROL
1	EE-NC8C-R3-03 / HI VOL. SAMPLER #3, RUN #3 ON-SITE DOWNWIND
1	EE-NC8C-R3-04 / HI VOL. SAMPLER #4, RUN #3 OFF-SITE DOWNWIND

14 TOTAL SAMPLES

Sample HU-NCSC-R1-01 taken 6/12/85 at 2135. 2, 16 oz jars. No preservatives.

Sample HU-NCSC-R2-01 taken 6/21/85 at 0130. 2, 16 oz jars. No preservatives.

Analyze for: 2,3,7,8-TCDD to DL < or = 0.1 ppb.

Total isomers of tetra-, penta-, and hexachlorodibenzo p-dioxins, to DL < or = 0.1 ppb.

Total isomers of tetra-, penta-, and hexachlorodibenzofurans to DL < or = 0.1 ppb.

Modified CAG list to DL < or = 10 ppb.

Modified PPL list to DL < or = 1 ppm.

Organics indigenous to herbicide orange (Appendix D) to LD, or = 10 ppb.

Sample HU-NCSC-R2-02 taken 6/24/85 at 1910. 2, 16 oz jars. No preservatives.

Sample HU-NCSC-R2-03 taken 6/24/85 at 2020. 2, 16 oz jars. No preservatives.

Analyze for: 2,3,7,8-TCDD to DL < or = 0.1 ppb.

Total isomers of tetra-, penta-, and hexachlorodibenzo p-dioxins to DL < or = 0.1 ppb.

Total isomers of tetra-, penta-, and hexadibenzofurans to DL < or = 0.1 ppb.

Modified CAG list to DL < or = 10 ppb.

Modified PPL list to DL < or = 1 ppm.

Organics indigenous to herbicide orange (Appendix D) to a DL < or = 10 ppb.

If the above tests result in concentrations greater than those limits set for any of the contaminants in RCRA Sec. 261.24, Table I (EP Toxicity), then perform an EP Toxicity Test.

Sample No's EE-NCBC-R2-01, EE-NCBC-R2-02, EE-NCBC-R2-03, EE-NCBC-R2-04, EE-NCBC-R3-01, EE-NCBC-R3-02, EE-NCBC-R3-03, EE-NCBC-R3-04, each consist of a particulate filter in a folder in a plastic bag. Initial tares are listed below.

Sample No.	Filter No.	Initial Tare	Volume Sampled
EE-NCBC-R2-01	1135	3.01042	4,547.10 ^a
EE-NCBC-R2-02	1136	3.01013	4,637.07 (est.)
EE-NCBC-R2-03	1137	2.92856	4,547.10 ^a
EE-NCBC-R2-04	1138	2.96794	4,721.23 ^b
EE-NCBC-R3-01	1139	2.96849	1,761.05
EE-NCBC-R3-02	1140	2.95780	1,596.16 (est.)
EE-NCBC-R3-03	1141	2.97475	1,761.05
EE-NCBC-R3-04	1143	1.97590	1,828.50

a. Later found in error; corrected value is 4562.

b. Later found in error; corrected value is 4735.

Analyze Above Samples For:

Total suspended particulates
2,3,7,8-TCDD to DL < or =0.1 ppb.

Sample HU-NCBC-R2-09 taken 6/24/85 at 1940. 2, 16 oz jars. No preservatives.

Sample HU-NCBC-R2-09A taken 6/24/85 at 1900. 2, 16 oz jars. No preservatives.

Analyze for: 2,3,7,8-TCDD to DL < or = 0.1 ppb.

Total isomers of tetra-, penta-, and hexachlorodibenzo-p-dioxins. To DL < or = 0.1 ppb..

Total isomers of tetra-, penta-, and hexachlorodibenzofurans to DL < or = 0.1 ppb.

Modified CAG list to DL < or = 10 ppb.

Modified PPL list to DL < or = 1 ppb.

Total amount of carbon present.

Hydrogen chloride to DL < or = 1 ppm.

Nitrogen oxide to DL < or = 1 ppm.

PACKING LIST

Cooler No. 12
Date Shipped: 6/28/85
Federal Express Airbill No. 353-895-920

TO: Battelle Columbus Laboratories, Inc.
Attn: Dr. David Miller
505 King Ave.
Columbus, OH 43201

FROM: USAF Sampling & Analytic Program
Environmental Restoration & Technology
Research & Test Evaluation Project

EG&G Idaho, Inc.
Code Orange / USAF Project Trailer
Naval Construction Battalion Center
Gulfport, MS 39501
601/864-0056

Quant. Sample # / Description

1	HU-NCBC-R2-02/HUBER RUN #2, SOIL AFTER TREATMENT
1	HU-NCBC-R1-01/HUBER RUN #1, SOIL BEFORE TREATMENT
1	IT-NCBC-R2-04/IT RUN #2 SOLVENT AFTER PHOTOLYSIS

3	TOTAL SAMPLES

Analyze for: 2,3,7,8-TCDD to DL < or = 0.1 ppb.

Total isomers of tetra-, penta-, and hexachlorodibenzo-p-dioxins to DL < or = 0.1 ppb.

Total isomers of tetra-, penta-, and hexachlorodibenzofurans to DL < or = 0.1 ppb.

Modified CAG list to DL < or = 10 ppb.

Modified PPL list to DL < or = 1 ppm.

Organics indigenous to herbicide orange (Appendix D) to DL < or = 10 ppb.

In addition:

Sample HU-NCBC-R2-02 taken 6/24/85 at 1910. 2, 16 oz jars. No preservatives. Requires that if any of the above tests results in concentrations greater than those limits set for any of the contaminants in RCRA Sec. 261.24, Table I (EP Toxicity), an EP Toxicity Test should be run.

Sample IT-NCRC-R2-04 taken 6/15/85 at 0315. 1, 80 oz amber jug. Non preserved. Requires suspended solids analyses.

Sample HU-NCBC-R1-01 taken 6/12/85 at 2135. 2, 16 oz jars. Non-preserved. Requires no additional analyses.

APPENDIX N

CALIFORNIA ANALYTICAL LABORATORIES PROTOCOL FOR ANALYSIS OF DIOXINS AND FURANS

	<u>Page</u>
Exhibit 1 Analytical Methods for 2,3,7,8-TCDD	129
Exhibit 2 QA/QC Requirements for 2,3,7,8-TCDD	155
Exhibit 3 QA/QC Requirements for Dioxin and Furan Total Isomer Analysis	162
Exhibit 4 Sources of Standards and Internal Standards	163

The documents contained in this appendix were published according to their own internal style, which deviates from ESL format. They have, therefore, been published without editing.

Exhibit D - Analytical Methods

**2,3,7,8-tetrachlorodibenzo-p-dioxin in Soil and
Sediment by High Resolution Gas Chromatography/
Low Resolution Mass Spectrometry**

1. SCOPE AND APPLICATION

- 1.1 This method provides procedures for detection and measurement of 2,3,7,8-tetrachlorodibenzo-p-dioxin (2,3,7,8-TCDD; CAS Registry Number 1746-01-6; STORET Number 34675) at concentrations of 1 $\mu\text{g/kg}$ to 200 $\mu\text{g/kg}$ in 10-g aliquots of wet soil and sediment. The use of 1-g aliquots permits measurement of concentration up to 2000 $\mu\text{g/kg}$.
- 1.2 The minimum measurable concentration is estimated to be 0.3 $\mu\text{g/kg}$, but is dependent on interfering compounds present in the sample matrix.
- 1.3 This method is designed for use by analysts who are experienced in the use of a gas chromatograph/mass spectrometer.
- 1.4 CAUTION: Because 2,3,7,8-TCDD is extremely toxic, safety procedures described in Section 5 of this method should be followed to prevent exposure of laboratory personnel to materials containing this compound.

2. SUMMARY OF METHOD

After 50 ng of ^{13}C -labeled 2,3,7,8-TCDD and 10 ng of ^{37}Cl -labeled 2,3,7,8-TCDD are added to a 10 gram aliquot of soil or sediment sample, the wet soil or sediment is mixed with 20 grams of anhydrous sodium sulfate and is extracted with a mixture of hexane and methanol, while the sample aliquot and solvent are agitated continually in a glass jar. Column chromatographic procedures are used to help eliminate sample components that may interfere with detection and measurement of 2,3,7,8-TCDD. The extract is concentrated to 50 μL , and a 2 μL aliquot is injected into a fused silica capillary column in a gas chromatograph (GC) interfaced to a mass spectrometer (MS) that has at least unit resolution at m/z 334.

Identification of 2,3,7,8-TCDD is based on detection of three characteristic ions, measurement of the appropriate relative abundances of two characteristic ions in the molecular ion cluster, and determination of the retention time of the sample analyte relative to the internal standard, $^{13}\text{C}_{12}$ -2,3,7,8-TCDD, contained in the sample extract. The 2,3,7,8-TCDD concentration is determined by measuring the MS response to the sample component relative to the MS response to $^{13}\text{C}_{12}$ -2,3,7,8-TCDD (the internal standard). The labeled internal

standard method presumes that internal standard losses during method procedures are equal to unlabeled TCDD losses. Therefore, the calculated sample 2,3,7,8-TCDD concentration is corrected for losses during sample preparation.

The $^{37}\text{Cl}_4$ -2,3,7,8-TCDD is a surrogate compound that is added to each sample and is analyzed exactly the same as unlabeled TCDD. The accuracy of surrogate compound measurement is used to indicate the accuracy of measurement of unlabeled 2,3,7,8-TCDD in the same sample.

3. DEFINITIONS

- 3.1 Concentration calibration solution -- a solution containing known amounts of the analyte (unlabeled 2,3,7,8-TCDD), the surrogate compound ($^{37}\text{Cl}_4$ -2,3,7,8-TCDD), and the internal standard ($^{13}\text{C}_{12}$ -2,3,7,8-TCDD); it is used to determine instrument response of the analyte and the surrogate compound relative to the internal standard.
- 3.2 Field blank -- a portion of soil/sediment uncontaminated with 2,3,7,8-TCDD.
- 3.3 Rinsate -- a portion of solvent used to rinse sampling equipment and analyzed to demonstrate that samples are not contaminated during sampling.
- 3.4 Internal standard -- $^{13}\text{C}_{12}$ -2,3,7,8-TCDD, which is added to every sample and is present at the same concentration in every blank, quality control sample, and concentration calibration solution. It is added to the soil/sediment sample before extraction and is used to measure the concentrations of analyte and surrogate compound.
- 3.5 Laboratory reagent blank -- a blank prepared by the laboratory by performing all analytical procedures except addition of a sample aliquot to the extraction vessel.
- 3.6 Performance check mixture -- a mixture of known amounts of selected standard compounds; it is used to demonstrate continued acceptable performance of the GC/MS/DS system.
- 3.7 Performance evaluation sample -- a soil or sediment sample containing a known amount of unlabeled 2,3,7,8-TCDD. It is distributed by EPA to potential contractor laboratories who must analyze it and obtain acceptable results before being awarded a contract for sample analyses (see IFB Pre-Award Bid Confirmations). It may also be included as an unspecified QC sample in any sample batch submitted to the lab for analysis.

3.8 Response factor -- response of the mass spectrometer to a known amount of an analyte relative to a known amount of an internal standard.

3.9 Signal-to-noise ratio -- The ratio of the area of the analyte signal to the area of the random background signal; it is determined by integrating the signal for a characteristic ion in a region of the selected ion current profile where only random noise is observed and relating that area to the area measured for a positive response for the same ion. The same number of spectra must be integrated for both areas. (The ratio of peak heights may be used instead of peak areas.)

3.10 Surrogate compound -- $^{37}\text{Cl}_4$ -2,3,7,8-TCDD, which is added to the soil/sediment before analysis. Its concentration is measured in each sample, and the accuracy of that concentration measurement is calculated to indicate the accuracy of the unlabeled 2,3,7,8-TCDD measurement.

4. INTERFERENCES

Any organic compound that is within 10 scans (at the rate of 1 scan/second) of m/z 257, 320, 322, or 328 of the internal standard and produces any of the three ions monitored to detect 2,3,7,8-TCDD, is a potential interference. Most frequently encountered interferences are other sample components that are extracted along with TCDD. Because very low levels of TCDD must be measured, elimination of interference is essential. High purity reagents and solvents must be used and all equipment must be scrupulously cleaned. Laboratory reagent blanks (Exhibit E, Quality Control, Section 4) must be analyzed to demonstrate lack of contamination that would interfere with TCDD measurement. Column chromatographic procedures are used to remove some coextracted sample components; these procedures must be performed carefully to minimize loss of TCDD during attempts to enrich its concentration relative to other sample components.

5. SAFETY

5.1 The toxicity or carcinogenicity of each reagent used in this method has not been precisely defined; however, each chemical compound should be treated as a potential health hazard. From this viewpoint, exposure to these chemicals must be reduced to the lowest possible level by whatever means available. The laboratory is responsible for maintaining a file of current OSHA regulations regarding the safe handling of the chemicals specified in this method. A reference file of material data handling sheets should also be made available to all personnel involved in the chemical analysis. Additional references to laboratory safety are identified. (1-3) 2,3,7,8-TCDD has been identified as a suspected human or mammalian carcinogen.

5.2 Each laboratory must develop a strict safety program for handling 2,3,7,8-TCDD. The following laboratory practices are recommended:

5.2.1 Contamination of the laboratory will be minimized by conducting all manipulations in a hood.

5.2.2 The effluents of sample splitters for the gas chromatograph and roughing pumps on the GC/MS should pass through either a column of activated charcoal or through a trap containing oil or high-boiling alcohols.

5.3 The following precautions for safe handling of 2,3,7,8-TCDD in the laboratory are presented as guidelines only, and are based on safe handling practices included in USEPA Method 613.⁽⁴⁾ The precautions for safe handling and use are necessarily general in nature because detailed, specific recommendations can be made only for the particular exposure and circumstances of each individual usage. Assistance in evaluating the health hazards of particular laboratory conditions may be obtained from certain consulting laboratories and from State Departments of Health or of Labor, many of which have an industrial health service. Although 2,3,7,8-TCDD is extremely toxic to laboratory animals, it has been handled for years without injury in analytical and biological laboratories. Techniques used in handling radioactive and infectious materials are applicable to 2,3,7,8-TCDD.

5.3.1 Protective Equipment: Throw-away plastic gloves, apron or lab coat, safety glasses and lab hood adequate for radioactive work.

5.3.2 Training: Workers must be trained in the proper method of removing of contaminated gloves and clothing without contacting the exterior surfaces.

5.3.3 Personal Hygiene: Thorough washing of hands and forearms after each manipulation and before breaks (coffee, lunch, and shift) with any mild soap and plenty of scrubbing action.

5.3.4 Confinement: Isolated work area, posted with signs; segregated glassware and tools; and plastic-backed absorbent paper on benchtops.

5.3.5 Waste: Good technique includes minimizing contaminated waste. Plastic bag liners should be used in waste cans. Janitors should not handle wastes.

5.3.6 Disposal of Wastes: 2,3,7,8-TCDD decomposes above 800°C. Low level waste, such as the absorbent paper and plastic gloves, may be burned in a good incinerator. Water containing gross quantities (milligrams) of 2,3,7,8-TCDD should be packaged securely and disposed through commercial or governmental channels that are capable of handling

high-level or extremely toxic wastes. Liquids should be allowed to evaporate in a good hood and in a disposable container; residues may then be handled as above.

- 5.3.7 Glassware, Tools, and Surfaces: Satisfactory cleaning may be accomplished by rinsing with 1,1,1-trichloroethane, then washing with any detergent and water. Dishwater may be disposed to the sewer. (Also see Section 6.5.)
- 5.3.8 Laundry: Clothing known to be contaminated should be disposed with the precautions described under Section 5.3.6. Lab coats or other clothing worn in 2,3,7,8-TCDD work may be laundered. Clothing should be collected in plastic bags. Persons who convey the bags and launder the clothing should be advised of the hazard and trained in proper handling. The clothing may be put into a washer without contact if the launderer knows the problem. The washer should be run through a cycle before being used again for other clothing. Disposable garments may be used to avoid a laundry problem, but they must be properly disposed or incinerated.
- 5.3.9 Wipe Tests: A useful method to determine cleanliness of work surfaces and tools is to wipe the surface with a piece of filter paper, which is extracted and analyzed by gas chromatography (limit of sensitivity of approximately $0.1 \mu\text{g}$ per wipe). Less than $0.1 \mu\text{g}$ 2,3,7,8-TCDD per wipe indicates acceptable cleanliness; anything higher warrants further cleaning. More than $10 \mu\text{g}$ on a wipe sample indicates an acute hazard that requires prompt cleaning before further use of the equipment or work space and indicates that unacceptable work practices have been employed in the past.
- 5.3.10 Inhalation: Any procedure that may produce airborne contamination must be performed with good ventilation. Gross losses to a ventilation system must not be allowed. Handling of the dilute solutions normally used in analytical and animal work presents no inhalation hazards except in case of an accident. Finely divided soils contaminated with 2,3,7,8-TCDD are hazardous because of the potential for inhalation. Such samples should be handled in a confined environment, such as a hood or glove box, or laboratory personnel should wear masks fitted with a particulate filter and charcoal sorbent.
- 5.3.11 Accidents: Remove contaminated clothing immediately, taking precautions not to contaminate skin or other articles. Wash exposed skin vigorously and repeatedly until medical attention is obtained.

6. APPARATUS AND EQUIPMENT

6.1 Gas Chromatograph/Mass Spectrometer/Data System (GC/MS/DS)

6.1.1 The GC must be capable of temperature programming and be equipped with all required accessories, such as syringes, gases, and a capillary column. The GC injection port must be designed for capillary columns. Splitless or on-column injection technique is recommended. With this method, a 2- μ L injection volume is used consistently. With some GC injection ports, however, 1 μ L may be the maximum volume that produces adequate precision and chromatographic separation. A 1- μ L injection volume may be used if adequate sensitivity and precision can be achieved. CAUTION: If 1 μ L is used for any injection volume, the injection volume for all extracts, blanks, calibration solutions and the performance check sample must be 1 μ L.

6.1.2 Mass spectral data are obtained with electron ionization at a nominal electron energy of 70 eV. To ensure sufficient precision of mass spectral data, the required MS scan rate must allow acquisition of at least five data points for each of six ions while a sample component elutes from the GC.

6.1.3 An interfaced data system (DS) is required to acquire, store, reduce and output mass spectral data. The DS must be equipped with a selected ion monitoring (SIM) program to acquire data for at least six ions that are characteristic of labeled and unlabeled 2,3,7,8-TCDD. (The mass spectrum of unlabeled 2,3,7,8-TCDD is shown in Figure 1 at the end of this Exhibit.) The same integration time must be used for each ion monitored, and the integration time used for sample analyses must be the same as the time used to analyze concentration calibration solutions and the performance check solution. Total data acquisition time per cycle (six ions) must not exceed 1.5 seconds.

6.2 GC Column -- Two fused silica capillary columns are recommended; one is a 60-m SP-2330 and the other is a 50-m CP-SIL 88. Any capillary column that separates 2,3,7,8-TCDD from all other TCDDs may be used, but this separation must be demonstrated. Minimum acceptance criteria must be determined per Section 9.2.3.1. At the beginning of each 8-hour period during which sample or concentration calibration solutions will be analyzed, column operating conditions must be demonstrated to achieve the required separation on the column to be used for samples. Operating conditions known to produce acceptable results with the recommended columns are shown in Table 1 at the end of this Exhibit.

6.3 Miscellaneous Equipment

- 6.3.1 Nitrogen evaporation apparatus with variable flow rate from approximately 30 mL/min to 150 mL/min.
- 6.3.2 Mechanical shaker — A magnetic stirrer or a wrist-action or platform-type shaker that produces vigorous agitation. Agitation conditions must be determined and demonstrated.
- 6.3.3 Analytical balance capable of accurately weighing 0.01g.
- 6.3.4 Centrifuge capable of operating at 2000 rpm.
- 6.3.5 Water bath — equipped with concentric ring cover and temperature controlled within $\pm 2^{\circ}\text{C}$.
- 6.3.6 Stainless steel spatulas or spoons.
- 6.3.7 Stainless steel (or glass) pan large enough to hold contents of 1-pint sample containers.
- 6.3.8 Glove box.

6.4 Glassware

- 6.4.1 Extraction jars — amber glass with Teflon-lined screw cap; minimum capacity of approximately 500 mL; must be compatible with mechanical shaker to be used.
 - 6.4.2 Kuderna-Danish apparatus — 500-mL evaporating flask, 10-mL graduated concentrator tubes with ground-glass stoppers, and 3-ball macro Snyder column.
 - 6.4.3 Culture tubes — 8-mL glass.
 - 6.4.4 Mini-vials — 1-mL amber borosilicate glass with conical-shaped reservoir and screw caps lined with Teflon-faced silicone disks.
 - 6.4.5 Funnel — glass; appropriate size to accommodate filter paper used to filter jar extract (volume of approximately 170 mL).
 - 6.4.6 Chromatography columns — 1 cm ID x 10 cm long and 1 cm ID by 30 cm long.
- 6.5 NOTE: Reuse of glassware should be minimized to avoid the risk of using contaminated glassware. All glassware that is reused must be scrupulously cleaned as soon as possible after use, applying the following procedure.

Rinse glassware with the last solvent used in it. Wash with hot water containing detergent. Rinse with copious amounts of tap water and several portions of distilled water. Drain dry and heat in a muffle furnace at 400°C for 15 to 30 min. Volumetric glassware should not be heated in a muffle furnace, and some thermally stable materials (such as PCBs) may not be removed by heating in a muffle furnace. In these cases, rinsing with high-purity acetone and hexane may be substituted for muffle furnace heating. After glassware is dry and cool, store inverted or capped with aluminum foil in a clean environment.

7. REAGENTS AND CONSUMABLE MATERIALS

7.1 Column Chromatography Reagents

7.1.1 Alumina, acidic -- Soxhlet extract with methylene chloride for 21 hours and activate by heating in a foil covered glass container for 24 hours at 190°C.

7.1.2 Silica gel -- high purity grade, type 60, 70-230 mesh; Soxhlet extract with methylene chloride for 21 hours and activate by heating in a foil-covered glass container for 24 hours at 130°C.

7.1.3 Silica gel impregnated with 40% (by weight) sulfuric acid -- Add two parts (by weight) concentrated sulfuric acid to three parts (by weight) silica gel (extracted and activated), mix with a glass rod until free of lumps, and store in a screw-capped glass bottle.

7.1.4 Sulfuric acid, concentrated -- ACS grade, specific gravity 1.84.

7.1.5 Graphitized carbon black (Carbopack C or equivalent), surface area of approximately 12 m²/g, 80/100 mesh.

7.1.6 Celite 545^R, reagent grade, or equivalent.

7.2 Filter paper -- pore size of ≤ 20 to 25 μ ; rinse with hexane before use.

7.3 Glass wool, silanized -- Extract with methylene chloride and hexane before use.

7.4 Sodium sulfate -- Granular, anhydrous; before use, extract with methylene chloride and dry for ≥ 4 h in a shallow tray placed in an oven operated at 120°C.

- 7.5 Solvents -- High purity, distilled-in-glass; hexane, methanol, methylene chloride, and toluene.
- 7.6 Concentration Calibration Solutions (reference Table 2) -- Five toluene solutions containing unlabeled 2,3,7,8-TCDD at varying concentrations and $^{13}\text{C}_{12}$ -2,3,7,8-TCDD (the internal standard, CASRN 80494-19-5) at a constant concentration. Three of these solutions also contain $^{37}\text{Cl}_4$ -2,3,7,8-TCDD (the surrogate compound, CASRN 85308-50-5) at varying concentrations. Concentration calibration solutions are to be obtained from the Quality Assurance Division, USEPA Environmental Monitoring Systems Laboratory (EMSL-LV), Las Vegas, Nevada. However, if not available from EMSL-LV, standards may be obtained from commercial sources, and solutions may be prepared in the contractor laboratory. Traceability of standards must be verified against EPA-supplied standard solutions, by laboratory SOP's as required in IFB Pre-Award Bid Confirmations, part 2.f.(4).
- 7.6.1 Each of solutions #1-#5 contains $^{13}\text{C}_{12}$ -2,3,7,8-TCDD at a concentration of 1 ng/ μL which is equivalent to a 50- μL extract of a 10-g sample to which that compound (the internal standard) was added at a concentration of 5 $\mu\text{g/kg}$.
- 7.6.2 Solutions #1-#5 contain unlabeled 2,3,7,8-TCDD at concentrations of 0.2, 1, 5, 20 and 40 ng/ μL respectively; those concentrations are equivalent to 50- μL extracts of 10-g samples containing 1, 5, 25, 100 and 200 ppb, respectively.
- 7.6.3 Solutions #1-#3 contain $^{37}\text{Cl}_4$ -2,3,7,8-TCDD at concentration of 0.06, 0.12, and 0.2 ng/ μL , respectively; those concentrations are equivalent to extracts containing 30, 60, and 100 ppb, respectively, of the amount of $^{37}\text{Cl}_4$ -TCDD (the surrogate compound) added to each sample before extraction.
- 7.6.4 Store concentration calibration solutions in 1-ml amber mini-vials at room temperature.
- 7.7 Performance Check Solution -- A mixture containing: unlabeled 2,3,7,8-TCDD; 1,2,3,4-TCDD (CASRN 30746-58-8); 1,4,7,8-TCDD (CASRN 40581-94-0); 1,2,3,7-TCDD (CASRN 67028-18-6); 1,2,3,8-TCDD (CASRN 53555-02-5); 1,2,7,8-TCDD (CASRN 34816-53-0) and 1,2,6,7-TCDD (CASRN 40581-90-6) must be obtained from the Quality Assurance Division, Environmental Monitoring Systems Laboratory, Las Vegas, Nevada.
- To this dry mixture add 500 μL of the sample fortification solution (Section 7.8) containing $^{13}\text{C}_{12}$ -2,3,7,8-TCDD at a concentration of 0.5 ng/ μL and $^{37}\text{Cl}_4$ -2,3,7,8-TCDD at a concentration of 0.1 ng/ μL . Store in 1-ml amber mini-vial at room temperature.

- 7.8 Sample Fortification Solution - a toluene solution containing the internal standard at a concentration of 0.5 ng/ μ L and the surrogate compound at a concentration of 0.1 ng/ μ L.
- 7.9 Field Blank Fortification Solution - a toluene solution containing the internal standard at a concentration of 0.5 ng/ μ L, the surrogate compound at a concentration of 0.1 ng/ μ L, and the unlabeled 2,3,7,8-TCDD at a concentration of 0.1 ng/ μ L.

8. SAMPLE PRESERVATION AND HANDLING

8.1 Chain-of-custody procedures -- see Exhibit G.

8.2 Sample Preservation

8.2.1 When received, each sample will be contained in a 1-pint glass jar surrounded by vermiculite in a sealed metal paint can. Until a portion is to be removed for analysis, store the sealed paint cans in a locked limited-access area where ambient temperature is maintained between 0°C and 35°C. After a portion is removed for analysis, return the unused portion of sample to its original containers and store as stated above. Do not freeze samples; they may contain sufficient water to break the sample jar if frozen.

8.2.2 To avoid photodecomposition, protect samples from light.

8.3 Sample Handling

8.3.1 CAUTION: Finely divided soils contaminated with 2,3,7,8-TCDD are hazardous because of the potential for inhalation or ingestion of particles containing 2,3,7,8-TCDD. Such samples should be handled in a confined environment (i.e., a closed hood or a glove box).

8.3.2 Pre-extraction sample treatment

8.3.2.1 Homogenization -- Although sampling personnel will attempt to collect homogeneous samples, the contractor shall examine each sample and judge if it needs further mixing. NOTE: Contractor personnel have the responsibility to take a representative sample aliquot; this responsibility entails efforts to make the sample as homogeneous as possible. Stirring is recommended when possible.

8.3.2.2 Centrifugation -- If a sample contains an obvious aqueous/liquid phase, centrifuge it to separate liquid and solid phases. Place the entire sample in a suitable centrifuge bottle and centrifuge for 30

minutes at 2000 rpm. Remove bottle from centrifuge. With a disposable pipet, remove liquid phase and discard. CAUTION: This liquid may contain TCDD and should be disposed as a liquid waste. Mix solid layer with stainless steel spatula and remove a portion to be weighed and analyzed. Return the remaining solid portion to original sample bottle and store.

9. CALIBRATION

9.1 Two types of calibration procedures are required. One type, routine calibration, is required at the beginning and end of each 8-hour period during which TCDD analyses are performed. The other type, initial calibration, is required before any samples are analyzed for TCDD, and is required intermittently throughout sample analyses as dictated by results of routine calibration procedures described below. No samples are to be analyzed until acceptable calibration is demonstrated and documented.

9.2 Routine Calibration

9.2.1 Calibrate and tune the MS with standards and procedures prescribed by the manufacturers. CAUTION: Some manufacturers may specify baseline resolution at masses higher than necessary for this method; that procedure could significantly reduce sensitivity for TCDD analysis.

9.2.2 Inject 2 μ L (CAUTION: See Sect. 6.1.1) of the performance check solution (Sect. 7.7) and acquire selected-ion-monitoring mass spectral data for m/z 320, 322, 323, 328, 332, and 334 within a total cycle time of ≤ 1.5 seconds. Acquire at least five data points for each GC peak and use the same data acquisition time for each of the six ions being monitored. NOTE: The same data acquisition parameters previously used to analyze concentration calibration solutions during initial calibration must be used for the performance check solution.

9.2.3 Determine and document acceptable system performance with the following criteria:

9.2.3.1 GC column performance -- If SP-2330 column is used, the valley between 2,3,7,8-TCDD and the peaks representing all other TCDD isomers must be resolved with a valley $\leq 25\%$. Valley (%) = $x/y \times 100$, when y is peak height of 2,3,7,8-TCDD; x is measured as shown in Figures 2 and 3 at the end of this Exhibit. The peak representing 2,3,7,8-TCDD shall be labeled and identified as such on the chromatograms.

- 9.2.3.2 Ratio of integrated ion current for m/z 320 to m/z 322 for 2,3,7,8-TCDD must be ≥ 0.67 and ≤ 0.87 .
- 9.2.3.3 MS resolution -- Ratio of integrated ion current for m/z 323 relative to m/z 322 for unlabeled 2,3,7,8-TCDD should be ≥ 0.07 and ≤ 0.20 .
- 9.2.3.4 Ratio of integrated ion current for m/z 332 to m/z 334 for $^{13}\text{C}_{12}$ -2,3,7,8-TCDD must be ≥ 0.67 and ≤ 0.87 .
- 9.2.3.5 Response factor (Sect. 9.3.10) for $^{37}\text{Cl}_4$ -2,3,7,8-TCDD relative to $^{13}\text{C}_{12}$ -2,3,7,8-TCDD must be within $\pm 10\%$ of the mean value established by triplicate analyses of the concentration calibration solutions (Section 9.3).
- 9.2.4 Inject 2 μL of the concentration calibration solution #1, which contains 0.2 ng/ μL of unlabeled 2,3,7,8-TCDD. Using the same GC/MS/DS conditions as used in Section 9.2.2 except the ions being monitored, acquire data for m/z 257, 320, 322, 328, 332, and 334. Determine and document acceptable performance for:
- 9.2.4.1 MS sensitivity -- signal-to-noise (S/N) ratio (Section 3.8) of > 2.5 for m/z 257 and > 10 for m/z 322 for unlabeled 2,3,7,8-TCDD. The ratio of integrated ion current for m/z 257 to m/z 322 must be ≥ 0.20 and ≤ 0.45 .
- 9.2.4.2 Measured response factor for unlabeled 2,3,7,8-TCDD relative to $^{13}\text{C}_{12}$ -2,3,7,8-TCDD is within $\pm 10\%$ of the mean values established (Section 9.3) by triplicate analyses of the concentration calibration solutions.
- 9.2.5 Remedial actions shall be taken by Contractor if criteria are not met. Possible remedies are:
- 9.2.5.1 Check and adjust GC and/or MS operating conditions.
- 9.2.5.2 Replace GC column (performance of initial calibration procedures then required).
- 9.2.5.3 Tune MS for greater or lesser resolution.
- 9.2.5.4 Calibrate MS mass scale.
- 9.2.5.5 Prepare and analyze new performance check solution.

9.2.3.6 Prepare new concentration calibration curve(s) (Section 9.3.11).

9.3 Initial Calibration

- 9.3.1 In addition to routine calibration procedures described in Section 9.2, before any samples are analyzed, determine response factors for $^{37}\text{Cl}_2$ -2,3,7,8-TCDD and for unlabeled 2,3,7,8-TCDD relative to $^{13}\text{C}_{12}$ -2,3,7,8-TCDD.
- 9.3.2 Concentration calibration solutions -- The five solutions described in Section 7.6 are required.
- 9.3.3 Calibrate and tune the MS with standards and procedures prescribed by the instrument manufacturer.
- 9.3.4 If a column other than the recommended (Section 6.2) SP-2330 or CP-SIL 88 fused silica capillary column is used, determine the GC conditions necessary to separate 2,3,7,8-TCDD from other TCDDs known to have similar relative retention times.
- 9.3.5 Inject a 2- μL aliquot of the performance check solution (CAUTION: See Section 6.1.1) and acquire selected-ion-monitoring (SIM) mass spectral data using the MS operating conditions specified in Section 9.2.2. Determine GC operating conditions necessary to achieve separation described in Section 9.2.3.1.
- 9.3.6 Using specified MS data acquisition procedures and the GC conditions determined in Section 9.3.5, analyze a 2- μL aliquot of the performance check solution.
- 9.3.7 Determine and document acceptable calibration using the criteria specified in Section 9.2.3.1 - 9.2.3.5.
- 9.3.8 Using the same GC conditions that produced acceptable results with the performance check solution, analyze a 2- μL aliquot of each of the five concentration calibration solutions with the following MS operating parameters.
- 9.3.8.1 Acquire selected-ion-monitoring data for m/z 257, 320, 322, 328, 332 and 334.
- 9.3.8.2 Total cycle time for data acquisition must be ≤ 1.5 seconds.
- 9.3.8.3 Acquire at least five data points for each ion during elution of the GC peak.

9.3.8.4 Use the same data acquisition time for each of the six ions being monitored.

9.3.9 Repeat Section 9.3.8 two times to produce triplicate data sets for each solution.

9.3.10 Calculate the response factor for $^{37}\text{Cl}_4$ -2,3,7,8-TCDD and for unlabeled 2,3,7,8-TCDD relative to $^{13}\text{C}_{12}$ -2,3,7,8-TCDD:

$$RF = \frac{A_x \cdot Q_{1s}}{A_{1s} \cdot Q_x}$$

where A_x = integrated ion abundance (corrected as specified in Section 12.1.1.3) of m/z 328 for $^{37}\text{Cl}_4$ -2,3,7,8-TCDD or the sum of integrated ion abundances of m/z 320 and m/z 322 for unlabeled 2,3,7,8-TCDD,
 A_{1s} = the sum of integrated abundances of m/z 332 and m/z 334 for $^{13}\text{C}_{12}$ -2,3,7,8-TCDD,
 Q_{1s} = quantity of $^{13}\text{C}_{12}$ -2,3,7,8-TCDD, and
 Q_x = quantity of unlabeled 2,3,7,8-TCDD or $^{37}\text{Cl}_4$ -2,3,7,8-TCDD injected.

RF is a unitless number; units used to express quantities must be equivalent.

9.3.11 For both $^{37}\text{Cl}_4$ -2,3,7,8-TCDD and unlabeled 2,3,7,8-TCDD, calculate the mean RF and its relative standard deviation (RSD) from triplicate analyses of each of the five concentration calibration solutions. Variation of the RF calculated for each compound at each concentration level must not exceed 10% RSD. If the five mean RFs for each compound do not differ by more than + 10%, the RF can be considered to be independent of analyte quantity for the calibration concentration range, and the mean of the five mean RFs shall be used for concentration calculations.

10. QUALITY CONTROL

See Exhibit E for QA/QC Requirements.

11. PROCEDURES

11.1 Sample Extraction

11.1.1 CAUTION: See Section 5 for safety guidelines and recommendations.

11.1.2 Jar extraction. NOTE: Extremely wet samples may require centrifuging to remove water before addition of sodium sulfate see (Section 8.3.2.2).

11.1.2.1 Accurately weigh to three significant figures a 10 gram (\pm 0.5 gram) portion of the wet soil or sediment sample, and transfer it to the extraction jar.

11.1.2.2 Add 100 μ L of the sample fortification solution (Section 7.8) to the soil or sediment in the extraction jar. Add small portions of the solutions at several sites on the surface of the soil or sediment.

11.1.2.3 Add 20 g of purified anhydrous sodium sulfate, and mix thoroughly using a stainless steel spoon or spatula.

11.1.2.4 Allow the mixture of soil and sodium sulfate to set for two hours at ambient temperature; mix again, break all visible lumps, and allow to set for at least four more hours.

11.1.2.5 Mix again and add 20 mL of methanol; mix again and add 150 mL of hexane.

11.1.2.6 Place the extraction jar containing the soil, sodium sulfate and solvents in the shaker and shake for at least 3 hours.

11.1.2.7 Remove the jar from the shaker and allow solids to settle. Decant the solvent through a glass funnel containing hexane-rinsed filter paper. Rinse the jar, solid sample residue, and filter residue with four 5-mL portions of hexane.

11.1.2.8 Concentrate the extract volume to approximately 2 to 3 mL with a Kuderna-Danish apparatus or a rotary evaporator. NOTE: Glassware used for more than one sample must be carefully cleaned between samples to prevent cross contamination (See Section 6.5).

11.1.2.9 Transfer the concentrated extract to an 8-mL glass culture tube. Rinse the evaporator flask with three 5-mL portions of hexane; transfer each rinse to the culture tube. Between additions of hexane rinse, reduce the extract volume in the culture tube enough to allow addition of another 5-mL volume of rinse. To reduce the volume, place the culture tube in a water bath adjusted to operate at 50°C and position the tube so that the surfaces of the extract and the water are at about the same level. Evaporate the solvent with a stream of nitrogen (flow rate of approximately 150 mL/min) with the tip of the nitrogen delivery tube 2 cm above the solution.

11.1.2.10 After the final rinse has been added, reduce the extract volume to approximately 1 mL.

11.2 Column Chromatography

11.2.1 Column Preparation

11.2.1.1 Column 1: Place 1.0 g of silica gel into a 1 cm x 20 cm column and tap the column gently to settle the silica gel. Add 2 g sodium hydroxide-impregnated silica gel, 1 g silica gel, 4.0 g of sulfuric acid-impregnated silica gel, and 2 g silica gel. Tap column gently after each addition.

11.2.1.2 Column 2: Place 6.0 g of alumina into a 1 cm x 30 cm column and tap the column gently to settle the alumina. Add a 1-cm layer of purified sodium sulfate to the top of the alumina.

11.2.1.3 Add hexane to each column until the packing is free of channels and air bubbles. A small positive pressure (5 psi) of clean nitrogen can be used if needed.

11.2.2 Quantitatively transfer the hexane sample extract from the culture tube to the top of the sulfuric acid-impregnated silica gel in Column 1. Rinse the culture tube with two 0.5 mL portions of hexane; transfer rinses to Column 1.

11.2.3 With 90 mL of hexane, elute the extract from Column 1 directly into Column 2 containing alumina and sodium sulfate.

11.2.4 Add 20 mL of hexane to Column 2 and elute until the hexane level is just below the top of the sodium sulfate; discard the eluted hexane.

11.2.5 Add 20 mL of 20% methylene chloride/80% hexane (volume/volume) to Column 2 and collect the eluate.

11.2.6 Reduce the volume of eluate with a gentle stream of filtered dry nitrogen. When the volume is about 1 to 2 mL, transfer aliquots to a 1-mL amber mini-vial with conical reservoir. Concentrate and add additional aliquots with further concentration until entire eluate is transferred. Rinse eluate container with two 0.5-mL portions of hexane; transfer rinses to the mini-vial, with further concentration as necessary. CAUTION: Do not evaporate sample extract to dryness.

11.2.7 With the final sample extract volume at approximately 1 mL, store the extract until time for GC/MS analysis.

11.3 GC/MS Analysis

11.3.1 Remove the sample extract or blank from storage and allow it to warm to ambient laboratory temperature if necessary.

With a stream of dry, filtered nitrogen, reduce the extract/blank volume to near dryness. Immediately before GC/MS analysis, adjust the extract or blank volume to 50 μ L with toluene.

11.3.2 Inject a 2- μ L aliquot of the extract into the GC, operated under conditions previously used (Sect. 9) to produce acceptable results with the performance check solution.

11.3.3 Acquire mass spectral data for the following selected characteristic ions: m/z 257, 320, and 322 for unlabeled 2,3,7,8-TCDD; m/z 328 for $^{37}\text{Cl}_4$ -2,3,7,8-TCDD; and m/z 332 and 334 for $^{13}\text{C}_{12}$ -2,3,7,8-TCDD. Use the same data acquisition time and MS operating conditions previously used (Sect. 9.3.8) to determine response factors.

11.4 Identification Criteria. NOTE: Refer to Exhibit E, Section 7, for application of identification criteria.

11.4.1 Retention time (at maximum peak height) of the sample component must be within 3 seconds of the retention time of the $^{13}\text{C}_{12}$ -2,3,7,8-TCDD. Retention times are required for all chromatograms, but scan numbers are optional. These parameters should be printed next to the appropriate peak.

11.4.2 The integrated ion currents detected for m/z 257, 320, and 322 must maximize simultaneously. If there are peaks that will affect the maximization or quantitation of peaks of interest, attempts should be made to narrow the scan window to eliminate the interfering peaks. This should be reported on a separate chromatogram.

11.4.3 The integrated ion current for each analyte and surrogate compound ion (m/z 257, 320, 322 and 328) must be at least 2.5 times background noise and must not have saturated the detector; internal standard ions (m/z 332 and 334) must be at least 10 times background and must not have saturated the detector.

11.4.4 Relative abundance of m/z 257 to m/z 322 should be $\geq 20\%$ and $\leq 45\%$.

11.4.5 Abundance of integrated ion counts detected for m/z 320 must be $\geq 67\%$ and $\leq 87\%$ of integrated ion counts detected for m/z 322.

11.5 Column Chromatography Procedure for Difficult Samples -- Use the following procedure for extracts previously subjected to the column chromatography procedures in Section 11.2, but found by GC/MS analysis to contain interfering components.

11.5.1 Mix 3.6 grams of Carbowack C (or equivalent) with 16.4 grams of Celite 545^R (or equivalent) in a 40-mL vial and activate by heating in an oven at 130°C for 6 hours. Store in a desiccator. CAUTION: Check each new batch of mixed Carbowack/Celite^R to ensure TCDD recovery of $\geq 30\%$. Subject the low level concentration calibration solution to this procedure and measure the quantity of labeled and unlabeled 2,3,7,8-TCDD.

11.5.2 Insert a small plug of glass wool into a disposable pipet approximately 15 cm long by 7 mm O.D. Apply suction with a vacuum aspirator attached to the pointed end of the pipet, and add the Carbowack/Celite^R mixture until a 2 cm column is obtained.

11.5.3 Pre-elute the column with:

11.5.3.1 2 mL of toluene

11.5.3.2 1 mL of a mixture of 75% (by volume) methylene chloride, 20% methanol and 5% benzene

11.5.3.3 1 mL of 50% (by volume) cyclohexane and 50% methylene chloride

11.5.3.4 2 mL of hexane

11.5.4 While the column is still wet with hexane, add the sample extract. Elute the column with the following sequence of solvents and discard eluents.

11.5.4.1 2 mL of hexane

11.5.4.2 1 mL of 50% (by volume) cyclohexane and 50% methylene chloride

11.5.4.3 1 mL of 75% (by volume) methylene chloride, 20% methanol and 5% benzene

11.5.5 Elute with 2 mL of toluene and collect the eluent, which contains the TCDD.

11.5.6 Store the sample extract until just before GC/MS analysis.

12. CALCULATIONS

12.1 Concentration

12.1.1 Concentration when a linear response factor was obtained:

12.1.1.1 Calculate the concentration of 2,3,7,8-TCDD using the formula:

$$C_x = \frac{A_x \cdot Q_{is}}{A_{is} \cdot RF \cdot W}$$

where C_x = 2,3,7,8-TCDD concentration in micrograms per kilogram

A_x = the sum of integrated ion abundance detected for m/z 320 and 322

A_{is} = the sum of integrated ion abundances detected for m/z 332 and 334 (characteristic ions of $^{13}C_{12}$ -2,3,7,8-TCDD, the internal standard)

Q_{is} = quantity (in nanograms) of $^{13}C_{12}$ -2,3,7,8-TCDD added to the sample before extraction

RF = calculated mean response factor for unlabeled 2,3,7,8-TCDD relative to $^{13}C_{12}$ -2,3,7,8-TCDD

W = weight (in grams) of wet soil or sediment sample.

12.1.1.2 If the calculated concentration of unlabeled 2,3,7,8-TCDD exceeds 200 $\mu\text{g/kg}$, which is the maximum concentration of the concentration calibration solutions, the linear range may have been exceeded, and a smaller aliquot of that sample must be analyzed. Accurately weigh to three significant figures a 1-g aliquot of the wet soil/sediment. Add 100 μL of the sample fortification solution (Section 7.8), just as for the larger sample aliquot. Extract and analyze.

12.1.1.3 Calculate the concentration of the surrogate compound, $^{37}\text{Cl}_4$ -2,3,7,8-TCDD, using the formula:

$$C_s = \frac{A_s \cdot Q_{is}}{A_{is} \cdot RF \cdot W}$$

C_s = concentration (in micrograms per kilogram) of the surrogate compound

A_s = total integrated ion abundance of m/z 328 after correction for the contribution by unlabeled 2,3,7,8-TCDD (correction -- subtract 0.9% of the total integrated ion abundance detected for m/z 322 in the same sample extract)

A_{is} = the sum of integrated ion abundances detected for m/z 332 and 334 (characteristic ions of $^{13}\text{C}_{12}$ -2,3,7,8-TCDD, the internal standard)

Q_{is} = quantity (in nanograms) of $^{13}\text{C}_{12}$ -2,3,7,8-TCDD added to the sample before extraction

RF = calculated mean response factor for $^{37}\text{Cl}_4$ -2,3,7,8-TCDD relative to $^{13}\text{C}_{12}$ -2,3,7,8-TCDD

W = weight (in grams) of wet soil or sediment sample.

12.2 Accuracy -- Calculate the accuracy (A) of the measurement of surrogate, $^{37}\text{Cl}_4$ -2,3,7,8-TCDD, using the formula:

$$\text{Surrogate Percent Accuracy} = \frac{\text{amount measured (nanograms)}}{10 \text{ ng}} \times 100$$

12.3 Estimated Detection Limit -- For samples in which no unlabeled 2,3,7,8-TCDD was detected, calculate the estimated minimum detectable concentration, which is the concentration required to produce a signal with area (or peak height) of 2.5 times the background signal area (or peak height). The background area is determined by integrating ion abundances for either m/z 320 or 322 in the appropriate region of the SICP, multiplying that area by 2.5, and relating the product area to an estimated concentration that would produce that product area.

Use the formula:

$$C_E = \frac{2.5 \cdot A_x \cdot Q_{I_s}}{A_{I_s} \cdot RF \cdot W}$$

where C_E = estimated concentration of unlabeled 2,3,7,8-TCDD required to produce A_x

A_x = peak height or integrated ion abundance for either m/z 320 or 322 in the same group of > 5 spectra used to measure A_{I_s}

A_{I_s} = peak height or integrated ion abundance for the appropriate ion characteristic of the internal standard, m/z 332 when m/z 320 is used to determine A_x , and m/z 334 when m/z 322 is used to determine A_x

Q_{I_s} , RF, and W retain the definitions previously stated in Section 12.1.1.

The use of the area (or peak height) for m/z 320 to calculate C_E is preferred to m/z 322, but m/z 322 can be used when interference is observed for m/z 320 but not for m/z 322.

NOTE: This calculation is not applicable to all samples in which 2,3,7,8-TCDD was not identified (see Section 12.4).

12.4 Estimated Maximum Possible Concentration -- For samples where interference is observed for both m/z 320 and 322 or when an unacceptable ratio prevented identification of unlabeled 2,3,7,8-TCDD as a sample component, the procedure in Section 12.1 can be used to estimate the maximum concentration that could be represented by detected signals.

12.5 The relative percent difference (RPD%) is calculated as follows: (See Section 5.1.1, Exhibit E.)

$$RPD = \frac{|S_1 - S_2|}{\text{Mean Concentration}} = \frac{|S_1 - S_2|}{\frac{S_1 + S_2}{2}}$$

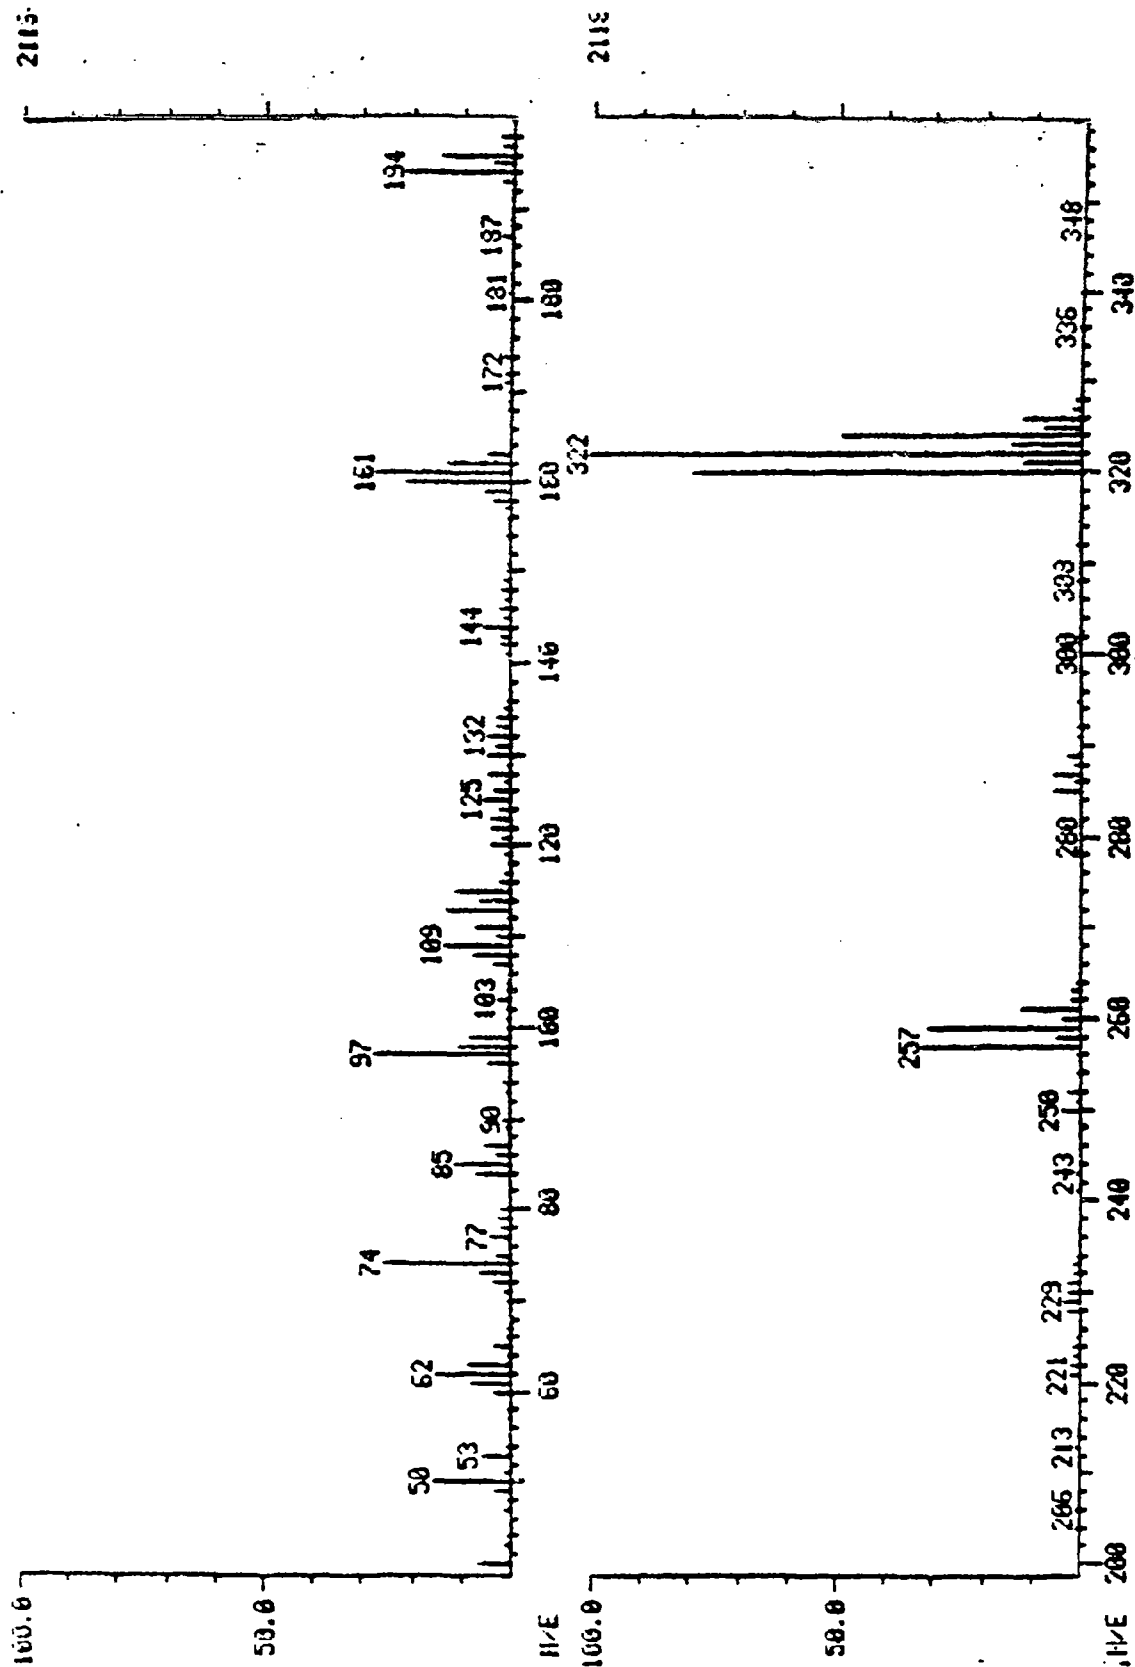


Figure 1. Complete mass spectrum of unlabeled 2,3,7,8-TCDD acquired with recommended GC conditions (Table 1).

DS-56 CROSS SCAN REPORT, RUN: GCMS100001

• TIC

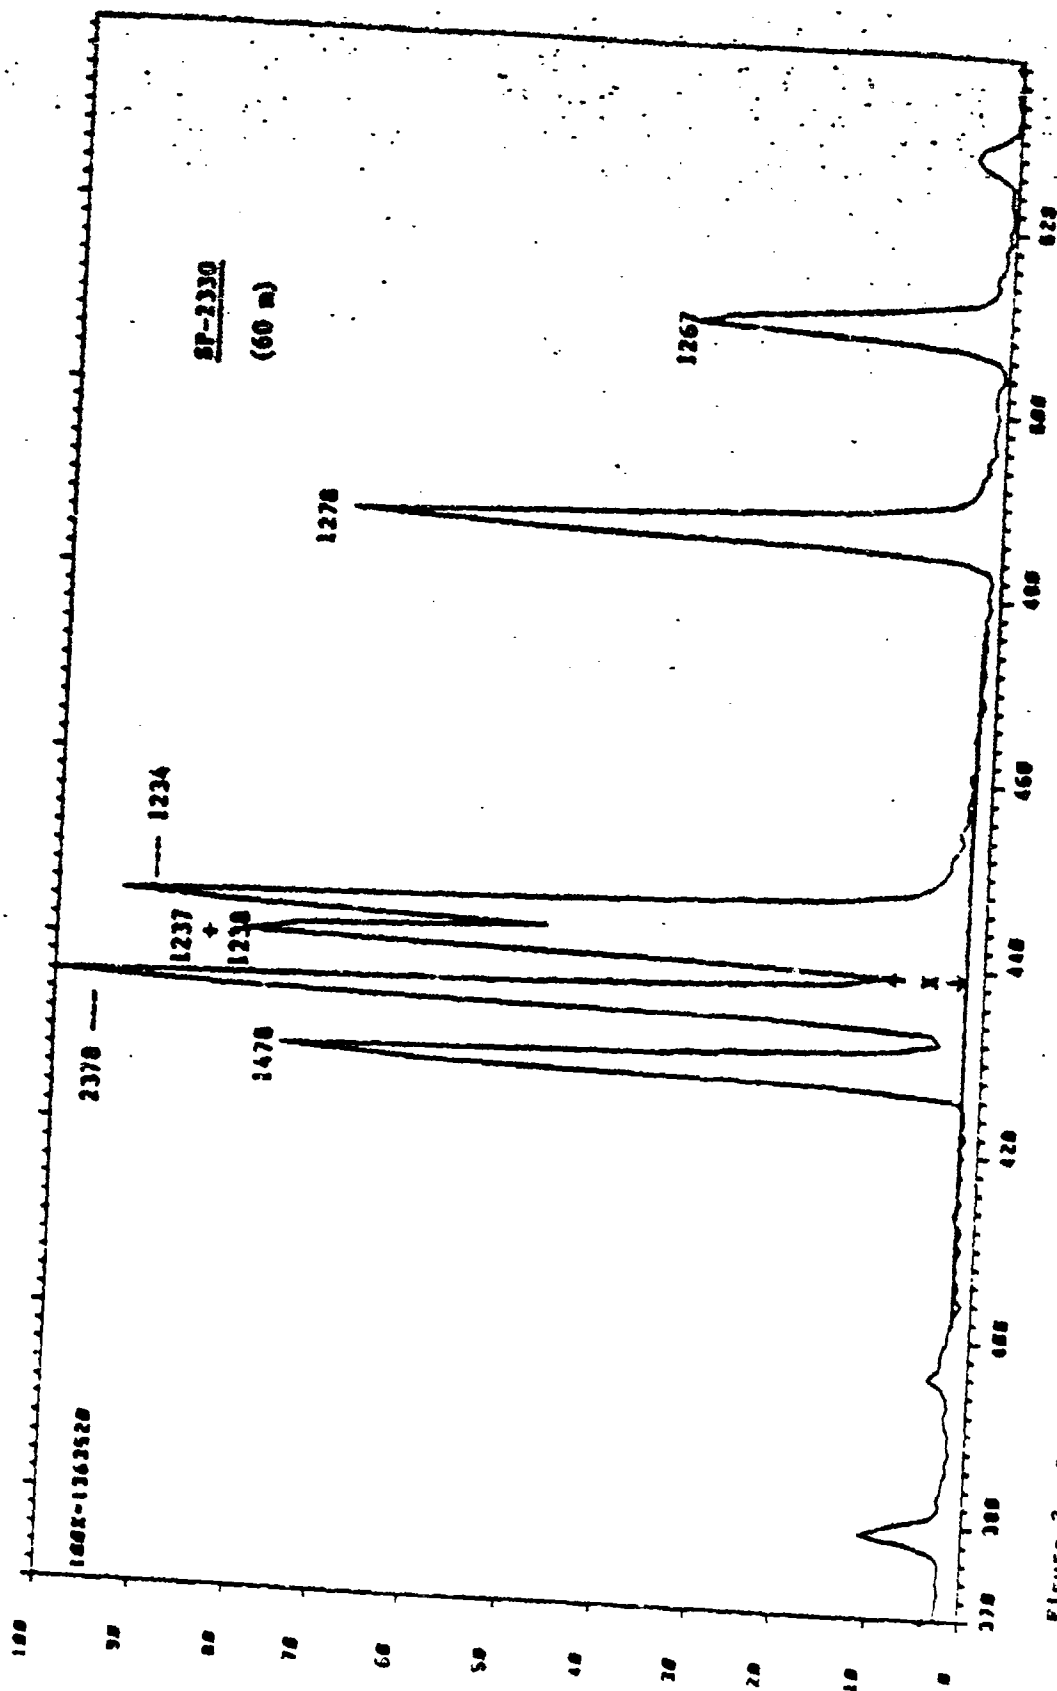


Figure 2. Selected ion current profile for m/z 320 and 322 produced by MS analysis of performance check solution using a 60-m SP-2330 fused silica capillary column and conditions listed in Table 1.

DS-86 CROSS SCAN REPORT. RUN: SYL28882

• TIC

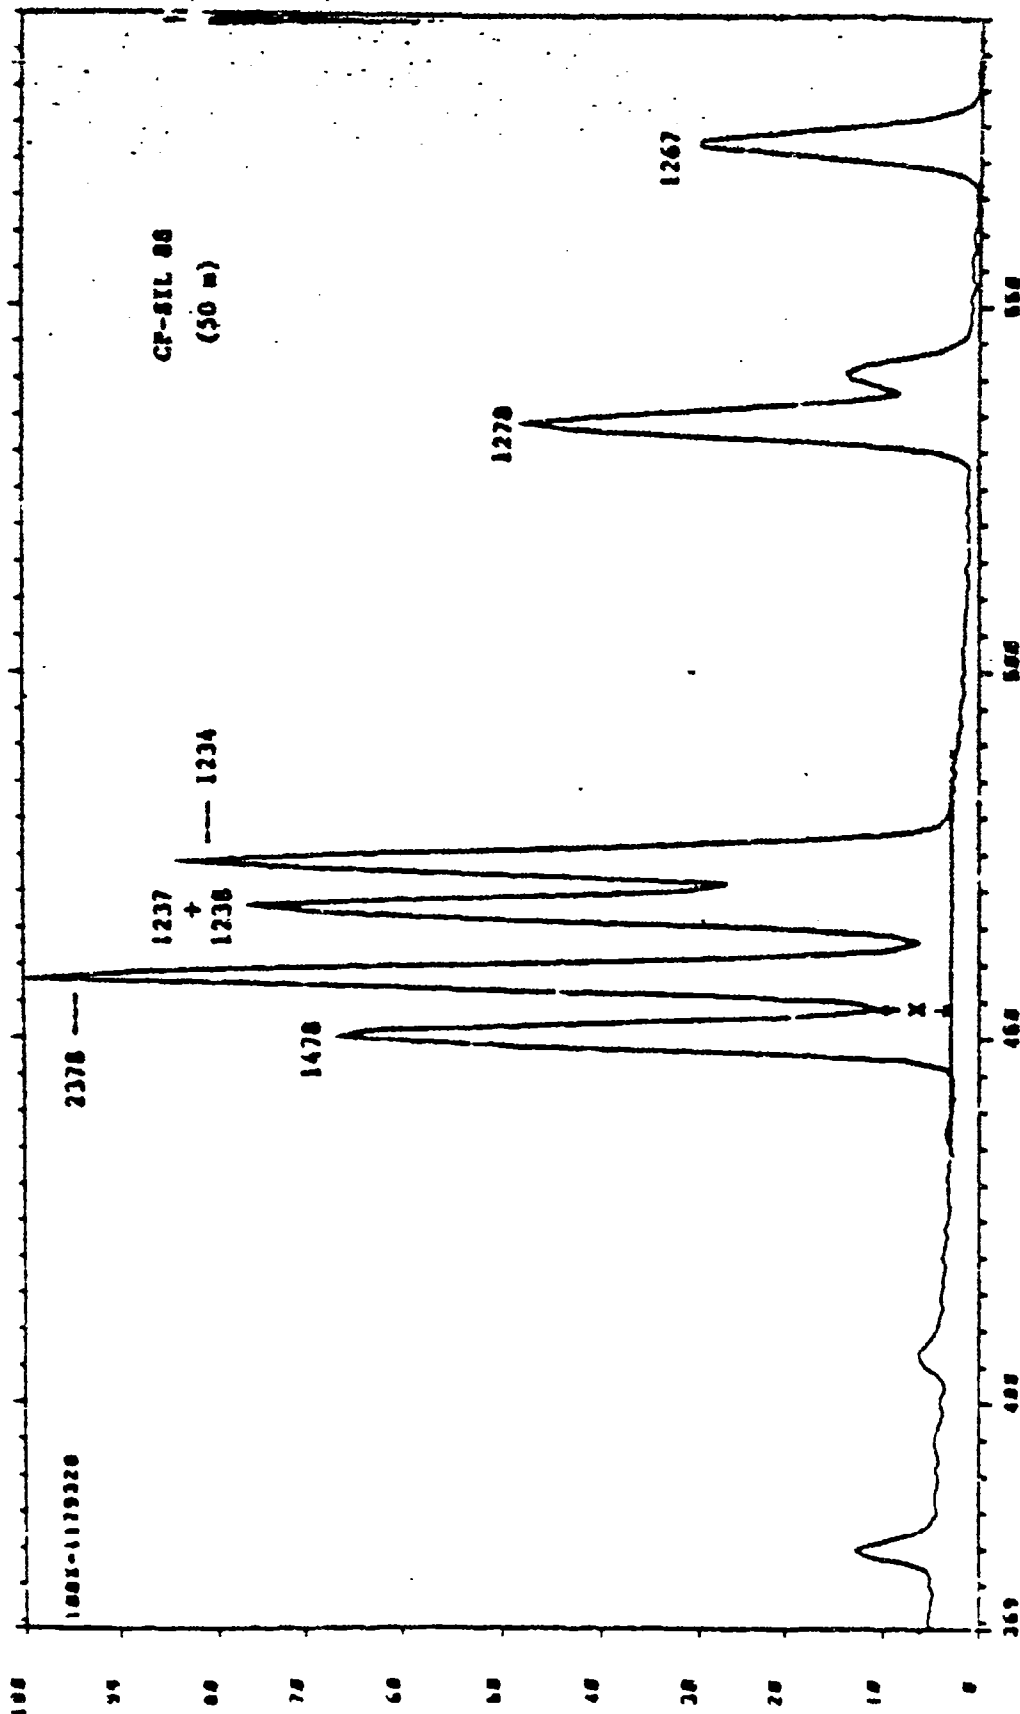


Figure 3. Selected ion current profile for m/z 320 and 322 produced by MS analysis of performance check solution using a 50-m CP-SIL 88 fused silica capillary column and conditions listed in Table 1.

TABLE 1. RECOMMENDED GC OPERATING CONDITIONS

Column coating	SP-2330	CP-SIL 88
Film thickness	0.2 μ m	0.22 μ m
Column dimensions	60 m x 0.24 mm	50 m x 0.22 mm
Helium* linear velocity	28-29 cm/sec at 260°C	28-29 cm/sec at 240°C
Initial temperature	70°C	45°C
Initial time	4 min	3 min
Temperature program	Rapid increase to 200°C 200°C to 260°C at 4°C/min	Rapid increase to 190°C 190°C to 240°C at 5°C/min
2,3,7,8-TCDD retention time	24 min	26 min

* Hydrogen is an acceptable carrier gas.

TABLE 2. COMPOSITION OF CONCENTRATION CALIBRATION SOLUTIONS

<u>Solution #</u>	<u>Concentration of 2,3,7,8-TCDD</u>		
	<u>Isotopically Labeled</u>		<u>Unlabeled</u>
	<u>$^{13}\text{C}_{12}$</u>	<u>$^{37}\text{Cl}_x$</u>	
1	1 ng/ μL	0.06 ng/ μL	0.2 ng/ μL
2	1 ng/ μL	0.12 ng/ μL	1 ng/ μL
3	1 ng/ μL	0.2 ng/ μL	5 ng/ μL
4	1 ng/ μL	0	20 ng/ μL
5	1 ng/ μL	0	40 ng/ μL

Exhibit E - QA/QC Requirements (for 2372-TCDD analysis)

SUMMARY OF QC ANALYSES

1. Initial and periodic calibration and instrument performance checks.
2. Laboratory reagent blank analyses (Sect. 4.1); minimum of one blank shall be analyzed with each sample batch; an additional blank analyzed when new reagents are used.
3. Analysis of a batch of samples with accompanying QC analyses:
 - 3.1 Sample Batch -- \leq 24 samples, including field blank and rinsate sample(s).
 - 3.2 Additional QC Analyses Per Batch:

Laboratory reagent blank	1
Duplicate sample analysis	1
Confirmatory partial scan analysis	1
TOTAL	<u>3</u>
4. "Blind" QC samples may be submitted to contractor as an ordinary soil or sediment sample included among the batch of samples. Blind samples include:
 - 4.1 Uncontaminated soil,
 - 4.2 Split samples,
 - 4.3 Unlabeled duplicates, and
 - 4.4 Performance evaluation samples.

QUALITY CONTROL

1. Performance Evaluation Samples -- Included among samples in some batches will be samples containing known amounts of unlabeled 2,3,7,8-TCDD that may or may not be marked as other than ordinary samples.
2. Performance Check Solution
 - 2.1 At the beginning of each 8-hour period during which samples are to be analyzed, an aliquot of the performance check solution and an aliquot of concentration calibration solution #1 shall be analyzed to demonstrate adequate GC and MS resolution and sensitivity, response factor reproducibility, and mass range calibration.

These procedures are described in Section 9 of Exhibit D. If any required criteria are not met, remedial action must be taken before any samples are analyzed.

2.2 To validate sample data, the performance check solution must be analyzed also at the end of each 8-hour period during which samples are analyzed.

2.2.1 If the contractor laboratory operates only during one 8-hour period (shift) each day, the performance check solution must be analyzed twice (at the beginning and end of the 8-hour period) to validate data acquired during the interim period.

2.2.2 If the contractor laboratory operates during consecutive 8-hour periods (shifts), analysis of the performance check solution at the beginning of each 8-hour period and at the end of the final 8-hour period is sufficient.

2.3 Results of at least two analyses of the performance check solution must be reported with sample data collected during an 8-h period.

2.4 Deviations from criteria specified for the performance check solution (Section 9.2.3, Exhibit D) invalidate all sample data collected between analyses of the performance check solution, and samples shall be rerun (see Exhibit C).

3. The performance check mixture, concentration calibration solutions, and the sample and field blank fortification solutions are to be obtained from EMSL-LV. However, if not available from EMSL-LV, standards can be obtained from other sources, and solutions can be prepared in the contractor laboratory. Concentrations of all solutions containing unlabeled 2,3,7,8-TCDD and not obtained from EMSL-LV must be verified by comparison to the unlabeled 2,3,7,8-TCDD standard solution (concentration of 7.87 $\mu\text{g/mL}$) that is available from EMSL-LV.

4. Blanks

4.1 Laboratory reagent blank -- Perform all steps in the analytical procedure (Section 11, Exhibit D) using all reagents, standards, equipment, apparatus, glassware, and solvents that would be used for a sample analysis, but omit an aliquot of soil or sediment.

4.1.1 Except in the case noted in Section 4.1.3, a laboratory reagent blank must contain the same amount of $^{13}\text{C}_{12}$ -2,3,7,8-TCDD and $^{13}\text{C}_{12}$ -2,3,7,8-TCDD that is added to samples before extraction.

4.1.2 Analyze a laboratory reagent blank before any samples are extracted and analyzed.

- 4.1.3 Analyze two laboratory reagent blanks before a new batch of solvents or reagents is used for sample extraction or for column chromatographic procedures. Do not add any $^{37}\text{Cl}_4$ -2,3,7,8-TCDD or $^{13}\text{C}_{12}$ -2,3,7,8-TCDD to one blank, to demonstrate that reagents contain no impurities producing an ion current above the level of background noise for m/z 328, 332 and 334.
- 4.1.4 Analyze a laboratory reagent blank along with each batch of samples.
- 4.1.5 Acceptable laboratory reagent blanks contain no ion current above the level of background signal-to-noise for any of the selected characteristic ions (m/z 257, 320, 322) for unlabeled 2,3,7,8-TCDD. If the reagent blank which was extracted along with a batch of samples is contaminated, the entire batch of samples must be rerun (see Exhibit C).
 - 4.1.5.1 If the above criterion is not met, check solvents, reagents, apparatus, and glassware to locate and eliminate the source of contamination before any samples are extracted and analyzed.
 - 4.1.5.2 If new batches of reagents or solvents contain interfering contaminants, purify or discard them.
- 4.2 Field Blanks -- Each batch of samples contains a sample of uncontaminated soil/sediment that is to be fortified with unlabeled 2,3,7,8-TCDD at a concentration of 1 $\mu\text{g/kg}$ before analysis. In addition to that field blank, a batch of samples may include a rinseate, that is a portion of solvent (usually trichloroethylene) that was used to rinse sampling equipment. The rinseate is analyzed to assure that samples have not been contaminated by sampling equipment.
 - 4.2.1 Unfortified field blank -- Analyze with procedures used for environmental samples (Section II, Exhibit D). This blank may or may not be labeled as such (i.e., it may be a "blind" QC sample).
 - 4.2.2 Fortified (Spiked) Field Blank
 - 4.2.2.1 Weigh a 10-g aliquot of the specified field blank sample and add 100 μL of the solution containing 0.1 $\mu\text{g}/\mu\text{L}$ of unlabeled 2,3,7,8-TCDD, 0.5 $\text{ng}/\mu\text{L}$ of $^{13}\text{C}_{12}$ -2,3,7,8-TCDD, and 0.1 $\text{ng}/\mu\text{L}$ of $^{37}\text{Cl}_4$ -2,3,7,8-TCDD. (Analysis before fortification is not required because this field blank is known not to contain a detectable concentration of unlabeled 2,3,7,8-TCDD.)

4.2.2.2 Extract with the jar procedure (Section 11.1.2, Exhibit D) and analyze a 2- μ L aliquot.

4.2.2.3 Calculate concentration (Section 12.1, Exhibit D) of both $^{37}\text{Cl}_4$ -2,3,7,8-TCDD and unlabeled 2,3,7,8-TCDD, and accuracy (Section 12.2, Exhibit D) of each measured concentration.

4.2.2.3.1 If accuracy of measured concentration of $^{37}\text{Cl}_4$ -2,3,7,8-TCDD is $> +40\%$, discard the results and repeat the fortified field blank extraction and analysis with a second aliquot of the specified field blank sample (see Exhibit C).

4.2.3 Rinse Sample

4.2.3.1 To a 100- μ L aliquot of equipment rinse solvent (rinse sample), add 100 μ L of the solution containing 0.5 ng/ μ L of $^{13}\text{C}_{12}$ -2,3,7,8-TCDD and 0.1 ng/ μ L solution of $^{37}\text{Cl}_4$ -2,3,7,8-TCDD.

4.2.3.2 Using a Kuderna-Danish apparatus or a rotary evaporator, concentrate the volume to approximately 5 mL.

4.2.3.3 Transfer the total 5-mL concentrate in 1-mL portions to a 1 mL-amber mini-vial, reducing volume as necessary with a gentle stream of dry nitrogen.

4.2.3.4 Rinse container with two 0.5 mL portions of hexane and transfer rinses to the 1-mL amber mini-vial.

4.2.3.5 Just before analysis, reduce volume to near dryness; make to final volume of 50 μ L with isooctane. (Column chromatography is not required.)

4.2.3.6 Analyze an aliquot with the same procedures used to analyze samples (Section 11, Exhibit D).

5. Duplicate Analyses

5.1 Laboratory duplicates -- In each batch of samples, locate the sample specified for duplicate analyses and analyze a second 10-g sample aliquot.

5.1.1 Results of laboratory duplicates must agree within 50% relative difference (difference expressed as percentage of the mean). If relative difference is $> 50\%$, Contractor shall immediately contact the Sample Management Office for resolution of the problem. Report all results.

3.1.2 Recommended actions to help locate problem:

3.1.2.1 Analyze an aliquot of the performance check sample to verify satisfactory instrument performance (Section 9, Exhibit D.)

3.1.2.2 If possible, determine that no error was made while weighing sample aliquots.

3.1.2.3 Review analytical procedures with performing laboratory personnel.

6. Accuracy of Measured Concentration of $^{37}\text{Cl}_4$ -2,3,7,8-TCDD -- For each sample and blank, calculate the percent accuracy (Section 12.2, Exhibit D) of the measured concentration of $^{37}\text{Cl}_4$ -2,3,7,8-TCDD. If percent accuracy is $> \pm 40\%$ for a sample, analyze a second aliquot of that sample and report both results (see Exhibit C). NOTE: Low or high accuracy for a blank does not require discarding sample data but indicates a potential problem with future sample data.

7. Identification Criteria

7.1 If any of the four initial identification criteria (Sections 11.4.1 -11.4.4, Exhibit D) are not met, the sample is reported not to contain unlabeled 2,3,7,8-TCDD at the calculated detection limit (Section 12.3, Exhibit D).

7.2 When the four initial identification criteria are met, but the fifth criteria, the isotopic abundance ratio for m/z 320 and 322 (Section 11.4.5, Exhibit D) is not met, that sample is presumed to contain interfering contaminants. Contractor shall use the second column chromatography procedure (Section 11.5, Exhibit D) to remove interferences from the extract, and shall reanalyze the sample. (See Exhibit C.)

8. Blind QC Samples -- Included among soil and sediment samples may be QC samples that are not specified as such to the performing laboratory. Types that may be included are:

8.1 Uncontaminated soil.

8.1.1 If a false positive is reported for this sample, the Contractor shall be required to rerun the entire associated batch of samples (see Exhibit C).

8.2 Split samples -- composited sample aliquots sent to more than one laboratory.

8.3 Unlabeled field duplicates -- two aliquots of a composited sample.

8.4 Performance evaluation sample -- soil/sediment sample containing a known amount of unlabeled 2,3,7,8-TCDD.

5.4.4 If the performance evaluation sample result falls outside the acceptance windows established by EPA, the Contractor shall be required to rerun the entire associated batch of samples (see Exhibit C). NOTE: EPA acceptance windows are based on historical data results.

9. Confirmatory Partial Scan Analysis

9.1 From each sample batch, select the sample extract containing the highest concentration of unlabeled 2,3,7,8-TCDD and analyze an aliquot by GC/MS under the same GC conditions used previously but with the MS tuned and calibrated to acquire data for the mass range m/z 150 to m/z 350. (If no sample in a batch contains unlabeled 2,3,7,8-TCDD, no confirmatory analysis is required for that batch.) Required calibration criteria for decafluorotriphenylphosphine introduced through the GC column shall be:

<u>m/z</u>	<u>Relative Intensity</u>
51	30 - 60 percent of base peak
68	< 2 percent of m/z = 69
70	< 2 percent of m/z = 69
127	40 - 60 percent of base peak
197	< 1 percent of base peak
198	100 percent (base peak)
199	5 - 9 percent of base peak
275	10 - 30 percent of base peak
365	> 1 percent of base peak
441	less than m/z = 443
442	> 40 percent of base peak
443	17 - 23 percent of m/z = 442

9.2 MS data acquisition requirements shall be:

9.2.1 Cycle time \leq 1.5 seconds.

9.2.2 Acquisition of \geq 5 spectra during elution of 2,3,7,8-TCDD from the GC.

9.3 Subtract an appropriate background spectrum, and plot a spectrum of 2,3,7,8-TCDD after background subtraction. (The person responsible for MS data interpretation is responsible for demonstrating that the background spectrum selected for subtraction was an appropriate spectrum.) Provide a hard copy of the background spectrum, the TCDD spectrum before subtraction, and the TCDD spectrum after subtraction. The quality of the plotted spectrum will be affected by other sample components that have approximately the same GC retention time and will be highly variable. Desired spectral features are:

Base peak = m/z 322
Ratio of m/z 320 to 322 = 0.77
Ratio of m/z 320 to 324 = 1.58
Ratio of m/z 257 to 322 = 0.32
Ratio of m/z 257 to 259 = 1.03
Ratio of m/z 194 to 196 = 1.54
m/z 160 and 161 = \geq 10% of m/z 322

Because $^{13}\text{C}_{12}$ -2,3,7,8-TCDD, the internal standard, is present in every sample and has essentially the same retention time as unlabeled 2,3,7,8-TCDD, the spectrum after background subtraction will represent a mixture. When $^{13}\text{C}_{12}$ -2,3,7,8-TCDD is present at a higher concentration than unlabeled 2,3,7,8-TCDD, the resultant spectrum (Figure E-1) must be normalized to m/z 322 to demonstrate desired spectral features.

10. Records - At each contractor laboratory, records must be maintained on site for six months after contract completion to document the quality of all data generated during contract performance. Before any records are disposed, written concurrence of the Contracting Officer must be obtained.
11. Magnetic tapes containing all raw GC/MS data (including performance check solution, blanks, and concentration calibration solutions) must be delivered to EMSL-LV when sufficient data to fill or nearly fill a tape have been collected or when all samples are completed, depending on which event occurs first.
12. Unused portions of samples and sample extracts must be preserved for six months after sample receipt; appropriate samples may be selected by EPA personnel for further analyses.
13. Use of glassware is to be minimized to avoid the risk of using contaminated glassware.

LABORATORY EVALUATION PROCEDURES

On a quarterly basis, the EPA Project Officer and/or designated representatives shall conduct an evaluation of the laboratory to ascertain that the laboratory is meeting contract requirements. This evaluation will consist of: 1) laboratory analysis of a performance evaluation sample, and 2) laboratory site visit by EPA officials and/or representatives. The evaluation procedures will be similar, but may not be identical to the evaluation performed as part of the pre-award bidder evaluation. (See IFB Pre-Award Bid Confirmations section.)

QA/QC Requirements for Dioxin and Furan Total Leaner Analysis

~~Our~~ ^{The} approach to QA/QC for the tetra-hexa furans and dioxins parallels closely that for 2,3,7,8-TCDD. Items 3 through 9 of the outline below point out additional items not specifically mentioned in 2,3,7,8-TCDD methods.

1. Materials Examined for Contamination
 - A. Prior to start of project
 - B. Along with each set of analyses
2. Traceable Standards
 - A. 2,3,7,8-TCDD traceable to EPA reference
 - B. Other dioxins and furans traceable to EPA
3. Internal Standards for EACH chlorination level
 - A. TCDD internal standards traceable to EPA
 - B. Others synthesized at CAL Lab and reference to Rappe's materials
4. Column Performance
 - A. 2,3,7,8-TCDD resolution as per EPA requirements
 - B. Resolution of 1,2,3,4,7,8 and 1,2,3,6,7,8-HxCDF
5. Documentation of Mass Spectrometer Resolution (Low or High)
 - A. Hardcopy of profile data
6. Cleanup column chromatography Performance
 - A. 1,3,6,8-TCDD to HxCDD recovery within 30% of Internal Standards
7. Duplicate Analyses
 - A. Duplicates within 30% for most congeners.
8. Spikes of Representative Tetra-Hexa Chlorodioxins and Furans
 - A. Recovery should be within 30%
9. Detection Limit Calculated for each Chlorination Level in each Sample

Please note that duplicates and matrix spikes are regarded as bullable samples.

APPENDIX D: SOURCES OF STANDARDS AND INTERNAL STANDARDS

CAL LABS OWNED DIBENZODIOXINS

<u>Isomer</u>	<u>Source</u>
2,7-DCDD	RFR Corp.
1,2,4-TrCDD	RFR Corp.
1,2,3,4-TCDD	Christoffer Rappe
1,3,6,8-TCDD	Christoffer Rappe
2,3,7,8-TCDD	Radian Corp, USEPA.
1,2,3,7,8-PnCDD	KOR Isotopes
1,2,3,4,7,8-HxCDD	KOR Isotopes
1,2,3,4,6,7,8-HpCDD	KOR Isotopes
OCDD	Ultra Scientific

CAL LABS OWNED INTERNAL STANDARDS

<u>Isomer</u>	<u>Source</u>
13C-2,3,7,8-TCDF	Cambridge Isotope Lab (CIL)
13C-1,2,3,7,8-PnCDF	CAL LAB Synthesized, CIL
13C-2,3,4,7,8-PnCDF	CAL LAB Synthesized, CIL
13C-1,2,3,4,7,8-HxCDF	CAL LAB Synthesized
13C-1,2,3,4,6,7,8-HpCDF	CAL LAB Synthesized
13C-1,2,3,4,7,8,9-HpCDF	CAL LAB Synthesized
13C-OCDF	CAL LAB Synthesized
13C-2,3,7,8-TCDD	KOR Istopes, USEPA
13C-1,2,3,7,8-PnCDD	CAL LAB Synthesized, CIL
13C-1,2,3,4,7,8-HxCDD	CAL LAB Synthesized, CIL
13C-1,2,3,4,6,7,8-HpCDD	CAL LAB Synthesized
13C-OCDD	KOR Istopes & CAL LAB Synthesized
Surrogate:	
37Cl-2,3,7,8-TCDD	KOR Isotopes, USEPA

CAL LABS OWNED DIBENZOFURANS

<u>Isomer</u>	<u>Source</u>
2,8-DCDF	RFR Corp.
1,2,3,9-TCDF	Christoffer Rappe
1,2,4,7-TCDF	Christoffer Rappe
1,2,4,8-TCDF	Christoffer Rappe
1,2,6,7-TCDF	Christoffer Rappe
1,2,7,8-TCDF	Christoffer Rappe
1,2,7,9-TCDF	Christoffer Rappe
1,3,4,6-TCDF	Christoffer Rappe
1,3,6,7-TCDF	Christoffer Rappe
1,3,6,8-TCDF	Christoffer Rappe
1,3,7,9-TCDF	Christoffer Rappe
1,4,6,7-TCDF	Christoffer Rappe
1,4,6,9-TCDF	Christoffer Rappe
2,3,4,7-TCDF	Christoffer Rappe
2,3,4,8-TCDF	Christoffer Rappe
2,3,6,7-TCDF	Christoffer Rappe
2,3,6,8-TCDF	Christoffer Rappe
2,3,7,8-TCDF	Christoffer Rappe & Radian Corp.
2,4,6,7-TCDF	Christoffer Rappe
2,4,6,8-TCDF	Christoffer Rappe
1,2,3,4,8-PnCdf	Christoffer Rappe
1,2,3,7,8-PnCdf	Cambridge Isotope Lab
1,2,4,6,8-PnCdf	Christoffer Rappe
1,2,4,7,8-PnCdf	Christoffer Rappe
2,3,4,6,8-PnCdf	Christoffer Rappe
2,3,4,7,8-PnCdf	Christoffer Rappe
1,2,3,4,6,8-HxCDF	Christoffer Rappe
1,2,3,4,7,8-HxCDF	Cambridge Isotope Lab
1,2,3,4,7,9-HxCDF	Christoffer Rappe
1,2,4,6,7,8-HxCDF	Christoffer Rappe
1,2,4,6,8,9-HxCDF	Christoffer Rappe
2,3,4,6,7,8-HxCDF	Christoffer Rappe
1,2,3,4,6,7,8-HpCDF	Christoffer Rappe & Cambridge Isotopes
1,2,3,4,6,8,9-HpCDF	Christoffer Rappe
1,2,3,4,7,8,9-HpCDF	Christoffer Rappe
OCDF	Christoffer Rappe & Ultra Scientific

APPENDIX O

CALIFORNIAL ANALYTICAL LABORATORIES
DATA SHEETS FOR DIOXIN/FURAN ANALYSES,
ORGANIC COMPOUND ANALYSES, AND
INORGANIC ANALYSES

	<u>Page</u>
Exhibit 1 2,3,7,8-TCDD Summary Report	167
Exhibit 2 PCDD/PCDF Sample Data Sheets	168
Exhibit 3 Organic Sample Data Sheets	194
Exhibit 4 Inorganic Sample Data Sheets	251
Exhibit 5 2,4-D and 2,4,5-T Summary Data Report	277
Exhibit 6 Creosote Analysis Report	278
Exhibit 7 Air Filter Sample Summary Report for 2,3,7,8-TCDD and TSP	279

The documents contained in this appendix were published according to their own internal style, which deviates from ESL format. They have, therefore, been published without editing.

2231

ICDD DATA REPORT
California Analytical Laboratories
2544 Industrial Blvd.
M. Sacramento, CA 95691

Lab: California Analytical Laboratories
Case No. 21349
Batch/Shipmet No.

Report Date: 10-22-85
Column: SP-2131

Cal Lab ID	Sample Number	Aliquot C Met U/L U (grams)	PPB ICDD Det.	Inst ID	Date	Time	320/ 322	332/ 334	Surge Mean % Acc'd	320	322	325	328°	332	334	Comment
21349-1	111CNC-R1-01	Y 10.00	MD	0.011	8	10/07/85	21:59:00	0.79	0.77	1.03	103	977832	1046270	1362800		
21349-2	111CNC-R1-02	Y 0.51	266	0.011	8	10/07/85	22:31:00	0.79	0.77	20.37	104	727090	774825	1004100		
21349-3	111CNC-R2-01	Y 0.60	272	0.011	8	10/07/85	22:53:00	0.79	0.79	16.29	98	799955	917779	1183060		
21349-4	111CNC-R1-03	Y 50.00 ml	43.3	0.011	8	10/07/85	15:16:00	0.81	0.79	0.17	84	440258	582648	823854		
21349-5	111CNC-R1-04	Y 0.61	236	0.011	8	10/07/85	23:15:00	0.79	0.78	16.39	100	546235	609775	778939		
21349-6	111CNC-R1-05	Y 0.52	266	0.011	8	10/07/85	23:40:00	0.79	0.75	19.23	100	508306	640448	855600		
21349-7	111CNC-R1-06	Y 0.58	233	0.011	8	10/07/85	23:58:00	0.78	0.77	17.74	103	809058	866648	1132170		
21349-8	111CNC-R1-07	Y 10.19	MD	0.076	8	10/08/85	23:50:00	0.73	0.73	1.10	112	167708	163716	223665		
21349-9	111CNC-R1-08	Y 50.00 ml	0.36	0.043	8	10/17/85	15:35:00	0.79	0.77	0.17	86	813564	1095490	1419010		
21413-1	111CNC-R1-09	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-2	111CNC-R2-01	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-3	111CNC-R2-02	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-4	111CNC-R2-03	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-5	111CNC-R2-04	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-6	111CNC-R2-05	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-7	111CNC-R2-06	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-8	111CNC-R2-07	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-9	111CNC-R2-08	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-10	111CNC-R2-09	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-11	111CNC-R2-10	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-12	111CNC-R2-11	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-13	111CNC-R2-12	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-14	111CNC-R2-13	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-15	111CNC-R2-14	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-16	111CNC-R2-15	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-17	111CNC-R2-16	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-18	111CNC-R2-17	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-19	111CNC-R2-18	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-20	111CNC-R2-19	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-21	111CNC-R2-20	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-22	111CNC-R2-21	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-23	111CNC-R2-22	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-24	111CNC-R2-23	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-25	111CNC-R2-24	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-26	111CNC-R2-25	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-27	111CNC-R2-26	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-28	111CNC-R2-27	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-29	111CNC-R2-28	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-30	111CNC-R2-29	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-31	111CNC-R2-30	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-32	111CNC-R2-31	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-33	111CNC-R2-32	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-34	111CNC-R2-33	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-35	111CNC-R2-34	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-36	111CNC-R2-35	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-37	111CNC-R2-36	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-38	111CNC-R2-37	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-39	111CNC-R2-38	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-40	111CNC-R2-39	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-41	111CNC-R2-40	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-42	111CNC-R2-41	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-43	111CNC-R2-42	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-44	111CNC-R2-43	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-45	111CNC-R2-44	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-46	111CNC-R2-45	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-47	111CNC-R2-46	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-48	111CNC-R2-47	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-49	111CNC-R2-48	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-50	111CNC-R2-49	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-51	111CNC-R2-50	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-52	111CNC-R2-51	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-53	111CNC-R2-52	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-54	111CNC-R2-53	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-55	111CNC-R2-54	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-56	111CNC-R2-55	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-57	111CNC-R2-56	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-58	111CNC-R2-57	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-59	111CNC-R2-58	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-60	111CNC-R2-59	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-61	111CNC-R2-60	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-62	111CNC-R2-61	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-63	111CNC-R2-62	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-64	111CNC-R2-63	Y 10.07	MD	0.037	8	10/18/85	11:27:00	0.76	0.76	1.08	109	56944	58080	76604		
21413-65	111CNC-R2-6															

California Analytical Laboratories, Inc.

POLYCHLORINATED DIOXIN/FURAN ANALYSIS

TICKET NO. 21349

CLIENT ID: IT-NCBC-R1-01

Date Analyzed: 9/3/85 Column: DB-5

CAL ID: 21349-1

Weight: 10.09 g

FURANS .	AMOUNT FOUND (ng/g)	DETECTION LIMIT (ng/g)
tetra (total)	8.0	-
(2378*)	2.4	-
penta	8.1	-
(12378)	ND	0.059
(23478)	0.043	-
hexa	0.33	-
(123478)	ND	0.046
DIOXINS		
tetra (total)	262 A	-
(2378+1234)	260	-
penta	0.87	-
(12378)	0.27	-
hexa	0.62	-
(123478)	ND	0.047

* Accuracy 37Cl-TCDD = 113%

ND = Not Detected

* Includes 1,2,4,9; 1,2,7,9; 2,3,4,6; 2,4,7; 2,3,4,8

A = Data taken from 2,3,7,8-TCDD specific analysis

PREPARED BY: REHAPPROVED BY: MNODATE: 1/21/86

California Analytical Laboratories, Inc.

3108

California Analytical Laboratories, Inc.

POLYCHLORINATED DIOXIN/FURAN ANALYSIS

TICKET NO. 21349

CLIENT ID: IT-NCBC-R2-01

Date Analyzed: 9/3/85 Column: D3-5

CAL ID: 21349-2

Weight: 10.03 g

FURANS	AMOUNT FOUND (ng/g)	DETECTION LIMIT (ng/g)
tetra (total)	12.2	-
(2378*)	3.4	-
penta	10.7	-
(12378)	ND	0.10
(23478)	ND	0.062
hexa	0.82	-
(123478)	0.045	-
DIOXINS		
tetra (total)	274 A	-
(2378+1234)	272	-
penta	1.1	-
(12378)	0.33	-
hexa	0.68	-
(123478)	ND	0.060

* Accuracy 37Cl-TCDD = 110%

ND = Not Detected

* Includes 1,2,4,9; 1,2,7,9; 2,3,4,6; 2,3,4,7; 2,3,4,8

A = Data taken from 2,3,7,8-TCDD specific analysis

PREPARED BY: 224

APPROVED BY: [Signature]

DATE: 10/1/85

312

California Analytical Laboratories, Inc.

California Analytical Laboratories, Inc.

POLYCHLORINATED DIOXIN/FURAN ANALYSIS

TICKET NO. 21349

CLIENT ID: IT-NCBC-R3-01

Date Analyzed: 9/03/85 Column: DB-5

CAL ID: 21349-4

Weight: 10.32 g

FURANS	AMOUNT FOUND (ng/g)	DETECTION LIMIT (ng/g)
tetra (total) (2378*)	10.2 2.8	-
penta (12378)	10.0 ND	-
(23478)	ND	0.066 0.037
hexa (123478)	0.73 ND	- 0.040
DIOXINS		
tetra (total) (2378+1234)	239 A 236	-
penta (12378)	1.3 0.29	-
hexa (123478)	0.53 ND	- 0.094

‡ Accuracy 37Cl-TCDD = 140‡

ND = Not Detected

* Includes 1,2,4,9; 1,2,7,9; 2,3,4,6; 2,3,4,7; 2,3,4,8

A = Data taken from 2,3,7,8-TCDD specific analysis

PREPARED BY: GAH

APPROVED BY: [Signature]

DATE: 1/21/86

California Analytical Laboratories, Inc.

31.0

California Analytical Laboratories, Inc.

POLYCHLORINATED DIOXIN/FURAN ANALYSIS

TICKET NO. 21349

CLIENT ID: IT-NCBC-R4-01

Date Analyzed: 9/03/85

Column: DB-5

CAL ID: 21349-5

Weight: 10.1 g

FURANS	AMOUNT FOUND (ng/g)	DETECTION LIMIT (ng/g)
tetra (total) (2378*)	12.7 3.7	- -
penta (12378) (23478)	11.9 ND 0.077	- 0.074 -
hexa (123478)	0.76 ND	- 0.037
DIOXINS		
tetra (total) (2378+1234)	268 A 266	- -
penta (12378)	1.5 0.35	- -
hexa (123478)	1.1 ND	- 0.060

* Accuracy 37Cl-TCDD = 95%

ND = Not Detected

* Includes 1,2,4,9; 1,2,7,9; 2,3,4,6; 2,3,4,7; 2,3,4,8

A = Data taken from 2,3,7,8-TCDD specific analysis

PREPARED BY: RJA

APPROVED BY: MMK

DATE: 11/21/86

3135

California Analytical Laboratories, Inc.

California Analytical Laboratories, Inc.

POLYCHLORINATED DIOXIN/FURAN ANALYSIS

TICKET NO. 21349

CLIENT ID: IT-NCBC-R5-01

Date Analyzed: 9/03/85 Column: DB-5

CAL ID: 21349-6

Weight: 10.03 g

FURANS	AMOUNT FOUND (ng/g)	DETECTION LIMIT (ng/g)
tetra (total) (2378*)	10.8 3.0	- -
penta (12378) (23478)	10.8 ND ND	- 0.069 0.034
hexa (123478)	0.37 ND	- 0.039
DIOXINS		
tetra (total) (2378+1234)	235 A 233	- -
penta (12378)	1.4 0.29	- -
hexa (123478)	0.47 ND	- 0.019

‡ Accuracy 37Cl-TCDD = 110%

ND = Not Detected

* Includes 1,2,4,9; 1,2,7,9; 2,3,4,6; 2,3,4,7; 2,3,4,8

A = Data taken from 2,3,7,8-TCDD specific analysis

PREPARED BY: EJA

APPROVED BY: [Signature]

DATE: 1/21/86

321

California Analytical Laboratories, Inc.

California Analytical Laboratories, Inc.

POLYCHLORINATED DIOXIN/FURAN ANALYSIS

TICKET NO. 21349

CLIENT ID: IT-NCBC-R1-02

Date Analyzed: 9/03/85 Column: DB-5

CAL ID: 21349-7

Weight: 10.46 g

FURANS	AMOUNT FOUND (ng/g)	DETECTION LIMIT (ng/g)
tetra (total) (2378*)	ND ND	0.045 0.043
penta (12378) (23478)	ND ND ND	0.029 0.029 0.029
hexa (123478)	ND ND	0.050 0.050

DIOXINS

tetra (total) (2378+1234)	ND ND	0.076 0.076
penta (12378)	ND ND	0.20 0.20
hexa (123478)	ND ND	0.089 0.033

‡ Accuracy 37Cl-TCDD = 103‡

ND = Not Detected

* Includes 1,2,4,9; 1,2,7,9; 2,3,4,6; 2,3,4,7; 2,3,4,8

PREPARED BY: EHL

APPROVED BY: [Signature]

DATE: 12/86

California Analytical Laboratories, Inc.

California Analytical Laboratories, Inc.

POLYCHLORINATED DIOXIN/FURAN ANALYSIS

TICKET NO: 21413

CLIENT ID: IT-NCBC-R2-02

DATE ANALYZED: 8/30/85 COLUMN: DB-5

CAL ID: 21413-5

WEIGHT: 10.08 g

	AMOUNT FOUND (ng/g)	DETECTION LIMIT (ng/g)
FURANS		
Total TCDF	ND	0.11
2,3,7,8-TCDF	ND	0.11
Total PCDF	0.14	-
1,2,3,7,8-PCDF	ND	0.059
2,3,4,7,8-PCDF	ND	0.059
Total HCDF	ND	0.12
1,2,3,4,7,8-HCDF	ND	0.12
DIOXINS		
Total TCDD	0.23	-
2,3,7,8-TCDD	0.23	-
Total PCDD	ND	0.39
1,2,3,7,8-PCDD	ND	0.39
Total HCDD	ND	0.44
1,2,3,4,7,8-HCDD	ND	0.44

* Accuracy 37Cl-TCDD = 95%

ND = Not Detected

PREPARED BY:

APPROVED BY:

DATE: 9/10/85

3.66

California Analytical Laboratories, Inc.

California Analytical Laboratories, Inc.

POLYCHLORINATED DIOXIN/FURAN ANALYSIS

TICKET NO: 21413

CLIENT ID: IT-NCBC-R3-02

DATE ANALYZED: 8/30/85 COLUMN: DB-5

CAL ID: 21413-11

WEIGHT: 10.09 g

	AMOUNT FOUND (ng/g)	DETECTION LIMIT (ng/g)
FURANS		
Total TCDF	ND	0.096
2,3,7,8-TCDF	ND	0.096
Total PCDF	ND	0.076
1,2,3,7,8-PCDF	ND	0.076
2,3,4,7,8-PCDF	ND	0.076
Total HCDF	ND	0.070
1,2,3,4,7,8-HCDF	ND	0.070
DIOXINS		
Total TCDD	0.11	-
2,3,7,8-TCDD	0.11	-
Total PCDD	ND	0.40
1,2,3,7,8-PCDD	ND	0.40
Total HCDD	ND	0.46
1,2,3,4,7,8-HCDD	ND	0.46

* Accuracy 37Cl-TCDD = 75%

ND = Not Detected

PREPARED BY:

APPROVED BY:

DATE: 9/10/85

California Analytical Laboratories, Inc.

California Analytical Laboratories, Inc.

POLYCHLORINATED DIOXIN/FURAN ANALYSIS

TICKET NO. 21484

CLIENT ID: IT-NCSC-R4-02

Date Analyzed: 9/03/85 Column: DB-5

CAL ID: 21484-6

Weight: 10.45 g

FURANS	AMOUNT FOUND (ng/g)	DETECTION LIMIT (ng/g)
tetra (total)	0.13	-
(2378*)	0.13	-
penta	0.54	-
(12378)	ND	0.038
(23478)	ND	0.038
hexa	ND	0.063
(123478)	ND	0.063
DIOXINS		
tetra (total)	0.61	-
(2378+1234)	0.61	-
penta	ND	0.25
(12378)	ND	0.25
hexa	ND	0.51
(123478)	ND	0.51

0.61
0.61 *0.6* *all summary data checked*

* Accuracy 37Cl-TCDD = 107%

ND = Not Detected

PREPARED BY:

EJH

APPROVED BY:

me

DATE:

1/21/86

California Analytical Laboratories, Inc.

POLYCHLORINATED DIOXIN/FURAN ANALYSIS

TICKET NO. 21484

CLIENT ID: IT-NCBC-R5-02

Date Analyzed: 9/03/85 Column: DB-5

CAL ID: 21484-09

Weight: 10.33 g

FURANS	AMOUNT FOUND (ng/g)	DETECTION LIMIT (ng/g)
tetra (total) (2378*)	0.95 0.077	- -
penta (12378)	1.0 ND	- 0.025
(23478)	ND	0.025
hexa (123478)	ND ND	0.018 0.018
DIOXINS		
tetra (total) * (2378+1234)	0.75 A 0.51	- -
penta (12378)	ND ND	0.17 0.17
hexa (123478)	ND ND	0.037 0.037

* Accuracy 37Cl-TCDD = 99%

ND = Not Detected

A = Data taken from 2,3,7,8-TCDD specific analysis

PREPARED BY:

CH

APPROVED BY:

Muro

DATE:

11/2/86

278

California Analytical Laboratories, Inc.

California Analytical Laboratories, Inc.

POLYCHLORINATED DIOXIN/FURAN ANALYSIS

TICKET NO. 21349

CLIENT ID: IT-NCBC-R1-03

Date Analyzed: 9/26/85 Column: DB-5

CAL ID: 21349-3

Volume: 50 ml

FURANS	AMOUNT FOUND (ng/ml)	DETECTION LIMIT (ng/ml)
tetra (total) (2378*)	31.0 7.4	-
penta (12378)	3.7	-
(23478)	0.37 0.30	-
hexa (123478)	1.7 ND	- 0.060
DIOXINS		
tetra (total) (2378+1234)	46.1 A 43.3	-
penta (12378)	15.7 - 4.3 4.3	-
hexa (123478)	0.84 0.094	-

* Accuracy 37Cl-TCDD = 97%

ND = Not Detected

* Includes 1,2,4,9; 1,2,7,9; 2,3,4,6; 2,3,4,7; 2,3,4,8

A = Data taken from 2,3,7,8-TCDD specific analysis

PREPARED BY: REH

APPROVED BY: [Signature]

DATE: 1/31/86

California Analytical Laboratories, Inc.

POLYCHLORINATED DIOXIN/FURAN ANALYSIS

TICKET NO. 21413

CLIENT ID: IT-NCBC-R2-03

Date Analyzed: 9/26/85

Column: DB-5

CAL ID: 21413-6

Volume: 50 ml

FURANS	AMOUNT FOUND (ng/ml)	DETECTION LIMIT (ng/ml)
tetra (total)	94.1	-
(2378*)	23.6	-
penta	69.9	-
(12378)	1.1	-
(23478)	0.71	-
hexa	4.7	-
(123478)	0.13	-
DIOXINS		
tetra (total)	150 A	-
(2378+1234)	148	-
penta	59.2	-
(12378)	13.5	-
hexa	2.9	-
(123478)	0.33	-

* Accuracy 37Cl-TCDD = 130%

ND = Not Detected

* Includes 1,2,4,9; 1,2,7,9; 2,3,4,6; 2,3,4,7; 2,3,4,8

A = Data taken from 2,3,7,8-TCDD specific analysis

PREPARED BY: GAH

APPROVED BY: Vine

DATE: 11/2/86

3424

California Analytical Laboratories, Inc.

California Analytical Laboratories, Inc.

POLYCHLORINATED DIOXIN/FURAN ANALYSIS

TICKET NO. 21484

CLIENT ID: IT-NCBC-R3-03

Date Analyzed: 9/26/85 Column: DB-5

CAL ID: 21484-03

Volume: 50 ml

FURANS	AMOUNT FOUND (ng/ml)	DETECTION LIMIT (ng/ml)
tetra (total) (2378*)	155 42.0	- -
penta (12378) (23478)	114 2.2 1.6	- - -
hexa (123478)	9.7 ND	- 0.24
DIOXINS		
tetra (total) * (2378+1234)	261 A 250	- -
penta (12378)	101 21.0	- -
hexa (123478)	4.7 0.54	- -

* Accuracy 37Cl-TCDD = Unable to calculate due to contribution from native 2,3,7,8-TCDD.

ND = Not Detected

A = Data taken from 2,3,7,8-TCDD specific analysis

PREPARED BY: Eit

APPROVED BY: me

DATE: 1/21/86

California Analytical Laboratories, Inc.

POLYCHLORINATED DIOXIN/FURAN ANALYSIS

TICKET NO: 21413

CLIENT ID: IT-NCBC-R1-04

DATE ANALYZED: 9/26/85

CAL ID: 21413-1

VOLUME: 50 ml

	AMOUNT FOUND (ng/ml)	DETECTION LIMIT (ng/ml)
FURANS		
Total TCDF	3.8	-
2,3,7,8-TCDF	0.25	-
Total PCDF	1.1	-
1,2,3,7,8-PCDF	ND	0.0055
2,3,4,7,8-PCDF	ND	0.0055
Total HCDF	ND	0.0031
1,2,3,4,7,8-HCDF	ND	0.0031
DIOXINS		
Total TCDD	0.92	-
2,3,7,8-TCDD	0.60	-
Total PCDD	2.3	-
1,2,3,7,8-PCDD	0.96	-
Total HCDD	0.037	-
1,2,3,4,7,8-HCDD	ND	0.0090

* Accuracy 37Cl-TCDD = 97%

ND = Not Detected
RX = Re-extraction

RI = Reinjection

PREPARED BY: *[Signature]*

APPROVED BY: *[Signature]*

DATE: 10/22/85

California Analytical Laboratories, Inc.

253

California Analytical Laboratories, Inc.

POLYCHLORINATED DIOXIN/FURAN ANALYSIS

TICKET NO. 21484

CLIENT ID: IT-NCBC-R3-04

Date Analyzed: 9/26/85 Column: DB-5

CAL ID: 21484-13

Volume: 50 ml

FURANS	AMOUNT FOUND • (ng/ml)	DETECTION LIMIT (ng/ml)
tetra (total) (2378*)	141 28.5	- -
penta (12378) (23479)	74.0 1.5 0.96	- - -
hexa (123478)	6.8 ND	- 0.14
DIOXINS		
tetra (total) * (2378+1234)	243 A 227	- -
penta (12378)	94.7 20.5	- -
hexa (123478)	4.0 0.41	- -

* Accuracy 37Cl-TCDD = Unable to calculate due to contribution from native 2,3,7,8-TCDD.

ND = Not Detected

A = Data taken from 2,3,7,8-TCDD specific analysis

PREPARED BY: [Signature]

APPROVED BY: [Signature]

DATE: 11/21/86

2855

California Analytical Laboratories, Inc.

California Analytical Laboratories, Inc.

POLYCHLORINATED DIOXIN/FURAN ANALYSIS

TICKET NO. 21484

CLIENT ID: IT-NCBC-R1-5-06

Date Analyzed: 9/03/85

Column: DB-5

CAL ID: 21484-1

Weight: 10.15 g

FURANS	AMOUNT FOUND (ng/g)	DETECTION LIMIT (ng/g)
tetra (total) (2378*)	316 87.6	- -
penta (12378)	207 5.3	- -
(23478)	4.2	-
hexa (123478)	38.8 0.61	- -
DIOXINS		
tetra (total) (2378+1234)	543 A 515	- -
penta (12378)	229 58.4	- -
hexa (123478)	57.9 8.0	- -

* Accuracy 37Cl-TCDD = Unable to calculate due to large 2,3,7,8-TCDD peak.

A = Data taken from 2,3,7,8-TCDD specific analysis

ND = Not Detected

PREPARED BY: RTH

APPROVED BY: Muo

DATE: 10/1/85

California Analytical Laboratories, Inc.

California Analytical Laboratories, Inc.

POLYCHLORINATED DIOXIN/FURAN ANALYSIS

TICKET NO. 21349

CLIENT ID: IT-NCBC-R1-09

Date Analyzed: 9/17/85

Column: DB-3

CAL ID: 21349-8

Weight: 10.09 g

FURANS	AMOUNT FOUND (ng/g)	DETECTION LIMIT (ng/g)
tetra (total)	ND	0.015
(2378*)	ND	0.015
penta	ND	0.051
(12378)	ND	0.051
(23478)	ND	0.051
hexa	ND	0.049
(123478)	ND	0.049
DIOXINS		
tetra (total)	ND	0.043
(2378+1234)	ND	0.043
penta	ND	0.36
(12378)	ND	0.36
hexa	ND	0.053
(123478)	ND	0.053

ND = Not Detected

* Includes 1,2,4,9; 1,2,7,9; 2,3,4,6; 2,3,4,7; 2,3,4,8

PREPARED BY: PSH

APPROVED BY: 7/11/85

DATE: 1/21/86

California Analytical Laboratories, Inc.

California Analytical Laboratories, Inc.

POLYCHLORINATED DIOXIN/FURAN ANALYSIS

TICKET NO. 21413

CLIENT ID: IT-NCBC-R2-09

Date Analyzed: 9/26/85

Column: DB-5

CAL ID: 21413-7

Weight: 10.01 g

FURANS	AMOUNT FOUND (ng/g)	DETECTION LIMIT (ng/g)
tetra (total) (2378*)	0.035 ND	- 0.027a
penta (12378) (23478)	0.27 ND ND	- 0.028 0.028
hexa (123478)	ND ND	0.069 0.069
DIOXINS		
tetra (total) * (2378+1234)	0.13 0.13	- -
penta (12378)	ND ND	0.49 0.49
hexa (123478)	ND ND	0.30 0.30

a = Peak present with correct retention time; but an unacceptable ratio

* maybe 1 or more different isomers of 2,3,7,8-TCDD

ND = Not Detected

PREPARED BY: RJH

APPROVED BY: Wu

DATE: 10/1/86

3040

California Analytical Laboratories, Inc.

POLYCHLORINATED DIOXIN/FURAN ANALYSIS

TICKET NO: 21434

CLIENT ID: IT-NCBC-R5-09

DATE ANALYZED: 9/17/85

CAL ID: 21484-10

WEIGHT: 10.30 g

	AMOUNT FOUND (ng/g)	DETECTION LIMIT (ng/g)
FURANS		
Total TCDF	ND	0.0079
2,3,7,8-TCDF	ND	0.0079
Total PCDF	ND	0.021
1,2,3,7,8-PCDF	ND	0.021
2,3,4,7,8-PCDF	ND	0.021
Total HCDF	ND	0.040
1,2,3,4,7,8-HCDF	ND	0.040
DIOXINS		
Total TCDD	ND	0.014
2,3,7,8-TCDD	ND	0.014
Total PCDD	ND	0.27
1,2,3,7,8-PCDD	ND	0.27
Total HCDD	ND	0.080
1,2,3,4,7,8-HCDD	ND	0.080

ND = Not Detected
RX = Re-extraction

RI = Reinjection

PREPARED BY:

APPROVED BY:

DATE:

California Analytical Laboratories, Inc.

POLYCHLORINATED DIOXIN/FURAN ANALYSIS

TICKET NO. 21349

CLIENT ID: IT-NCBC-R1-09A

Date Analyzed: 9/17/85 Column: DB-5

CAL ID: 21349-9

Weight: 10.18 g

FURANS	AMOUNT FOUND (ng/g)	DETECTION LIMIT (ng/g)
tetra (total)	ND	0.0079
(2378*)	ND	0.0079
penta	ND	0.047
(12378)	ND	0.047
(23478)	ND	0.047
hexa	ND	0.025
(123478)	ND	0.025

DIOXINS

tetra (total)	ND	0.038
(2378+1234)	ND	0.038
penta	ND	0.21
(12378)	ND	0.21
hexa	ND	0.049
(123478)	ND	0.049

ND = Not Detected

* Includes 1,2,4,9; 1,2,7,9; 2,3,4,6; 2,3,4,7; 2,3,4,8

PREPARED BY: RTH

APPROVED BY: WJC

DATE: 10/21/85

California Analytical Laboratories, Inc.

POLYCHLORINATED DIOXIN/FURAN ANALYSIS

TICKET NO: 21413

CLIENT ID: IT-NCBC-R2-09A

DATE ANALYZED: 9/17/85

CAL ID: 21413-8

WEIGHT: 10.02 g

	AMOUNT FOUND (ng/g)	DETECTION LIMIT (ng/g)
FURANS		
Total TCDF	ND	0.0046
2,3,7,8-TCDF	ND	0.0046
Total PCDF	ND	0.033
1,2,3,7,8-PCDF	ND	0.033
2,3,4,7,8-PCDF	ND	0.033
Total HCDF	ND	0.020
1,2,3,4,7,8-HCDF	ND	0.020
DIOXINS		
Total TCDD	ND	0.013
2,3,7,8-TCDD	ND	0.013
Total PCDD	ND	0.19
1,2,3,7,8-PCDD	ND	0.19
Total HCDD	ND	0.045
1,2,3,4,7,8-HCDD	ND	0.045

ND = Not Detected
RX = Re-extraction

RI = Reinjection

PREPARED BY: GA

APPROVED BY: RF

DATE: 10/22/85

California Analytical Laboratories, Inc.

POLYCHLORINATED DIOXIN/FURAN ANALYSIS

TICKET NO: 21484

CLIENT ID: IT-NCBC-R5-09A

DATE ANALYZED: 9/17/85

CAL ID: 21484-11

WEIGHT: 10.14 g

	AMOUNT FOUND (ng/g)	DETECTION LIMIT (ng/g)
FURANS		
Total TCDF	ND	0.0074
2,3,7,8-TCDF	ND	0.0074
Total PCDF	ND	0.025
1,2,3,7,8-PCDF	ND	0.025
2,3,4,7,8-PCDF	ND	0.025
Total HCDF	ND	0.027
1,2,3,4,7,8-HCDF	ND	0.027
DIOXINS		
Total TCDD	ND	0.015
2,3,7,8-TCDD	ND	0.015
Total PCDD	ND	0.23
1,2,3,7,8-PCDD	ND	0.23
Total HCDD	ND	0.078
1,2,3,4,7,8-HCDD	ND	0.078

ND = Not Detected
RX = Re-extraction

RI = Reinjection

PREPARED BY: SN

APPROVED BY: PHY

DATE: 10/22/85

293.

California Analytical Laboratories, Inc.

POLYCHLORINATED DIOXIN/FURAN ANALYSIS

CLIENT ID: IT-NCBC-R1-5-10

CAL ID: 21484-2

DETECTION LIMIT
(ng/g)

Total TCDF
2,3,7,8-TCDF

Total PCDF
1,2,3,7,8-PCDF
2,3,4,7,8-PCDF

Total HCDF
1,2,3,4,7,8-HCDF

ND

ND

0.0028

0.0028

ND

ND

ND

0.011

0.011

0.011

ND

ND

0.017

0.017

Total TCDD
2,3,7,8-TCDD

Total PCDD
1,2,3,7,8-PCDD

Total HCDD
1,2,3,4,7,8-HCDD

ND

ND

0.0088

0.0088

ND

ND

0.13

0.15

ND

ND

0.027

0.027

RI = Reinjection

PREPARED BY:

APPROVED BY:

DATE:

253

California Analytical Laboratories, Inc.

POLYCHLORINATED DIOXIN/FURAN ANALYSIS

TICKET NO: 21591

CLIENT ID: METHOD BLANK

DATE ANALYZED: 8/30/85 COLUMN: DB-5

CAL ID: 21591MB

WEIGHT: 10 g

	AMOUNT FOUND (ng/g)	DETECTION LIMIT (ng/g)
FURANS		
Total TCDF	ND	0.0050
2,3,7,8-TCDF	ND	0.0050
Total PCDF	ND	0.011
1,2,3,7,8-PCDF	ND	0.011
2,3,4,7,8-PCDF	ND	0.011
Total HCDF	ND	0.021
1,2,3,4,7,8-HCDF	ND	0.021
DIOXINS		
Total TCDD	ND	0.0046
2,3,7,8-TCDD	ND	0.0046
Total PCDD	ND	0.097
1,2,3,7,8-PCDD	ND	0.097
Total HCDD	ND	0.053
1,2,3,4,7,8-HCDD	ND	0.053

* Accuracy 37Cl-TCDD = 102%

ND = Not Detected

PREPARED BY: [Signature]

APPROVED BY: [Signature]

DATE: 8/30/85

California Analytical Laboratories, Inc.

California Analytical Laboratories, Inc.

POLYCHLORINATED DIOXIN/FURAN ANALYSIS

TICKET NO. 21413

CLIENT ID: METHOD BLANK

Date Analyzed: 10/16/85 Column: DB-5

CAL ID: 21413-2MBRS

Weight: 10.00 g

FURANS	AMOUNT FOUND (ng/g)	DETECTION LIMIT (ng/g)
tetra (total) (2378*)	ND ND	0.14 0.14
penta	ND	0.086
hexa	ND	0.10
DIOXINS		
tetra (total) (2378+1234)	ND ND	0.12 0.12
penta	ND	0.31
hexa	ND	0.14

* Accuracy 37Cl-TCDD = 118%

ND = Not Detected

PREPARED BY:

APPROVED BY:

DATE:

California Analytical Laboratories, Inc.

California Analytical Laboratories, Inc.

POLYCHLORINATED DIOXIN/FURAN ANALYSIS

TICKET NO: 21413

CLIENT ID: METHOD BLANK

DATE ANALYZED: 10/16/85

CAL ID: 21413-2MBRXRX

WEIGHT: 10.0g

	AMOUNT FOUND (ng/g)	DETECTION LIMIT (ng/g)
FURANS		
Total TCDF	ND	0.19
2,3,7,8-TCDF	ND	0.19
Total PCDF	ND	0.12
1,2,3,7,8-PCDF	ND	0.12
2,3,4,7,8-PCDF	ND	0.12
Total HCDF	ND	0.45
1,2,3,4,7,8-HCDF	ND	0.45
DIOXINS		
Total TCDD	ND	0.19
2,3,7,8-TCDD	ND	0.19
Total PCDD	ND	0.55
1,2,3,7,8-PCDD	ND	0.55
Total HCDD	ND	0.17
1,2,3,4,7,8-HCDD	ND	0.17

* Accuracy 37Cl-TCDD = 102%

ND = Not Detected
RX = Re-extraction

RI = Re-injection

PREPARED BY: [Signature]

APPROVED BY: [Signature]

DATE: 11/22/85

California Analytical Laboratories, Inc.

Organics Analysis Data Sheet (Page 1)

Appendix O, Exhibit 3

Laboratory Name: California Analytical Laboratories, Inc.
Lab Sample ID No: 21349-1
Sample Matrix: SOIL
Data Release Authorized By: POI

Case No: 21349
QC Report No: NR
Contract No: NR
Date Sample Received: 8/15/85

Volatile Compounds

Concentration: Medium
Date Extracted/Prepared: 9/13/85
Date Analyzed: 9/13/85
Conc/Dil Factor: 100 pH: NR
Percent Moisture: NR
Percent Moisture (Decanted): NR

CAS Number		ug/Kg
74-87-3	Chloromethane	200 U
74-83-8	Bromomethane	200 U
75-01-4	Vinyl Chloride	200 U
75-05-3	Chloroethane	200 U
75-09-2	Methylene Chloride	500 U
1-1	Acetone	500 U
3-0	Carbon Disulfide	200 U
1,1,1-4	1,1,1-Dichloroethane	200 U
75-34-3	1,1-Dichloroethane	200 U
156-60-3	Trans-1,2-Dichloroethane	200 U
67-66-3	Chloroform	200 U
107-06-2	1,2-Dichloroethane	200 U
78-83-3	2-Butanone	500 U
71-65-4	1,1,1-Trichloroethane	200 U
56-23-5	Carbon Tetrachloride	200 U
106-05-4	Vinyl Acetate	1000 U
75-27-4	Bromodichloromethane	200 U

CAS Number		ug/Kg
78-87-5	1,2-Dichloropropene	200 U
10061-02-8	Trans-1,3-Dichloropropene	200 U
78-01-6	Trichloroethene	200 U
124-46-1	Dibromochloromethane	200 U
78-06-8	1,1,2-Trichloroethane	200 U
71-43-2	Benzene	200 U
10061-01-6	cis-1,3-Dichloropropene	200 U
110-75-8	2-Chloroethylvinylether	1000 U
75-25-2	Bromotoluene	200 U
106-10-1	4-Methyl-2-Pentanone	500 U
98-178-6	2-Hexanone	500 U
127-18-4	Tetrachloroethane	200 U
78-34-6	1,1,2,2-Tetrachloroethane	200 U
106-86-3	Toluene	200 U
106-80-7	Chlorobenzene	200 U
100-41-4	Ethylbenzene	500 U
100-42-6	Styrene	200 U
	Total Xylenes	200 U

Data Reporting Qualifiers

For reporting results to EPA, the following results qualifiers are used. Additional flags or footnotes explaining results are encouraged. However, the definition of each flag must be explicit.

Value If the result is a value greater than or equal to the detection limit, report the value.

U Indicates compound was analyzed for but not detected. Report the minimum detection limit for the sample with the U (e.g. 10U) based on necessary concentration/dilution factors. (This is not necessarily the instrument detection limit.) The footnote should read: U - Compound was analyzed for but not detected. The number is the minimum attainable detection limit for the sample.

J Indicates an estimated value. This flag is used either when estimating a concentration for tentatively identified compounds where a 1:1 response is assumed or when the mass spectral data indicated the presence of a compound that meets the identification criteria but the result is less than the specified detection limit but greater than zero (e.g. 10U). If limit of detection is 10ug/l and a concentration of 3ug/l is calculated, report as 3U.

C This flag applies to pesticide parameters where the identification has been confirmed by GC/MS. Single component pesticides ≥ 10 ug/l in the final extract should be confirmed by GC/MS.

B This flag is used when the analyte is found in the blank as well as a sample. It indicates possible/probable blank contamination and warns the data user to take appropriate action.

Other Other specific flags and footnotes may be required to properly define the results. If used, they must be fully described and such description attached to the data summary report.

NA Not Analyzed.
NR See cover letter.
S Not Required.
S Suspect Compound.

Organics Analysis Data Sheet (Page 2)

Semivolatile Compounds

Concentration: LOW
Date Extracted/Prepared: 8/23/85
Date Analyzed: 8/1/86
Conc/Dil Factor: 300/5ML

GPC Cleanup: NO
Separatory Funnel Extraction: YES
Continuous Liquid - Liquid Extraction: NO

show conc 266

CAS Number		ug/Kg
105-85-2	Phenol	500 U
111-44-4	bis(2-Chloroethoxy) Ether	500 U
95-57-8	2-Chlorophenol	500 U
541-73-1	1,3-Dichlorobenzene	500 U
105-65-7	1,4-Dichlorobenzene	500 U
105-81-6	Benzyl Alcohol	500 U
50-1	1,2-Dichlorobenzene	500 U
2-45-7	2-Methylphenol	500 U
39539-13-9	bis(2-chloroethoxy) Ether	1000 U
105-44-8	4-Methylphenol	500 U
621-64-7	N-Nitrosodimethylamine	500 U
67-73-1	Hexachlorobenzene	500 U
88-66-3	Nitrobenzene	500 U
78-88-1	Isophenol	500 U
85-75-8	3-Nitrophenol	1000 U
105-67-8	2,4-Dimethylphenol	500 U
55-65-0	Boric Acid	2500 U
111-91-1	bis(2-Chloroethoxy) Methane	1000 U
120-82-2	2,4-Dichlorophenol	370 J
120-82-1	1,2,4-Trichlorobenzene	500 U
91-20-3	Naphthalene	500
105-47-8	4-Chloronitrobenzene	500 U
87-68-3	Hexachlorocyclopentadiene	500 U
98-65-7	4-Chloro-3-Methylphenol	500 U
91-67-6	2-Methylnaphthalene	500 U
77-47-4	Hexachlorocyclopentadiene	500 U
88-08-2	2,4,6-Trichlorophenol	13000 J
88-08-4	2,4,5-Trichlorophenol	J
78-7	2-Chloronaphthalene	500 U
174-4	2-Nitronitrobenzene	2500 U
131-11-3	Dimethyl Phthalate	500 U
205-98-8	Acenaphthylene	500 U
95-08-2	3-Nitrophenol	2500 U

CAS Number		ug/Kg
83-32-6	Acenaphthene	500 U
91-28-6	2,4-Dichlorophenol	2500 U
2005-03-7	4-Nitrophenol	2500 U
132-64-9	Chlorophenol	500 U
121-14-3	2,4-Dichlorobenzene	1800 U
808-20-2	2,5-Dichlorobenzene	1800 U
84-85-2	Dichlorophthalate	500 U
7005-72-3	4-Chlorophenyl phenyl ether	500 U
85-73-7	Fluorene	500 U
2000-01-4	4-Nitroaniline	2500 U
534-52-1	4,6-Dinitro-2-Methylphenol	1000 U
86-30-4	N-Nitrosodiphenylamine(1)	500 U
101-45-3	4-Bromophenyl phenyl ether	500 U
118-74-1	Hexachlorobenzene	500 U
67-88-4	Pentachlorophenol	2500 U
85-01-4	Phenanthrene	500 U
120-12-7	Anthracene	500 U
84-74-2	Di-n-Butylphthalate	500 U
205-44-0	Fluoranthene	430 J
128-09-0	Pyrene	300 J
85-68-7	Burylbenzophthalate	500 U
91-84-1	1,3-Dichlorobenzophthalate	1000 U
58-65-3	Benz(a)Anthracene	500 U
117-81-7	bis(2-Ethylhexyl) Phthalate	500 U
218-01-8	Chrysene	330 J
117-84-0	Di-n-Octyl Phthalate	500 U
205-98-2	Benz(b)Fluoranthene	1000 U
207-08-8	Benz(k)Fluoranthene	1000 U
80-32-8	Benz(a)Pyrene	1000 U
193-13-6	Indene(1,2,3-cd)Pyrene	1000 U
51-70-3	Dibenz(a,h)Anthracene	1000 U
91-24-2	Benz(g,h,i)Perylene	1000 U

(1) - Cannot be separated from diphenylamine

Organics Analysis Data Sheet (Page 3)

Pesticide/PCBs

Concentration: LOW
Date Extracted/Prepared: 8/23/85
Date Analyzed: 8/18/85
Conc/Dil Factor: 1.5G/50ML

GPC Cleanup: NO
Separatory Funnel Extraction: YES
Continuous Liquid - Liquid Extraction: NO

CAS Number		ug/Kg
319-84-6	Alpha-BHC	30 U
319-85-7	Beta-BHC	30 U
319-85-8	Delta-BHC	30 U
58-88-8	Gamma-BHC (Lindane)	30 U
78-44-8	Heptachlor	30 U
308-00-2	Aldrin	30 U
1024-87-3	Heptachlor Epoxide	30 U
838-88-6	Endosulfan I	70 U
66-87-1	Dieldrin	70 U
72-88-6	4,4'-DDE	70 U
72-20-8	Endrin	75 U
33213-65-6	Endosulfan II	70 U
72-84-8	4,4'-DDD	130 U
1021-07-8	Endosulfan Sulfate	130 U
50-29-3	4,4'-DDT	130 U
72-43-8	Methoxychlor	670 U
63484-70-6	Endrin Ketone	NA
87-74-8	Chlordane	670 U
8001-35-2	Toxaphene	6700 U
12874-11-2	Aroclor-1018	NA
11104-28-2	Aroclor-1221	NA
11141-16-6	Aroclor-1232	NA
53489-21-9	Aroclor-1242	670 U
12872-29-6	Aroclor-1248	670 U
11087-48-1	Aroclor-1254	670 U
11086-82-6	Aroclor-1260	670 U

V_i = Volume of extract injected (ul)

V_s = Volume of water extracted (ml)

W_s = Weight of sample extracted (g)

V_t = Volume of total extract (ul)

V_s = NR

or W_s = 1.5

V_t = 50000

V_i = 5

28

Sample Number
IT-NCBC-RZ-01

Organics Analysis Data Sheet (Page 1)

Laboratory Name: California Analytical Laboratories, Inc.
Lab Sample ID No: 21349-2
Sample Matrix: SOIL
Data Release Authorized By: PJ

Case No: 21349
QC Report No: NR
Contract No: NR
Date Sample Received: 8/15/85

Volatile Compounds

Concentration: Medium
Date Extracted/Prepared: 9/13/85
Date Analyzed: 9/13/85
Conc/Dil Factor: 100 pH: NR
Percent Moisture: NR
Percent Moisture (Decanted): NR

CAS Number		ug/Kg
76-87-3	Chloromethane	200 U
74-83-8	Bromomethane	200 U
75-01-4	Vinyl Chloride	200 U
75-08-2	Chloroethane	200 U
75-08-3	Methylene Chloride	200 U
67-64-1	Acetone	200 U
75-18-6	Carbon Disulfide	200 U
75-35-4	1,1-Dichloroethane	200 U
75-34-3	1,1-Dichloroethene	200 U
156-44-6	Trans-1,2-Dichloroethane	200 U
67-66-3	Chloroform	200 U
107-06-2	1,2-Dichloroethane	200 U
78-93-3	2-Butanone	200 U
71-43-4	1,1,1-Trichloroethane	200 U
56-23-5	Carbon Tetrachloride	200 U
105-75-4	Vinyl Acetate	1000 U
75-27-4	Bromodichloromethane	200 U

CAS Number		ug/Kg
75-57-5	1,2-Dichloropropane	200 U
10061-02-6	Trans-1,3-Dichlorocyclopentane	200 U
75-01-4	Trichloroethene	200 U
124-48-1	Dibromodichloromethane	200 U
75-08-6	1,1,2-Trichloroethane	200 U
71-43-2	Benzene	200 U
10061-01-6	cis-1,3-Dichlorocyclopentane	200 U
110-73-8	2-Chloroethylvinylether	1000 U
75-25-2	Bromotoluene	200 U
106-10-1	4-Methyl-2-Pentanone	500 U
591-78-6	2-Hexanone	500 U
127-18-4	Tetrachloroethane	200 U
75-34-5	1,1,2,2-Tetrachloroethane	200 U
106-66-3	Toluene	200 U
106-60-7	Chlorobenzene	200 U
100-61-4	Ethylbenzene	500 U
100-42-6	Styrene	200 U
	Total Xylenes	200 U

Data Reporting Qualifiers

For reporting results to EPA, the following results qualifiers are used. Additional flags or footnotes explaining results are encouraged, however, the definition of each flag must be explicit.

Value If the result is a value greater than or equal to the detection limit, report this value.

U Indicates compound was analyzed for but not detected. Report the minimum detection limit for the sample with the U (e.g., 10U) based on necessary concentration/dilution factors. (This is not necessarily the instrument detection limit.) The footnote should read: U - Compound was analyzed for but not detected. The number is the minimum acceptable detection limit for the sample.

J Indicates an estimated value. This flag is used either when estimating a concentration for an analyte identified component where a 1:1 report is assumed or when the mass spectral data indicated the presence of a compound that meets the identification criteria but the result is less than the specified detection limit but greater than zero (e.g., 10U). If limit of detection is 10ug/l and a concentration of 3ug/l is calculated, report as 3J.

C This flag applies to pesticide parameters where the identification has been confirmed by GC/MS. Single component pesticides will only in the final extract should be confirmed by GC/MS.

B This flag is used when the analyte is found in the plant as well as a sample. It indicates possible probable blank contamination and warns the data user to take appropriate action.

Other Other specific flags and footnotes may be required to properly define the results. If used, they must be fully described and such description attached to the final summary report.

NA Not Analyzed.
See cover letter
NR Not Reported
S Sample Contaminated.

CLP: 11/14/85

Form I

Prepared by: EJ

10.85

Organics Analysis Data Sheet (Page 2)

Semivolatile Compounds

Concentration: Low
Date Extracted/Prepared: 8/23/85
Date Analyzed: 9/10/85
Conc/DIL Factor: 300/2ml

GPC Cleanup: NO
Separatory Funnel Extraction: YES
Continuous Liquid - Liquid Extraction: NO

CAS Number	Compound	ug/Kg
108-85-2	Phenol	200 U
111-44-4	bis(2-Chloroethyl) Ether	200 U
95-57-8	2-Chlorophenol	200 U
541-73-1	1,3-Dichlorobenzene	200 U
106-46-7	1,4-Dichlorobenzene	200 U
100-51-6	Benzyl Alcohol	200 U
95-50-1	1,2-Dichlorobenzene	200 U
95-48-7	2-Methylphenol	200 U
39638-32-8	bis(2-chloroisopropyl) Ether	400 U
106-44-8	4-Methylphenol	200 U
521-64-7	N-Nitros-Di-n-Propylamine	200 U
67-72-1	Hexachlorocyclopentadiene	200 U
36-85-1	Nitrobenzene	200 U
78-59-1	Isophorene	200 U
95-75-5	2-Nitrophenol	400 U
103-67-6	2,4-Dimethylphenol	200 U
65-35-0	Serine Acid	220 U
111-91-1	bis(2-Chloroethyl) Methane	400 U
120-83-2	2,6-Dichlorophenol	810
120-82-1	1,2-Trichlorobenzene	200 U
91-20-3	Naphthalene	200 U
106-47-8	4-Chloroaniline	200 U
87-58-3	Hexachlorobutadiene	200 U
58-50-7	4-Chloro-3-Methylphenol	200 U
91-57-6	2-Methylnaphthalene	200 U
77-47-4	Hexachlorocyclopentadiene	200 U
88-06-3	2,4,6-Trichlorophenol	15000 U
95-98-4	2,4,5-Trichlorophenol	8
21-35-7	2-Chloronaphthalene	200 U
6-74-1	2-Nitroaniline	1000 U
11-11-3	Dimethyl Phthalate	200 U
208-98-4	Acenaphthylene	200 U
93-08-2	3-Nitroaniline	1000 U

CAS Number	Compound	ug/Kg
83-32-4	Acenaphthene	200 U
91-28-4	2,4-Dinitrophenol	1000 U
100-62-7	4-Nitrophenol	1000 U
132-64-6	O-Benzothiazole	200 U
121-14-2	2,4-Dinitrochlorobenzene	400 U
855-39-3	2,6-Dinitrotoluene	400 U
84-87-3	Dibenzophthalate	200 U
7085-72-3	4-Chlorophenyl-phenylether	200 U
88-73-7	Mucron	200 U
100-91-8	4-Nitroaniline	1000 U
534-43-1	4,6-Dinitro-2-Methylphenol	400 U
86-30-6	N-Nitrosodiphenylamine(1)	200 U
101-48-3	4-Bromophenyl-phenylether	200 U
118-74-1	Hexachlorobenzene	200 U
87-58-4	Pentachlorophenol	200 U
85-01-8	Phenanthrene	200 U
120-12-7	Anthracene	200 U
84-14-2	2,4,6-Trichlorophenol	200 U
208-44-0	Fluorene	610
129-00-8	Pyrene	830
18-48-7	Benzylbenzylphthalate	200 U
91-84-1	3,5-Dichlorobenzidine	400 U
36-43-3	Benz(a) Anthracene	100 U
117-41-7	bis(2-Ethylhexyl) Phthalate	200 U
218-01-9	Chrysene	170 U
117-84-0	Dibenz(a,h) Anthracene	200 U
705-99-2	Benz(a) Fluorene	160 U
207-08-6	Benz(a) Fluorene	180 U
90-22-4	Benz(a) Pyrene	68 U
195-35-6	Indeno(1,2,3-cd) Pyrene	400 U
53-70-3	Dibenz(a,h) Anthracene	400 U
191-24-2	Benz(a,b,h) Perylene	400 U

(1) - Cannot be separated from diphenylamine

Organics Analysis Data Sheet (Page 3)

Pesticide/PCBs

Concentration: LOW
Date Extracted/Prepared: 9/23/85
Date Analyzed: 9/18/85
Conc/Dil Factor: 1.5G/50ML

GPC Cleanup: NO
Separatory Funnel Extraction: YES
Continuous Liquid - Liquid Extraction: NO

CAS Number		ug/Kg
319-84-6	Alpha-BHC	30 U
319-85-7	Beta-BHC	30 U
319-85-8	Gamma-BHC	30 U
58-88-8	Gamma-BHC (Lindane)	40
75-44-8	Heptachlor	30 U
308-09-2	Aldrin	30 U
1024-87-3	Heptachlor Epoxide	30 U
959-88-8	Endosulfan I	70 U
60-67-1	Dieldrin	70 U
72-68-8	4,4'-DDE	70 U
72-20-8	Endrin	70 U
23213-65-6	Endosulfan II	70 U
72-64-8	4,4'-DDD	130 U
1031-07-8	Endosulfan Sulfate	130 U
50-28-3	4,4'-DDT	130 U
72-43-8	Methoxychlor	670 U
33484-70-8	Endrin Ketone	NA
57-74-8	Chlorzene	670 U
8001-35-2	Toxaphene	6700 U
12874-11-2	Aroclor-1016	NA
11104-25-2	Aroclor-1221	NA
11141-16-8	Aroclor-1232	NA
33469-21-8	Aroclor-1242	670 U
12672-28-8	Aroclor-1248	670 U
11067-48-1	Aroclor-1254	670 U
11086-82-8	Aroclor-1260	670 U

V_i = Volume of extract injected (ul)

V_s = Volume of water extracted (ml)

W_s = Weight of sample extracted (g)

V_t = Volume of total extract (ul)

SS

$V_s = NR$

or $W_s = 1.5$

$V_i = 50000$

$V_t = 5$

Sample Number
IT-NCBC-R3-01

Organics Analysis Data Sheet (Page 1)

Laboratory Name: California Analytical Laboratories, Inc.

Case No: 21349

Lab Sample ID No: 21349-4

QC Report No: NR

Sample Matrix: SOIL

Contract No: NR

Data Release Authorized By: PJS

Date Sample Received: 5/15/85

Volatile Compounds

Concentration: Medium

Date Extracted/Prepared: 9/13/85

Date Analyzed: 9/13/85

Conc/Dil Factor: 100 pH: NR

Percent Moisture: NR

Percent Moisture (Decanted): NR

CAS
Number

ug/Kg

74-87-3	Chloromethane	200 U
74-83-6	Bromomethane	200 U
75-01-4	Vinyl Chloride	200 U
75-08-3	Chloroethane	200 U
75-08-2	Methylene Chloride	500 U
67-64-1	Acetone	500 U
75-15-6	Carbon Dioxide	200 U
75-33-4	1,1-Dichloroethane	200 U
75-34-3	1,1-Dichloroethene	200 U
156-46-8	Trans-1,2-Dichloroethene	200 U
67-66-3	Chloroform	200 U
107-06-2	1,2-Dichloroethane	200 U
75-03-3	2-Buane	500 U
71-45-6	1,1,1-Trichloroethane	200 U
56-23-6	Carbon Tetrachloride	200 U
108-05-4	Vinyl Acetate	1000 U
75-27-4	Bromodichloromethane	200 U

CAS
Number

ug/Kg

75-27-4	1,2-Dichloropropane	200 U
10061-02-4	Trans-1,3-Dichloropropane	200 U
75-01-6	Trichloroethane	200 U
124-48-1	Dibromochloromethane	200 U
75-08-6	1,1,2-Trichloroethane	200 U
71-43-2	Benzene	200 U
10061-01-4	cis-1,3-Dichloropropane	200 U
110-75-8	2-Chloroethylvinylether	1000 U
75-28-2	Bromotoluene	200 U
106-10-1	n-Methyl-2-Pentanone	500 U
591-78-6	2-Hexanone	500 U
127-18-4	Tetrachloroethane	200 U
75-34-5	1,1,2,2-Tetrachloroethane	200 U
108-88-3	Toluene	200 U
108-90-7	Chlorobenzene	200 U
109-41-4	Ethylbenzene	500 U
100-42-6	Styrene	200 U
	Total Xylenes	200 U

Data Reporting Qualifiers

For reporting results to EPA, the following results qualifiers are used. Additional flags or techniques explaining results are encouraged. However, the definition of each flag must be explicit.

Value if the result is a value greater than or equal to the detection limit, report the value.

U indicates compound was analyzed for but not detected. Report the minimum detection limit for the sample in the U (e.g., 10U) based on necessary concentration dilution factors. (This is not necessarily the instrument detection limit.) The footnote should read: U - Compound was analyzed for but not detected. The number is the minimum attainable detection limit for the sample.

J indicates an estimated value. This flag is used either when estimating a concentration for tentatively identified compounds where a 1:1 response is assumed or when the mass spectral data indicated the presence of a compound that meets the identification criteria but the result is less than the specified detection limit but greater than zero (e.g., 10U). If limit of detection is 10ug/L and a concentration of 3ug/L is calculated, report as 3U.

C This flag applies to descode parameters where the identification has been confirmed by GC/MS. Single component descodes are 100% in the final extract should be confirmed by GC/MS.

B This flag is used when the analyte is found in the blank as well as a sample. It indicates possible/probable blank contamination and warns the data user to use appropriate action.

Other Other specific flags and footnotes may be required to properly define the results. If used, they must be fully described and such description attached to the data summary report.

NA Not Analyzed
A See cover letter
NR Not Required
S Suspect Compound

151

Organics Analysis Data Sheet (Page 2)

Semivolatile Compounds

Concentration: Low
Date Extracted/Prepared: 8/23/85
Date Analyzed: 9/10/85
Conc/DIL Factor: 30g/10ml

GPC Cleanup: NO
Separatory Funnel Extraction: YES
Continuous Liquid - Liquid Extraction: NO

CAS Number		ug/Kg
108-95-2	Phenol	1000 U
111-44-4	bis(2-Chloroethyl) Ether	1000 U
99-37-8	2-Chlorophenol	1000 U
541-73-1	1,3-Dichlorobenzene	1000 U
108-46-7	1,4-Dichlorobenzene	1000 U
100-91-6	Benzyl Alcohol	1000 U
95-50-1	1,2-Dichlorobenzene	1000 U
95-49-7	2-Methylphenol	1000 U
39338-32-0	bis(2-chloroisopropyl) Ether	2000 U
108-44-8	4-Methylphenol	1000 U
621-64-7	N-Nitros-O-n-Propylamine	1000 U
87-72-1	Hexachlorocyclohexane	1000 U
98-98-3	Nitrobenzene	1000 U
78-38-1	Isophenol	1000 U
88-75-8	2-Nitrophenol	2000 U
108-87-9	2,4-Dimethylphenol	1000 U
65-85-0	Benzoic Acid	5000 U
111-91-1	bis(2-Chloroethyl) Methane	2000 U
120-83-2	2,6-Dichlorophenol	380 U
120-82-1	1,2,4-Trichlorobenzene	1000 U
91-20-3	Naphthalene	1000 U
108-47-6	4-Chloroaniline	1000 U
87-58-3	Hexachlorocyclopentadiene	1000 U
58-50-7	4-Chloro-3-Methylphenol	1000 U
91-57-6	2-Methylnaphthalene	1000 U
77-47-4	Hexachlorocyclopentadiene	1000 U
88-06-2	2,4,6-Trichlorophenol	37000 g
88-06-4	2,4,5-Trichlorophenol	g
91-65-7	2-Chloronaphthalene	1000 U
9-74-4	2-Nitroaniline	5000 U
131-11-3	Dimethyl Phthalate	1000 U
204-95-8	Acenaphthylene	1000 U
98-09-2	3-Nitroaniline	5000 U

CAS Number		ug/Kg
83-32-8	Acenaphthene	1000 U
51-28-8	2,4-Dinitrophenol	5000 U
100-02-7	4-Nitrophenol	5000 U
122-44-8	Dibenzofuran	1000 U
121-14-2	2,4-Dinitrotoluene	2000 U
606-20-2	2,6-Dinitrotoluene	2000 U
84-46-2	Dialkylphthalate	1000 U
7005-72-3	4-Chlorophenyl-phenylether	1000 U
88-73-7	Fluorene	1000 U
100-61-4	4-Nitroaniline	5000 U
534-62-1	4,6-Dinitro-2-Methylphenol	2000 U
88-30-6	N-Nitrosodiphenylamine(1)	1000 U
101-45-3	4-Bromophenyl-phenylether	1000 U
118-74-1	Hexachlorobenzene	1000 U
87-38-5	Pentachlorophenol	1000 U
85-01-8	Phenanthrene	1000 U
120-12-7	Anthracene	1000 U
84-74-2	Octa-Burylphthalate	1000 U
208-44-0	Fluoranthene	400 U
129-00-0	Pyrene	630 U
85-48-7	Butylbenzylphthalate	1000 U
91-64-1	2,3'-Dichlorobenzidine	2000 U
56-45-3	Benz(a)Anthracene	1000 U
117-81-7	bis(2-Ethylhexyl)Phthalate	1000 U
218-01-9	Chrysene	2000 U
117-46-4	Octa-Cetyl Phthalate	1000 U
205-93-2	Benzobisfluoranthene	2000 U
207-08-9	Benzokifluoranthene	2000 U
50-32-8	Benz(a)Pyrene	2000 U
193-33-5	Indeno(1,2,3-cd)Pyrene	2000 U
53-70-3	Dibenz(a,h)Anthracene	2000 U
191-24-2	Benz(a,h)Pyrene	2000 U

(1) - Cannot be separated from diphenylamine.

152

Organics Analysis Data Sheet (Page 3)

Pesticide/PCBs

Concentration: LOW

GPC Cleanup: NO

Date Extracted/Prepared: 5/23/85

Separatory Funnel Extraction: YES

Date Analyzed: 9/18/85

Continuous Liquid - Liquid Extraction: NO

Conc/Dil Factor: 1.5G/50ML

CAS Number		ug/Kg
319-84-6	Alpha-BHC	30 U
319-86-7	Beta-BHC	30 U
319-88-8	Delta-BHC	30 U
53-89-9	Gamma-BHC (Lindane)	20 J
76-44-6	Heptachlor	30 U
308-00-2	Aldrin	30 U
1024-87-3	Heptachlor Epoxide	33 U
305-90-4	Endosulfan I	70 U
80-57-1	Dieldrin	70 U
72-68-0	4,4'-DDE	70 U
72-30-6	Endrin	70 U
33213-68-0	Endosulfan II	70 U
72-64-8	4,4'-DDD	130 U
1021-07-6	Endosulfan Sulfate	130 U
50-28-3	4,4'-DDT	130 U
72-43-6	Methoxychlor	670 U
53494-70-6	Endrin Ketone	NA
57-74-8	Chlordane	670 U
8001-38-2	Texaphene	6700 U
12874-11-2	Araclos-1016	NA
11104-28-2	Araclos-1221	NA
11141-18-6	Araclos-1232	NA
52468-21-0	Araclos-1242	670 U
12872-28-6	Araclos-1248	670 U
11087-68-1	Araclos-1254	670 U
11096-82-6	Araclos-1260	670 U

V_i = Volume of extract injected (ul)

V_s = Volume of water extracted (ml)

W_s = Weight of sample extracted (g)

V_t = Volume of total extract (ul)

153

$V_s = NR$

or $W_s = 1.5$

$V_t = 50000$

$V_i = 5$

Sample Number
IT-NCBC-R4-C1

Organics Analysis Data Sheet (Page 1)

Laboratory Name: California Analytical Laboratories, Inc.

Case No: 21349

Lab Sample ID No: 21349-5

GC Report No: NB

Sample Matrix: SOIL

Contract No: NB

Data Release Authorized By: PJ

Date Sample Received: 5/15/85

Volatile Compounds

Concentration: Medium

Date Extracted/Prepared: 9/13/85

Date Analyzed: 9/13/85

Conc/Oil Factor: 100 pH: NB

Percent Moisture: NB

Percent Moisture (Decanted): NB

CAS Number		ug/Kg
75-27-3	Chloroform	200 U
74-83-9	Bromomethane	200 U
75-01-4	Vinyl Chloride	200 U
75-05-3	Chloroethane	200 U
75-08-2	Methylene Chloride	500 U
67-66-1	Acetone	500 U
75-15-0	Carbon Disulfide	200 U
75-35-4	1,1-Dichloroethane	200 U
75-36-1	1,1-Dichloroethane	200 U
156-60-5	Trans-1,2-Dichloroethane	200 U
67-66-2	Chloroform	200 U
107-06-2	1,2-Dichloroethane	200 U
78-03-3	2-Butanone	500 U
71-55-6	1,1,1-Trichloroethane	200 U
56-23-6	Carbon Tetrachloride	200 U
101-06-4	Vinyl Acetate	1000 U
75-17-4	Bromochloromethane	200 U

CAS Number		ug/Kg
75-27-3	1,2-Dichloropropane	200 U
10061-02-6	Trans-1,3-Dichloropropane	200 U
75-01-6	Trichloroethane	200 U
124-46-1	Dibromochloromethane	200 U
75-08-8	1,1,2-Trichloroethane	200 U
71-43-2	Benzene	200 U
10061-01-6	cis-1,3-Dichloropropane	200 U
110-75-8	2-Chloroethylvinylether	1000 U
75-25-2	Bromotorm	200 U
108-10-1	4-Methyl-2-Pentanone	500 U
591-78-6	2-Hexanone	500 U
127-18-4	Tetrachloroethane	200 U
75-34-6	1,1,2,2-Tetrachloroethane	200 U
108-68-3	Toluene	200 U
108-90-7	Chlorobenzene	200 U
100-41-4	Ethylbenzene	500 U
100-42-5	Styrene	200 U
	Total Xylenes	200 U

Data Reporting Qualifiers

For reporting results to EPA, the following results qualifiers are used. Additional flags or footnotes explaining results are encouraged; however, the definition of each flag must be exact.

Value If the result is a value greater than or equal to the detection limit, report the value.

U Indicates compound was analyzed for but not detected. Report the minimum detection limit for the sample with the U (e.g., 10U) based on necessary concentration dilution factors. (This is not necessarily the instrument detection limit.) The footnote should read: U. Compound was analyzed for but not detected. The number is the minimum obtainable detection limit for the sample.

J Indicates an estimated value. This flag is used either when estimating a concentration for tentatively identified compounds where a 1:1 response is assumed or when the mass spectral data indicated the presence of a compound that exceeds the identification criteria but the result is less than the specified detection limit but greater than zero (e.g., 10U). If limit of detection is 10U and a concentration of 10U is calculated, report as 10U.

C This flag applies to pesticide parameters where the identification has been confirmed by GC/MS. Single component pesticides will appear in the final extract should be confirmed by GC/MS.

B This flag is used when the analyte is found in the blank as well as a sample. It indicates possible background contamination and warns the data user to take appropriate action.

Other Other specific flags and footnotes may be required to properly define the results. If used, they must be fully described and such description attached to the data summary report.

NA Not Analyzed.
S See cover letter.
NR Not Reported.
S Suspect Compound.

201

Organics Analysis Data Sheet (Page 2)

Semivolatile Compounds

Concentration: MEDIUM
Date Extracted/Prepared: 8/23/85, 9/3/85
Date Analyzed: 9/10/85
Conc/Dil. Factor: 0.55c/ml

GPC Cleanup: NO
Separatory Funnel Extraction: YES
Continuous Liquid - Liquid Extraction: NO

CAS Number		ug/Kg
108-85-2	Phenol	4000 U
111-44-4	bis(2-Chloroethoxy) Ether	4000 U
99-87-8	2-Chlorophenol	4000 U
541-73-1	1,3-Dichlorobenzene	4000 U
108-46-7	1,4-Dichlorobenzene	4000 U
100-81-4	Benzyl Alcohol	4000 U
95-50-1	1,2-Dichlorobenzene	4000 U
95-48-7	2-Methylphenol	4000 U
3958-32-9	bis(2-chloroisopropoxy) Ether	8000 U
108-44-6	4-Methylphenol	4000 U
621-44-7	N-Nitroso-Di-n-Propylamine	4000 U
67-72-1	Hexachlorobenzene	4000 U
98-95-3	Nitrobenzene	4000 U
78-58-1	Isophenol	4000 U
98-79-8	2-Nitrophenol	8000 U
105-67-6	2,4-Dimethylphenol	4000 U
65-85-0	Benzene Acids	20000
111-91-1	bis(2-Chloroethoxy) Methane	8000 U
120-82-2	2,4-Dichlorophenol	17000
120-82-1	1,2,4-Trichlorobenzene	4000 U
91-20-3	Naphthalene	4000 U
108-47-8	4-Chloroaniline	4000 U
87-48-3	Hexachlorocyclopentadiene	4000 U
98-90-7	4-Chloro-3-Methylphenol	4000 U
91-57-6	2-Methylnaphthalene	4000 U
77-47-4	Hexachlorocyclopentadiene	4000 U
98-36-2	2,4,6-Trichlorophenol	20000 e
95-83-4	2,4,5-Trichlorophenol	e
91-58-7	2-Chloronaphthalene	4000 U
58-74-4	2-Nitroaniline	20000 U
131-11-3	Dimethyl Phthalate	4000 U
205-98-8	Acenaphthylene	4000 U
98-08-2	3-Nitroaniline	20000 U

CAS Number		ug/Kg
85-32-4	Acenaphthene	4000 U
91-28-4	2,4-Dinitrophenol	20000 U
100-02-7	4-Nitrophenol	20000 U
122-64-6	OBenzophenone	4000 U
121-14-2	2,4-Dinitrotoluene	8000 U
408-20-2	2,6-Dinitrotoluene	8000 U
84-86-3	Diethylphthalate	4000 U
7005-72-3	4-Chlorophenyl-phenylether	4000 U
86-73-7	Fluorene	4000 U
100-01-6	4-Nitroaniline	20000 U
534-82-1	4,6-Dinitro-2-Methylphenol	8000 U
88-30-6	N,N-Diethylphenylmethylaz(1)	4000 U
101-45-3	4-Bromophenyl-phenylether	4000 U
118-74-1	Hexachlorobenzene	4000 U
87-86-6	Pentachlorophenol	4000 U
85-01-8	Phenanthrene	4000 U
120-12-7	Anthracene	4000 U
84-74-2	Di-n-Butylphthalate	4000 U
208-46-0	Fluoranthene	4000 U
179-00-0	Pyrene	4000 U
83-68-7	Butylbenzylphthalate	4000 U
91-84-1	3,3'-Dichlorobenzidine	5000 U
58-66-3	Benzof(a)Anthracene	4000 U
117-81-7	bis(2-Ethylhexyl)Phthalate	4000 U
218-01-8	Chrysene	8000 U
117-84-0	Di-n-Octyl Phthalate	4000 U
205-98-2	Benzof(b)Fluoranthene	8000 U
207-08-9	Benzof(k)Fluoranthene	3000 U
50-32-4	Benzof(g,h)Pyrene	3000 U
193-39-5	Indeno(1,2,3-cd)Pyrene	5000 U
53-70-3	Dibenz(a,h)Anthracene	8000 U
191-24-2	Benzof(g,h)Perylene	5000 U

(1) - Cannot be separated from diphenylamine

202

Sample Number
IT-NCBC-R5-01

Organics Analysis Data Sheet (Page 1)

Laboratory Name: California Analytical Laboratories, Inc. Case No: 21349
Lab Sample ID No: 21349-5 QC Report No: NR
Sample Matrix: SOIL Contract No: NR
Data Release Authorized By: PDS Date Sample Received: 8/15/85

Volatile Compounds

Concentration: Medium
Date Extracted/Prepared: 9/15/85
Date Analyzed: 9/15/85
Conc/Oil Factor: 100 pH: NR
Percent Moisture: NR
Percent Moisture (Decanted): NR

CAS Number		ug/Kg
74-87-3	Chloroethane	200 U
74-83-9	Bromoethane	200 U
75-01-4	Vinyl Chloride	200 U
75-00-3	Chloroethane	200 U
75-08-2	Methylene Chloride	500 U
67-64-1	Acetone	500 U
75-15-6	Carbon Disulfide	200 U
75-35-4	1,1-Dichloroethane	200 U
75-34-3	1,1-Dichloroethane	200 U
156-60-8	Trans-1,2-Dichloroethane	200 U
67-65-3	Chloroform	200 U
107-06-2	1,2-Dichloroethane	200 U
78-03-3	2-Butanone	500 U
71-43-2	1,1,1-Trichloroethane	200 U
56-23-4	Carbon Tetrachloride	200 U
106-06-4	Vinyl Acetate	1000 U
75-27-4	Bromodichloromethane	200 U

CAS Number		ug/Kg
78-87-5	1,2-Dichloropropane	200 U
10661-02-6	Trans-1,3-Dichloropropane	200 U
78-01-5	Trichloroethane	200 U
124-46-1	Dibromodichloromethane	200 U
78-08-6	1,1,3-Trichloroethane	200 U
71-43-2	Benzene	200 U
10661-31-8	cis-1,3-Dichloropropane	200 U
119-73-8	2-Chloroethylvinyl ether	1000 U
75-25-2	Bromobenzene	200 U
106-10-1	4-Methyl-2-Pentanone	500 U
981-78-6	2-Heptanone	500 U
127-18-4	Tetrachloroethane	200 U
78-36-6	1,1,2,2-Tetrachloroethane	200 U
106-88-3	Toluene	200 U
106-88-7	Chlorobenzene	200 U
100-41-4	Ethylbenzene	500 U
106-42-8	Styrene	200 U
	Total Xylenes	200 U

Data Reporting Qualifiers

For reporting results to EPA, the following result qualifiers are used. Additional flags or footnotes explaining results are encouraged. However, the definition of each flag must be explicit.

Value: If the result is a value greater than or equal to the detection limit, report the value.

U: Indicates compound was analyzed for but not detected. Report the minimum detection limit for the sample with the U (e.g., 10U) based on necessary concentration dilution factors. (This is not necessarily the instrument detection limit). The footnote should read: U - Compound was analyzed for but not detected. The number is the minimum attainable detection limit for the sample.

J: Indicates an estimated value. This flag is used either when estimating a concentration for relatively certified compounds where a 1:1 response is assumed or when the mass spectral data indicated the presence of a compound that meets the identification criteria but the result is less than the specified detection limit but greater than zero, (e.g., 10U). If limit of detection is 10ug/l and a concentration of 5ug/l is calculated, report as 5U.

C: This flag applies to pesticide parameters where the identification has been confirmed by GC/MS. Single component pesticides > 100ug/l in the final extract should be confirmed by GC/MS.

B: This flag is used when the analyte is found in the blank as well as a sample. It indicates possible probable blank contamination and warns the data user to take appropriate action.

Other: Other specific flags and footnotes may be required to properly define the results. If used, they must be fully described and such description attached to the data summary report.

NA: Not Analyzed.
S: See cover letter.
NR: Not Reported.
S: Some Compounds.

231

CLF 11/14/85

Form: Prepared by: PDS

10/85

Organics Analysis Data Sheet
(Page 2)

Semi-volatile Compounds

Concentration: LAB
Date Extracted/Prepared: 8/22/85
Date Analyzed: 9/10/85
Conc/Dil Factor: 3000/001

GPC Cleanup: NO
Separatory Funnel Extraction: YES
Continuous Liquid - Liquid Extraction: NO

CAS Number	Compound	ug/Kg
108-95-2	Phenol	1000 U
111-44-4	Bis(2-Chloromethyl)Ether	1000 U
59-67-8	2-Chlorophenol	1000 U
541-73-1	1,3-Dichlorobenzene	1000 U
108-46-7	1,4-Dichlorobenzene	1000 U
100-61-6	Benzyl Alcohol	1000 U
95-50-1	1,2-Dichlorobenzene	1000 U
95-48-7	2-Methoxyphenol	1000 U
32838-32-4	Bis(2-Chloroethoxy)methyl Ether	2000 U
105-44-8	4-Methoxyphenol	1000 U
521-64-7	N,N-Dimethyl-2,2,4,4-Tetraaminodiphenylamine	1000 U
57-72-1	Hexachlorocyclopentadiene	1000 U
58-95-1	Nitrobenzene	1000 U
78-59-1	Isophenol	1000 U
88-75-6	2-Nitrophenol	1000 U
105-67-8	2,6-Dimethoxyphenol	1000 U
55-85-0	Benzole Acid	1000 U
111-87-1	Bis(2-Chloromethyl)Methane	1000 U
120-85-2	2,4-Dichlorophenol	1000 U
123-82-1	1,2,4-Trichlorobenzene	1000 U
91-20-3	Naphthalene	1000 U
106-47-3	4-Nitroaniline	1000 U
67-68-3	Hexachlorobenzene	1000 U
59-50-7	4-Chloro-2-Methoxyphenol	1000 U
31-57-4	2-Methoxyphenol	1000 U
77-47-4	Hexachlorocyclopentadiene	1000 U
68-96-2	2,4,6-Trichlorophenol	10000 U
93-80-4	2,4,6-Trichlorophenol	1000 U
91-58-7	2-Chlorophenol	1000 U
58-74-4	2-Methoxyphenol	1000 U
131-11-5	Dimethyl Phthalate	1000 U
204-96-4	Acetophenone	1000 U
38-09-2	2-Nitrophenol	1000 U

CAS Number	Compound	ug/Kg
69-72-9	Acetophenone	1000 U
51-28-4	2,4-Dinitrophenol	5000 U
100-02-7	4-Nitrophenol	5000 U
102-44-9	Dicentofuran	1000 U
121-14-2	2,4-Dinitrotoluene	2000 U
500-26-2	2,5-Dinitrotoluene	2000 U
51-61-2	Diethylphthalate	1000 U
1005-72-3	4-Chlorophenyl-phenyl ether	1000 U
36-73-7	Fluorene	1000 U
100-01-6	4-Nitroaniline	5000 U
534-12-1	4,5-Dinitro-2-Methylphenol	2000 U
56-30-5	N,N-Diethoxydiphenylamine	1000 U
101-55-3	4-Bromophenyl-phenyl ether	1000 U
112-74-1	Hexachlorobenzene	1000 U
27-48-4	Hexachlorophenol	1000 U
95-01-3	Phenanthrene	1000 U
123-12-7	Anthracene	1000 U
54-74-2	Dimethylphthalate	1000 U
206-44-0	Fluorene	550 U
123-00-0	Pyrene	320 U
55-64-7	Bis(benzoyl)phthalate	1000 U
31-46-1	3,5-Dichlorobenzidine	2000 U
56-35-0	Benzosuberone	1000 U
117-31-7	Bis(2-Ethoxyethyl)phthalate	1000 U
118-01-2	Chrysene	2000 U
117-84-3	Dimethyl Phthalate	1000 U
205-19-2	Benzobifluorene	2000 U
121-08-3	3-Benzylfluorene	2000 U
10-20-8	Benzo[a]pyrene	2000 U
121-23-1	Benzo[b]fluorene	2000 U
121-23-1	Benzo[b]fluorene	2000 U
121-23-1	Benzo[b]fluorene	2000 U

Laboratory Name: CALIFORNIA ANALYTICAL LABORATORIES, INC.
Case No: 21349

Sample Number
IT-NC8C-R5-01

Organics Analysis Data Sheet (Page 3)

Pesticide/PCBs

Concentration: LOW

GPC Cleanup: NO

Date Extracted/Prepared: 8/23/85

Separatory Funnel Extraction: YES

Date Analyzed: 9/19/85

Continuous Liquid - Liquid Extraction: NO

Conc/Dil Factor: 1.5G/500ML

CAS Number		ug/Kg
319-84-6	Alpha-BHC	300 U
319-85-7	Beta-BHC	300 U
319-85-8	Gamma-BHC	300 U
58-89-6	Gamma-BHC (Lindane)	300 U
75-44-8	Heptachlor	300 U
309-00-2	Aldrin	300 U
1024-87-3	Heptachlor Epoxide	300 U
958-98-8	Endosulfan I	700 U
60-67-1	Dieldrin	700 U
72-45-8	4,4'-DDE	700 U
72-39-6	Endrin	700 U
33213-45-6	Endosulfan II	700 U
72-41	4,4'-DDD	1300 U
1031-07-8	Endosulfan Sulfate	1300 U
50-28-3	4,4'-DDT	1300 U
72-43-6	Methoxychlor	6700 U
53495-77-8	Endrin Ketone	NA
57-74-8	Chlordane	6700 U
8001-35-2	Toxaphene	6700 U
12374-11-2	Aroclor-1016	NA
11184-28-2	Aroclor-1221	NA
11141-16-6	Aroclor-1212	NA
53496-21-6	Aroclor-1242	6700 U
12872-28-6	Aroclor-1248	6700 U
11087-58-1	Aroclor-1254	6700 U
11098-82-8	Aroclor-1260	6700 U

V_i = Volume of extract injected (ul)

V_s = Volume of water extracted (ml)

W_s = Weight of sample extracted (g)

V_t = Volume of total extract (ul)

233

$V_s = NR$

or $W_s = 1.5$

$V_t = 500000$

$V_i = 5$

Sample Number
IT-NC8C-R1-02

Organics Analysis Data Sheet (Page 1)

Laboratory Name: California Analytical Laboratories, Inc.

Case No: 21349

Lab Sample ID No: 21349-7

QC Report No: NR

Sample Matrix: SOIL

Contract No: NR

Date Release Authorized By: PJ

Date Sample Received: 5/15/85

Volatile Compounds

Concentration: Medium

Date Extracted/Prepared: 11/13/85

Date Analyzed: 11/13/85

Conc/Dil Factor: 200 PM:NR

Percent Moisture: NR

Percent Moisture (Decanted): NR

CAS Number		ug/Kg
74-87-3	Chloromethane	400 U
74-83-8	Bromomethane	400 U
75-01-4	Vinyl Chloride	400 U
75-00-3	Chloroethane	400 U
75-	Methylene Chloride	1000 U
67-	Acetone	1000 U
75-	Carbon Disulfide	400 U
75-35-4	1,1-Dichloroethane	400 U
75-34-3	1,1-Dichloroethane	400 U
156-60-6	Trans-1,2-Dichloroethane	400 U
67-66-1	Chloroform	400 U
107-06-2	1,2-Dichloroethane	400 U
78-09-3	2-Butanone	1000 U
71-55-6	1,1,1-Trichloroethane	400 U
56-23-6	Carbon Tetrachloride	400 U
108-05-4	Vinyl Acetate	2000 U
75-27-4	Bromochloromethane	400 U

CAS Number		ug/Kg
75-67-3	1,2-Dichloropropane	400 U
10061-02-3	Trans-1,3-Dichloropropene	400 U
75-01-4	Trichloroethane	400 U
124-48-1	Dibromochloromethane	400 U
75-00-6	1,1,2-Trichloroethane	400 U
71-43-2	Benzene	400 U
10061-01-6	cis-1,3-Dichloropropene	400 U
113-73-3	2-Chloroethoxyethyl ether	2000 U
75-25-2	Bromobenzene	400 U
105-10-1	4-Methyl-2-Pentanone	1000 U
99-178-4	2-Hexanone	1000 U
127-18-4	Tetrachloroethene	400 U
75-34-6	1,1,2,2-Tetrachloroethane	400 U
106-86-3	Toluene	400 U
106-60-7	Chlorobenzene	400 U
100-41-4	Ethylbenzene	1000 U
100-42-6	Styrene	400 U
	Total Xylenes	400 U

Data Reporting Guidelines

For reporting results to EPA, the following reporting guidelines are used. Additional flags or footnotes explaining results are encouraged; however, the definition of each flag must be explicit.

Values: If the result is a value greater than or equal to the detection limit, report the value.

U: Indicates compound was analyzed for but not detected. Report the minimum detection limit for the sample with the U (e.g., 100U) based on necessary concentration dilution actions. (This is not necessary if the instrument detection limit is the footnote should read U). The number is the minimum detectable detection limit for the sample.

Indicates an estimated value. This flag is used either when estimating a concentration for tentatively identified compounds where a 1:1 response is assumed or when the initial screening data indicated the presence of a compound that failed the detection criteria but the result is less than the specified detection limit but greater than zero. (e.g., 100U). If the detection limit is 100U and a concentration of 50U is calculated, report as 50U.

1: This flag applies to pesticide parameters where the detection has been confirmed by GC/MS. Single component pesticides will show U in the final extract should be confirmed by GC/MS.

3: This flag is used when the analyte is found in the data as well as a footnote. It indicates possible compound data contamination and warns the data user to take appropriate action.

Other: Other results, flags and comments may be required to properly define the results. If used, they must be fully described and a full description attached to the data summary report.

NA: Not Analyzed
N: Not Detected
NR: Not Required
S: Sample Compound

Organics Analysis Data Sheet (Page 2)

Semivolatile Compounds

Concentration: LOW
Date Extracted/Prepared: 8/23/85
Date Analyzed: 9/10/85
Conc/Dil. Factor: 28g/ml

GPC Cleanup: NO
Separatory Funnel Extraction: YES
Continuous Liquid - Liquid Extraction: NO

CAS Number		ug/Kg
108-95-2	Phenol	180 U
111-44-4	bis(2-Chloroethyl)Ether	200 U
95-57-8	2-Chlorophenol	200 U
541-73-1	1,3-Dichlorobenzene	200 U
108-46-7	1,4-Dichlorobenzene	200 U
100-61-6	Benzyl Alcohol	200 U
5-90-1	1,2-Dichlorobenzene	200 U
28-48-7	2-Methylphenol	200 U
39538-32-8	bis(2-chloroisopropyl)Ether	400 U
108-44-8	4-Methylphenol	200 U
621-64-7	N-Nitros-Di-n-Propylamine	200 U
87-72-1	Hexachloroethane	200 U
98-96-2	Nitrobenzene	200 U
78-59-1	Isochlorophene	200 U
88-75-5	2-Nitrophenol	400 U
105-67-9	2,4-Dimethylphenol	200 U
85-45-0	Benzoic Acid	1000 U
111-91-1	bis(2-Chloroethyl)Methane	400 U
120-83-2	2,4-Dichlorophenol	200 U
128-83-1	1,2,4-Trichlorobenzene	200 U
91-20-3	Naphthalene	200 U
108-47-5	4-Chloroaniline	200 U
67-68-3	Hexachlorobutadiene	200 U
98-90-7	4-Chloro-3-Methylphenol	200 U
91-67-6	2-Methylnaphthalene	200 U
77-47-4	Hexachlorocyclopentadiene	200 U
98-08-2	2,4,6-Trichlorophenol	200 U
95-95-4	2,4,5-Trichlorophenol	9
7-58-7	2-Chloronaphthalene	200 U
5-74-4	2-Nitroaniline	1000 U
31-11-3	Dimethyl Phthalate	200 U
208-98-8	Acenaphthylene	200 U
98-09-2	3-Nitroaniline	1000 U

CAS Number		ug/Kg
85-32-8	Acenaphthene	200 U
51-28-8	2,4-Dinitrophenol	1000 U
100-02-7	4-Methoxyphenol	1000 U
132-64-8	Dibenzofuran	200 U
121-14-2	2,4-Dinitrofluorene	400 U
605-26-2	2,6-Dinitrofluorene	400 U
84-68-2	Diethylphthalate	200 U
7095-72-3	4-Chlorophenyl-phenylether	200 U
86-73-7	Fluorene	200 U
100-01-6	4-Nitroaniline	1000 U
521-62-1	4,6-Dinitro-3-Methylphenol	400 U
86-30-6	N-Nitrosodiphenylamine(1)	200 U
101-68-3	4-Bromophenyl-phenylether	200 U
118-74-1	Hexachlorobenzene	200 U
87-35-5	Pentachlorophenol	200 U
88-01-8	Phenanthrene	200 U
120-12-7	Anthracene	200 U
84-74-2	Di-n-Butylphthalate	200 U
208-44-8	Fluorenone	200 U
129-00-0	Pyrene	200 U
86-65-7	Butylbenzylphthalate	200 U
91-84-1	3,5-Dichlorobenzidine	400 U
96-65-1	Benzo(a)Anthracene	200 U
117-81-7	bis(2-Ethylhexyl)Phthalate	200 U
218-01-9	Chrysene	400 U
117-84-0	Di-n-Octyl Phthalate	200 U
205-99-2	Benzo(b)Fluorenone	400 U
207-08-8	Benzo(h)Fluorenone	400 U
90-22-8	Benzo(a)Pyrene	400 U
183-39-6	Indeno(1,2,3-cd)Pyrene	400 U
83-70-3	Dibenz(a,h)Anthracene	400 U
191-24-2	Benzo(g,h,i)Perylene	400 U

(1) - Cannot be separated from diphenylamine

282

Organics Analysis Data Sheet (Page 3)

Pesticide/PCBs

Concentration: LOW
Date Extracted/Prepared: 8/23/85
Date Analyzed: 9/19/85
Conc/Dil Factor: 1.5G/5ML

GPC Cleanup: NO
Separatory Funnel Extraction: YES
Continuous Liquid - Liquid Extraction: NO

CAS Number		ug/Kg
319-84-6	Alpha-BHC	3.0 U
319-85-7	Beta-BHC	3.0 U
319-86-8	Delta-BHC	3.0 U
58-88-9	Gamma-BHC (Lindane)	3.0 U
78-14-8	Heptachlor	3.0 U
308-00-2	Aldrin	3.0 U
1024-67-3	Heptachlor Epoxide	3.0 U
959-98-6	Endosulfan I	7.0 U
60-67-1	Dieldrin	7.0 U
72-65-8	4,4'-DDE	7.0 U
72-20-8	Endrin	7.0 U
33213-65-9	Endosulfan II	7.0 U
72-84-6	4,4'-DDD	13 U
1031-07-8	Endosulfan Sulfate	13 U
50-28-3	4,4'-DDT	13 U
72-43-6	Methoxychlor	67 U
83486-70-6	Endrin Ketone	NA
57-74-8	Chlordane	67 U
8001-35-2	Toxaphene	670 U
12874-11-2	Aroclor-1016	NA
11104-28-2	Aroclor-1221	NA
11141-16-5	Aroclor-1232	NA
53468-21-8	Aroclor-1242	67 U
12872-28-6	Aroclor-1248	67 U
11087-48-1	Aroclor-1254	67 U
11086-82-5	Aroclor-1260	67 U

V_i = Volume of extract injected (ul)

V_s = Volume of water extracted (ml)

W_s = Weight of sample extracted (g)

V_t = Volume of total extract (ul)

V_s = NR

or W_s = 1.5

V_t = 5000

V_i = 5 283

Sample Number
17-NC8C-R2-02

Organics Analysis Data Sheet (Page 1)

Laboratory Name: California Analytical Laboratories, Inc.

Case No: 21413

Lab Sample ID No: 21413-5

QC Report No: NR

Sample Matrix: SOIL

Contract No: NR

Date Release Authorized By: PJL

Date Sample Received: 8/21/85

Volatile Compounds

Concentration: Medium

Date Extracted/Prepared: 9/16/85

Date Analyzed: 9/16/85

Conc/Dil Factor: 100 pH: NR

Percent Moisture: NR

Percent Moisture (Decanted): NR

CAS Number		ug/Kg
74-87-3	Chloromethane	200 U
74-83-8	Bromomethane	200 U
75-01-4	Vinyl Chloride	200 U
75-00-3	Chloroethane	200 U
75-08-2	Methylene Chloride	500 U
67-64-1	Acetone	500 U
5-15-0	Carbon Disulfide	200 U
3-35-4	1,1-Dichloroethane	200 U
75-34-3	1,1-Dichloroethane	200 U
155-60-6	Trans-1,2-Dichloroethane	200 U
57-68-3	Chloroform	200 U
107-06-2	1,2-Dichloroethane	200 U
75-83-3	2-Butanone	500 U
71-66-6	1,1,1-Trichloroethane	200 U
58-23-6	Carbon Tetrachloride	200 U
108-05-4	Vinyl Acetate	1000 U
75-27-4	Bromodichloromethane	200 U

CAS Number		ug/Kg
75-87-6	1,2-Dichloropropane	200 U
10061-02-6	Trans-1,3-Dichloropropene	200 U
75-01-4	Trichloroethene	200 U
124-48-1	Dibromodichloromethane	200 U
75-00-6	1,1,2-Trichloroethane	200 U
71-43-3	Benzene	870
10061-01-6	cis-1,3-Dichloropropene	200 U
110-73-8	2-Chloroethylvinyl ether	1000 U
75-25-2	Bromobenzene	200 U
108-10-1	4-Methyl-2-Pentanone	500 U
581-75-8	2-Hexanone	500 U
127-18-4	Tetrachloroethane	200 U
75-34-6	1,1,2,2-Tetrachloroethane	200 U
108-88-3	Toluene	450 B
108-90-7	Chlorobenzene	200 U
100-41-4	Ethylbenzene	500 U
100-42-5	Styrene	200 U
	Total Xylenes	200 U

Data Reporting Qualifiers

For reporting results to EPA, the following results qualifiers are used. Additional flags or footnotes explaining results are encouraged, however, the definition of each flag must be explicit.

Value: If the result is a value greater than or equal to the detection limit, report the value.

U: Indicates compound was analyzed for but not detected. Report the minimum detection limit for the sample with the U (e.g., 10U) based on necessary concentration dilution factors. (This is not necessarily the instrument detection limit.) The footnote should read: U - Compound was analyzed for but not detected. The number is the minimum attainable detection limit for the sample.

E: Indicates an estimated value. This flag is used either when estimating a concentration for tentatively identified compounds where a 1:1 response is assumed or when the mass spectral data indicated the presence of a compound that meets the identification criteria but the result is less than the specified detection limit but greater than zero (e.g., 10U). If limit of detection is 10Ug/L and a concentration of 5Ug/L is calculated, report as 5U.

C: This flag applies to pesticide parameters where the identification has been confirmed by GC/MS. Single component pesticides are 100% in the final extract should be confirmed by GC/MS.

B: This flag is used when the analyte is found in the blank as well as a sample. It indicates possible/probable blank contamination and warns the data user to take appropriate action.

Other: Other specific flags and footnotes may be required to properly define the results. If used, they must be fully described and such description attached to the data summary report.

NA: Not Analyzed.

R: See cover letter.

S: Solved Compound.

613

CLF 11/14/85

Form 1

Prepared by: PJL

10/85

Organics Analysis Data Sheet (Page 2)

Semivolatile Compounds

Concentration: Low
Date Extracted/Prepared: 8/27/85
Date Analyzed: 9/10/85
Conc/Dil Factor: 29G/ML

GPC Cleanup: NO
Separatory Funnel Extraction: YES
Continuous Liquid - Liquid Extraction: NO

CAS Number		ug/Kg
108-85-2	Phenol	400
111-44-4	bis(2-Chloroethyl)Ether	200 U
86-87-8	2-Chlorophenol	200 U
541-73-1	1,3-Dichlorobenzene	200 U
106-46-7	1,4-Dichlorobenzene	200 U
100-51-6	Benzyl Alcohol	200 U
85-50-1	1,2-Dichlorobenzene	200 U
86-48-7	2-Methylphenol	200 U
39638-32-8	bis(2-chloroethoxy)Ether	400 U
106-44-6	4-Methylphenol	200 U
621-64-7	N-Nitroso-Di-n-Propylamine	200 U
67-72-1	Hexachlorobenzene	200 U
98-08-3	Nitrobenzene	200 U
78-09-1	Isophorone	200 U
86-73-5	2-Nitrophenol	400 U
105-67-8	2,4-Dimethylphenol	200 U
85-85-0	Benzoic Acid	1000 U
111-91-1	bis(2-Chloroethoxy)Methane	400 U
120-83-2	2,4-Dichlorophenol	79 J
120-82-1	1,2,4-Trichlorobenzene	200 U
91-20-3	Naphthalene	200 U
106-47-8	4-Chloroaniline	200 U
87-68-3	Hexachlorobutadiene	200 U
58-50-7	4-Chloro-3-Methylphenol	200 U
91-57-6	2-Methylnaphthalene	200 U
77-47-4	Hexachlorocyclopentadiene	200 U
68-06-2	2,4,6-Trichlorophenol	110 Jg
95-95-4	2,4,5-Trichlorophenol	8
91-68-7	2-Chloronaphthalene	200 U
86-74-4	2-Nitroaniline	1000 U
131-11-5	Dimethyl Phthalate	200 U
208-96-8	Acenaphthylene	200 U
99-09-2	5-Nitroaniline	1000 U

CAS Number		ug/Kg
85-32-8	Acenaphthene	200 U
51-28-5	2,4-Dinitrophenol	1000 U
100-02-7	4-Nitrophenol	1000 U
132-64-8	Dibenzofuran	200 U
121-14-2	2,4-Dinitrotoluene	400 U
808-20-2	2,5-Dinitrotoluene	400 U
84-66-2	Diethylphthalate	200 U
7015-72-3	4-Chlorophenyl-phenylether	200 U
86-73-7	Fluorene	200 U
100-01-4	4-Nitroaniline	1000 U
534-62-1	4,6-Dinitro-2-Methylphenol	400 U
86-30-6	N-Nitrosodiphenylamine(1)	200 U
101-53-3	4-Bromophenyl-phenylether	200 U
118-74-1	Hexachlorobenzene	200 U
87-86-8	Pentachlorophenol	200 U
85-01-8	Phenanthrene	200 U
120-12-7	Anthracene	200 U
84-74-2	Din-Butylphthalate	200 U
208-44-0	Fluorene	200 U
129-00-0	Pyrene	200 U
85-68-7	Butylbenzylphthalate	200 U
91-84-1	3,3'-Dichlorobenzidine	400 U
56-53-3	Benzo(a)Anthracene	200 U
117-81-7	bis(2-Ethylhexyl)Phthalate	200 U
218-01-9	Chrysene	400 U
117-84-0	Din-Octyl Phthalate	200 U
205-99-2	Benzo(b)Fluoranthene	400 U
207-08-8	Benzo(k)Fluoranthene	400 U
50-32-8	Benzo(a)Pyrene	400 U
193-39-5	Indeno(1,2,3-cd)Pyrene	400 U
53-70-3	Dibenz(a,h)Anthracene	400 U
191-24-2	Benzo(g,h,i)Perylene	400 U

(1) - Cannot be separated from diphenylamine

Laboratory Name: CALIFORNIA ANALYTICAL LABORATORIES, INC.
Case No. 21413

Sample Number
IT-NCBC-R2-02

Organics Analysis Data Sheet
(Page 3)

Pesticide/PCBs

Concentration: LOW

GPC Cleanup: NO

Date Extracted/Prepared: 8/27/85

Separatory Funnel Extraction: YES

Date Analyzed: 9/18/85

Continuous Liquid - Liquid Extraction: NO

Conc/Dil Factor: 1.53G/5ML

CAS Number		ug/Kg
319-84-6	Alpha-BHC	1.0 U
319-85-7	Beta-BHC	1.0 U
319-86-8	Delta-BHC	1.0 U
58-65-6	Gamma-BHC (Lindane)	1.0 U
75-44-8	Heptachlor	1.0 U
308-00-2	Alrin	1.0 U
1026-67-3	Heptachlor Epoxide	1.0 U
958-85-4	Endosulfan I	7.0 U
95-67-1	Dieldrin	7.0 U
72-65-6	4,4'-DDE	7.0 U
72-20-8	Endrin	7.0 U
33213-66-8	Endosulfan II	7.0 U
72-84-8	4,4'-DDD	13 U
1631-07-4	Endosulfan Sulfate	13 U
30-28-3	4,4'-DDT	13 U
72-43-8	Methoxychlor	67 U
53484-79-8	Endrin Ketone	NA
57-74-6	Chlordane	67 U
8001-35-2	Toxaphene	670 U
12874-11-2	Aroclor-1016	NA
11164-28-2	Aroclor-1221	NA
11141-16-6	Aroclor-1232	NA
53489-81-6	Aroclor-1242	67 U
12872-29-4	Aroclor-1248	67 U
11067-45-1	Aroclor-1254	57 U
11068-82-6	Aroclor-1260	57 U

V_i = Volume of extract injected (ul)

V_s = Volume of water extracted (ml)

W_s = Weight of sample extracted (g)

V_t = Volume of total extract (ul)

V_s = NR

or V_s = 1.53

V_t = 5000

V_i = 5

615

CLP 11/14/85

Form 1

Prepared by: AD

785

Sample Number
IT-NCBC-R3-02

Organics Analysis Data Sheet (Page 1)

Laboratory Name: California Analytical Laboratories, Inc.

Case No: 21413

Lab Sample ID No: 21413-11

QC Report No: NR

Sample Matrix: SOIL

Contract No: NR

Date Release Authorized By: PAS

Date Sample Received: 5/21/85

Volatile Compounds

Concentration: Medium

Date Extracted/Prepared: 9/17/85

Date Analyzed: 9/17/85

Conc/Dil Factor: 100 pH: NR

Percent Moisture: NR

Percent Moisture (Decanted): NR

CAS Number		ug/Kg
74-87-3	Chloroethane	200 U
74-83-8	Bromoethane	200 U
75-01-4	Vinyl Chloride	200 U
75-00-3	Chloroethane	200 U
75-08-2	Methylene Chloride	500 U
67-66-1	Acetone	500 U
75-15-0	Carbon Disulfide	200 U
75-35-4	1,1-Dichloroethane	200 U
75-34-3	1,1-Dichloroethane	200 U
156-60-5	Trans-1,2-Dichloroethane	200 U
67-66-3	Chloroform	200 U
107-06-2	1,2-Dichloroethane	200 U
78-03-3	2-Butanone	500 U
71-55-6	1,1,1-Trichloroethane	200 U
56-23-6	Carbon Tetrachloride	200 U
106-05-4	Vinyl Acetate	1000 U
75-27-4	Bromodichloromethane	200 U

CAS Number		ug/Kg
78-87-5	1,2-Dichloropropane	200 U
10061-02-6	Trans-1,3-Dichloropropane	200 U
79-01-4	Trichloroethane	200 U
124-48-1	Dibromochloromethane	200 U
79-00-6	1,1,2-Trichloroethane	200 U
71-43-2	Benzene	280
10061-01-5	cis-1,3-Dichloropropane	200 U
110-79-8	2-Chloroethylvinyl ether	1000 U
75-25-2	Bromotoluene	200 U
105-10-1	4-Methyl-2-Pentanone	500 U
591-78-8	2-Hexanone	500 U
127-18-4	Tetrachloroethane	200 U
79-34-6	1,1,2,2-Tetrachloroethane	200 U
106-88-3	Toluene	280
106-90-7	Chlorobenzene	200 U
100-41-4	Ethylbenzene	500 U
100-42-6	Styrene	200 U
	Total Xylenes	200 U

Data Reporting Qualifiers

For reporting results to EPA, the following results qualifiers are used. Additional flags or footnotes explaining results are encouraged. However, the definition of each flag must be explicit.

Value: If the result is a value greater than or equal to the detection limit, report the value.

U: Indicates compound was analyzed for but not detected. Report the minimum detection limit for the sample with the U (e.g., 10U) based on necessary concentration dilution actions. (This is not necessarily the instrument detection limit.) The footnote should read: U - Compound was analyzed for but not detected. The number is the minimum laboratory detection limit for the sample.

J: Indicates an estimated value. This flag is used either when estimating a concentration for an actively identified compound where a 1:1 response is assumed or when the mass spectral data indicated the presence of a compound that meets the identification criteria but the result is less than the specified detection limit but greater than zero (e.g., 10U). If limit of detection is 10ug/l and a concentration of 3ug/l is calculated, report as 3U.

C: This flag applies to pesticide parameters where the confirmation has been confirmed by GC/MS. Single component pesticides are 100% in the final extract should be confirmed by GC/MS.

B: This flag is used when the analyte is found in the blank as well as a sample. It indicates possible erodable blank contamination and warns the data user to take appropriate action.

Other: Other specific flags and footnotes may be required to properly define the results. If used, they must be fully described and such description attached to the data summary report.

NA: Not Analyzed
R: See cover letter
NR: Not Required
S: Suspect Compound

CLF 11/14/85

Form 1

Prepared by: PAS

10-85

Organics Analysis Data Sheet (Page 2)

Semivolatile Compounds

Concentration: LOW
Date Extracted/Prepared: 8/27/85
Date Analyzed: 9/11/85
Conc/Dil Factor: 29G/ML

GPC Cleanup: NO
Separatory Funnel Extraction: YES
Continuous Liquid - Liquid Extraction: NO

CAS Number		ug/Kg
108-95-2	Phenol	77
111-44-4	bis-(2-Chloroethyl)Ether	200 U
85-37-8	2-Chlorophenol	200 U
541-73-1	1,3-Dichlorobenzene	200 U
108-46-7	1,4-Dichlorobenzene	200 U
108-81-6	Benzyl Alcohol	200 U
85-50-1	1,2-Dichlorobenzene	200 U
85-48-7	2-Methylphenol	200 U
30838-32-8	bis(2-chloroisopropyl) Ether	400 U
108-44-5	4-Methylphenol	200 U
521-64-7	N-Nitroso-Di-n-Propylamine	200 U
67-72-1	Hexachlorobenzene	200 U
95-75-3	Nitrobenzene	200 U
78-08-1	Isophenol	200 U
88-75-8	2-Nitrophenol	400 U
108-87-8	2,4-Dimethylphenol	200 U
53-45-0	Benzoic Acid	1000 U
111-91-1	bis-(2-Chloroethyl)Methane	400 U
120-83-2	2,4-Dichlorophenol	200 U
120-82-1	1,2,4-Trichlorobenzene	200 U
91-20-3	Naphthalene	200 U
108-47-6	4-Chloroaniline	200 U
67-48-3	Hexachlorocyclopentadiene	200 U
59-50-7	4-Chloro-3-Methylphenol	200 U
91-47-6	2-Methylnaphthalene	200 U
77-47-3	Hexachlorocyclopentadiene	200 U
58-08-2	2,4,6-Trichlorophenol	200 U
35-83-4	2,4,5-Trichlorophenol	0
91-58-7	2-Chloronaphthalene	200 U
85-74-4	2-Nitroaniline	1000 U
121-11-3	Dimethyl Phthalate	200 U
208-98-8	Acenaphthylene	200 U
98-08-2	3-Nitroaniline	1000 U

CAS Number		ug/Kg
85-32-6	Acenaphthene	200 U
51-28-6	2,4-Dinitrophenol	1000 U
100-02-7	4-Nitrophenol	1000 U
132-64-8	Dibenzylglycol	200 U
121-14-2	2,4-Dinitrophenol	400 U
608-20-2	2,5-Dinitrophenol	400 U
84-86-3	Dibenzylphthalate	200 U
7098-72-3	4-Chlorobenzyl-phenylether	200 U
85-73-7	Fluorene	200 U
100-61-6	4-Nitroaniline	1000 U
534-83-1	4,6-Dinitro-2-Methylphenol	400 U
86-30-8	N-Nitrosodiphenylamine(1)	200 U
101-85-3	4-Bromobenzyl-phenylether	200 U
118-74-1	Hexachlorobenzene	200 U
87-46-6	Pentachlorophenol	200 U
83-01-6	Phenanthrene	200 U
120-12-7	Anthracene	200 U
84-74-2	Di-n-Butylphthalate	200 U
208-44-0	Fluorene	200 U
129-00-8	Pyrene	200 U
85-48-7	Butylbenzylphthalate	200 U
91-84-1	1,3-Dichlorobenzidine	400 U
58-55-3	Benzo(s)Anthracene	200 U
117-81-7	bis(2-Ethylhexyl)Phthalate	200 U
218-01-8	Chrysene	400 U
117-84-0	Di-n-Octyl Phthalate	200 U
208-99-2	Benzo(b)Fluorene	400 U
207-08-8	Benzo(k)Fluorene	400 U
50-32-4	Benzo(s)Pyrene	400 U
193-39-8	Indeno(1,2,3-cd)Pyrene	400 U
53-70-3	Ofenzo(e,h)Anthracene	400 U
191-24-2	Benzo(g,h,i)Perylene	400 U

(1) - Cannot be separated from diphenylamine

Organics Analysis Data Sheet (Page 3)

Pesticide/PCBs

Concentration: LOW
Date Extracted/Prepared: 8/27/85
Date Analyzed: 9/18/85
Conc/Dil Factor: 1.53G/5ML

GPC Cleanup: NO
Separatory Funnel Extraction: YES
Continuous Liquid - Liquid Extraction: NO

CAS Number		ug/Kg
319-84-6	Alpha-BHC	1.0 U
319-85-7	Beta-BHC	1.0 U
319-86-8	Delta-BHC	1.0 U
58-89-4	Gamma-BHC (Lindane)	1.0 U
76-44-8	Heptachlor	1.0 U
309-00-2	Aldrin	1.0 U
1024-67-3	Heptachlor Epoxide	1.0 U
959-08-8	Endosulfan I	7.0 U
60-67-1	Dieldrin	7.0 U
72-66-6	4,4'-DDE	7.0 U
72-20-8	Endrin	7.0 U
33213-46-6	Endosulfan II	7.0 U
72-64-8	4,4'-DDD	13 U
1031-07-6	Endosulfan Sulfate	13 U
56-28-3	4,4'-DDT	13 U
72-43-8	Methoxychlor	67 U
33484-70-5	Endrin Ketone	NA
57-74-8	Chlordane	67 U
8001-35-2	Toxaphene	670 U
12874-11-2	Aroclor-1018	NA
11104-28-2	Aroclor-1221	NA
11141-16-5	Aroclor-1222	NA
53469-21-6	Aroclor-1242	67 U
12872-29-6	Aroclor-1248	67 U
11087-46-1	Aroclor-1254	67 U
11086-43-6	Aroclor-1260	67 U

V_i = Volume of extract injected (ul)

V_s = Volume of water extracted (ml)

W_s = Weight of sample extracted (g)

V_t = Volume of total extract (ul)

V_s = NR

or W_s = 1.53

V_t = 5000

V_i = 5

772

Sample Number
IT-NCBC-R4-02

Organics Analysis Data Sheet (Page 1)

Laboratory Name: California Analytical Laboratories, Inc.
Lab Sample ID No: 21484-5
Sample Matrix: SOIL
Data Release Authorized By: PAS

Case No: 21484
QC Report No: NB
Contract No: NH
Date Sample Received: 5/21/85

Volatile Compounds

Concentration: Medium
Date Extracted/Prepared: 9/17/85
Date Analyzed: 9/17/85
Conc/Oil Factor: 100 pH: NB
Percent Moisture: NB
Percent Moisture (Decanted): NB

CAS Number		ug/Kg
74-87-3	Chloromethane	200 U
74-83-9	Bromomethane	200 U
75-01-4	Vinyl Chloride	200 U
75-08-3	Chloroethane	200 U
75-08-2	Methylene Chloride	500 U
67-64-1	Acetone	500 U
75-15-0	Carbon Disulfide	200 U
75-35-4	1,1-Dichloroethane	200 U
75-34-3	1,1-Dichloroethane	200 U
156-60-4	Trans-1,2-Dichloroethane	200 U
67-56-3	Chloroform	200 U
107-06-2	1,2-Dichloroethane	200 U
78-83-2	2-Butanone	500 U
71-43-6	1,1,1-Trichloroethane	200 U
56-23-5	Carbon Tetrachloride	200 U
105-68-4	Vinyl Acetate	1000 U
75-27-4	Bromochloromethane	200 U

CAS Number		ug/Kg
75-87-8	1,2-Dichloropropane	200 U
10061-02-8	Trans-1,3-Dichloropropane	200 U
78-01-6	Trichloroethane	200 U
124-48-1	Dibromochloromethane	200 U
78-00-8	1,1,2-Trichloroethane	200 U
71-43-2	Benzene	200 U
10061-01-6	cis-1,3-Dichloropropane	200 U
110-73-8	2-Chloroethylvinyl ether	1000 U
75-25-2	Bromobenzene	200 U
105-10-1	4-Methyl-2-Pentanone	500 U
99-178-6	2-Hexanone	500 U
127-18-4	Tetrachloroethane	200 U
78-34-8	1,1,2,2-Tetrachloroethane	200 U
105-68-3	Toluene	200 U
105-69-7	Chlorobenzene	200 U
105-61-4	Ethylbenzene	500 U
105-42-6	Styrene	200 U
	Total Xylenes	200 U

Data Reporting Qualifiers

For reporting results to EPA, the following results qualifiers are used. Additional flags or footnotes explaining results are encouraged. However, the definition of each flag must be exact.

Value: If the result is a value greater than or equal to the detection limit, report the value.

U: Indicates compound was analyzed for but not detected. Report the minimum detection limit for the sample with the U (e.g., 10U) based on necessary concentration dilution factors. (This is not necessarily the instrument detection limit). The footnote should read: U - Compound was analyzed for but not detected. The number is the minimum attainable detection limit for the sample.

J: Indicates an estimated value. This flag is used either when estimating a concentration for tentatively identified compounds where a 1:1 response is assumed or when the mass spectral data indicates the presence of a compound that meets the identification criteria but the result is less than the specified detection limit but greater than zero (e.g., 10U). If limit of detection is 10ug/l and a concentration of 3ug/l is calculated, report as 3U.

C: This flag applies to pesticide determinations where the identification has been confirmed by GC/MS. Single component pesticides are 100ug/l in the final extract should be confirmed by GC/MS.

B: This flag is used when the analyte is found in the blank as well as a sample. It indicates possible laboratory blank contamination and warns the data user to take appropriate action.

Other: Other specific flags and footnotes may be required and properly define the results. If used, they must be fully described and such description attached to the Test Summary Report.

NA: Not Analyzed.
R: See cover letter.
NR: Not Required.
S: Spiked Compound.

CLF 11/14/85

Form I Prepared by: [Signature]

10/85

Organics Analysis Data Sheet (Page 2)

Semivolatile Compounds

Concentration: Low
Date Extracted/Prepared: 8/27/85
Date Analyzed: 9/11/85
Conc/Dil Factor: 29G/ML

GPC Cleanup: NO
Separatory Funnel Extraction: YES
Continuous Liquid - Liquid Extraction: NO

CAS Number		ug/Kg
105-85-2	Phenol	200 U
111-44-4	bis(2-Chloroethyl)Ether	200 U
95-57-8	2-Chlorophenol	200 U
54-73-1	1,3-Dichlorobenzene	200 U
105-46-7	1,4-Dichlorobenzene	200 U
105-91-4	Benzyl Alcohol	200 U
99-80-1	1,2-Dichlorobenzene	200 U
95-48-7	2-Methylphenol	200 U
39432-32-9	bis(2-chloroisopropyl)Ether	400 U
105-46-8	4-Methylphenol	200 U
621-44-7	N-Nitroso-D,L-Propylamine	200 U
57-72-1	Hexachlorocyclopentadiene	200 U
96-85-3	Nitrobenzene	200 U
78-38-1	Isophenone	200 U
88-73-5	2-Nitrophenol	400 U
105-67-9	2,4-Dimethylphenol	200 U
85-45-0	Benzoic Acid	1000 U
111-91-1	bis(2-Chloroethyl)Methane	400 U
120-83-2	2,4-Dichlorophenol	200 U
120-82-1	1,2,4-Trichlorobenzene	200 U
91-20-3	Naphthalene	200 U
105-17-8	4-Chloroaniline	200 U
87-48-3	Hexachlorocyclopentadiene	200 U
98-50-7	4-Chloro-3-Methylphenol	200 U
91-57-6	2-Methylnaphthalene	200 U
77-47-4	Hexachlorocyclopentadiene	200 U
88-08-2	2,4,6-Trichlorophenol	200 U
96-96-4	2,4,5-Trichlorophenol	1000 U
91-58-7	2-Chloronaphthalene	200 U
88-74-4	2-Nitroaniline	1000 U
131-11-3	Olmethyl Phthalate	200 U
206-96-8	Acenaphthylene	200 U
98-09-2	5-Nitroaniline	1000 U

CAS Number		ug/Kg
83-32-9	Acenaphthene	200 U
91-28-6	2,6-Dinitrophenol	1000 U
109-02-7	4-Nitrophenol	1000 U
132-44-9	Orthoester	200 U
121-14-2	2,4-Dinitrofluorene	400 U
106-20-2	2,6-Dinitrofluorene	400 U
84-46-2	Dibenzophthalate	200 U
7095-72-3	4-Chlorophenyl-phenylether	200 U
86-72-7	Fluorene	200 U
100-01-6	4-Nitroaniline	1000 U
534-62-1	4,6-Dinitro-2-Methylphenol	400 U
86-30-6	N-Nitrosodiphenylamine(1)	200 U
101-85-3	4-Bromophenyl-phenylether	200 U
118-76-1	Hexachlorocyclopentadiene	200 U
87-86-1	Pentachlorophenol	200 U
85-01-8	Phenanthrene	200 U
120-12-7	Anthracene	200 U
84-74-2	Di-n-Butylphthalate	200 U
208-44-0	Fluorethene	200 U
129-00-8	Pyrene	200 U
35-48-7	Butylbenzylphthalate	200 U
71-54-1	2,3-Dichlorobenzidine	400 U
91-68-3	Benzal Amine	200 U
117-4-7	bis(2-Ethylhexyl)phthalate	200 U
218-01-8	Chrysene	400 U
117-84-0	Di-n-Octyl Phthalate	200 U
205-49-2	Benzal(b)Fluorethene	400 U
207-08-8	Benzal(b)Fluorethene	400 U
50-32-8	Benzal(b)Pyrene	400 U
193-39-5	Indeno(1,2,3-cd)Pyrene	400 U
53-70-3	Dibenz(g,h)Anthracene	400 U
91-24-2	Benzal(g,h)Perylene	400 U

(1) - Cannot be separated from diphenylamine

540

Organics Analysis Data Sheet
(Page 3)

Pesticide/PCBs

Concentration: LOW GPC Cleanup: NO
Date Extracted/Prepared: 8/21/85 Separatory Funnel Extraction: YES
Date Analyzed: 9/18/85 Continuous Liquid - Liquid Extraction: NO
Conc/Dil Factor: 1.5G/5ML

CAS Number		ug/Kg
319-84-4	Alpha-BHC	3.0 U
319-85-7	Beta-BHC	3.0 U
319-85-8	Delta-BHC	3.0 U
58-89-6	Gamma-BHC (Lindane)	3.0 U
78-44-4	Heptachlor	3.0 U
308-00-2	Aldrin	3.0 U
1024-67-3	Heptachlor Epoxide	3.0 U
988-88-4	Endosulfan I	7.0 U
60-67-1	Dieldrin	7.0 U
72-44-6	4,4'-DDE	7.0 U
72-20-8	Endrin	7.0 U
33213-49-6	Endosulfan II	7.0 U
72-84-8	4,4'-DDD	13 U
1001-07-6	Endosulfan Sulfate	13 U
58-28-3	4,4'-DDT	13 U
72-43-6	Methoxychlor	67 U
53484-70-6	Endrin Ketone	NA
57-74-6	Chlordane	67 U
8001-35-2	Toxaphene	670 U
12874-11-2	Aroclor-1016	NA
11104-28-2	Aroclor-1221	NA
11161-16-6	Aroclor-1232	NA
53489-21-6	Aroclor-1242	67 U
12872-29-6	Aroclor-1248	67 U
11087-69-1	Aroclor-1254	67 U
11086-62-4	Aroclor-1260	67 U

V_i = Volume of extract injected (ul)

V_s = Volume of water extracted (ml)

W_s = Weight of sample extracted (g)

V_t = Volume of total extract (ul)

V_s = NA

or W_s = 1.5

V_t = 5000

V_i = 5

950

Organics Analysis Data Sheet
(Page 1)Laboratory Name: California Analytical Laboratories, Inc.Case No: 21484Lab Sample ID No: 21484-9GC Report No: NRSample Matrix: SOILContract No: NRData Release Authorized By: PJDate Sample Received: 5/21/85

Volatile Compounds

Concentration: MediumDate Extracted/Prepared: 9/17/85Date Analyzed: 9/17/85Conc/Dil Factor: 100 pH: NRPercent Moisture: NRPercent Moisture (Decanted): NR

CAS Number		ug/Kg
74-87-3	Chloromethane	200 U
74-83-9	Bromomethane	200 U
75-01-4	Vinyl Chloride	200 U
75-00-3	Chloroethane	200 U
75-08-2	Methylene Chloride	200 U
67-64-1	Acetone	200 U
75-15-0	Carbon Disulfide	200 U
75-35-4	1,1-Dichloroethane	200 U
75-34-3	1,1-Dichloroethane	200 U
156-60-6	Trans-1,2-Dichloroethane	200 U
67-66-3	Chloroform	200 U
107-06-2	1,2-Dichloroethane	20 U
78-33-3	2-Butanone	200 U
71-36-6	1,1,1-Trichloroethane	200 U
56-23-5	Carbon Tetrachloride	200 U
108-06-4	Vinyl Acetate	1000 U
75-27-4	Bromodichloromethane	200 U

CAS Number		ug/Kg
78-67-8	1,2-Dichloropropane	200 U
10061-02-6	Trans-1,3-Dichloropropene	200 U
78-61-8	Trichloroethene	200 U
124-48-1	Dibromochloromethane	200 U
78-08-4	1,1,2-Trichloroethane	200 U
71-43-2	Benzene	200
10061-01-6	cis-1,3-Dichloropropene	200 U
110-73-8	2-Chloroethylvinyl ether	1000 U
75-25-3	Bromobenzene	200 U
108-10-1	4-Methyl-2-Pentanone	200 U
561-78-4	2-Hexanone	200 U
127-18-4	Tetrachloroethene	200 U
78-34-8	1,1,2,2-Tetrachloroethane	200 U
108-88-3	Toluene	200
108-90-7	Chlorobenzene	200 U
100-11-4	Ethylbenzene	200 U
100-82-6	Styrene	200 U
	Total Xylenes	200 U

Data Reporting Qualifiers

For reporting results to EPA, the following results qualifiers are used. Additional flags or footnotes explaining results are encouraged, however, the definition of each flag must be explicit.

Value: If the result is a value greater than or equal to the detection limit, report the value.

U Indicates compound was analyzed for but not detected. Report the minimum detection limit for the sample with the U (e.g., 10U) based on necessary concentration dilution factors. (This is not necessarily the instrument detection limit.) The footnote should read: U - Compound was analyzed for but not detected. The number is the minimum estimable detection limit for the sample.

J Indicates an estimated value. This flag is used either when estimating a concentration for tentatively identified compounds where a 1:1 ratio is assumed or when the mass spectral data indicated the presence of a compound that meets the identification criteria but the result is less than the specified detection limit but greater than zero. (e.g., 10U) If limit of detection is 10U and a concentration of 5ug/l is calculated, report as 5U.

C This flag applies to pesticide parameters where the identification has been confirmed by GC/MS. Single component pesticides are shown in the final extract should be confirmed by GC/MS.

B This flag is used when the analyte is found in the plant as well as a sample. It indicates possible airborne plant contamination and warns the data user to take appropriate action.

Other Other specific flags and footnotes may be required to properly define the results. If used, they must be fully described and such description attached to the data summary report.

NA Not Analyzed
S See cover sheet
NR Not Reported
S Suspect Compound.

CLP 11/14/85

Form 1

Prepared by: PJ

1085

Organics Analysis Data Sheet (Page 2)

Semivolatile Compounds

Concentration: Low
Date Extracted/Prepared: 8/27/85
Date Analyzed: 9/11/85
Conc/Dil Factor: 30G/2ML

GPC Cleanup: NO
Separatory Funnel Extraction: YES
Continuous Liquid - Liquid Extraction: NO

CAS Number	Compound	ug/Kg
105-85-2	Phenol	200 U
111-44-4	bis-(2-Chlorophenyl) Ether	200 U
95-57-8	2-Chlorophenol	200 U
341-73-1	1,2-Dichlorobenzene	200 U
105-46-7	1,4-Dichlorobenzene	200 U
100-81-4	Benzyol Methyl	200 U
95-50-1	1,2-Dichlorobenzene	200 U
95-48-7	2-Methylphenol	200 U
28539-32-8	bis(2-chloroethoxy) Ether	400 U
105-44-8	4-Methylphenol	200 U
621-44-7	N-Nitrosodimethylamine	200 U
57-72-1	Hexachlorocyclopentadiene	200 U
36-95-3	Nitrobenzene	200 U
78-58-1	Isophenol	200 U
88-73-8	2-Nitrophenol	400 U
105-67-9	2,4-Dimethylphenol	200 U
95-83-0	Benzoic Acid	1000 U
111-51-1	bis-(2-Chlorophenyl) Methane	400 U
120-82-3	2,4-Dichlorophenol	200 U
120-82-1	1,2,4-Trichlorobenzene	200 U
87-29-3	Naphthalene	200 U
105-67-8	4-Chlorophenol	200 U
87-68-3	Hexachlorocyclopentadiene	200 U
35-85-7	4-Chloro-3-Methylphenol	200 U
51-57-6	2-Methylnaphthalene	200 U
77-47-4	Hexachlorocyclopentadiene	200 U
85-75-2	2,4,6-Trichlorophenol	200 U
95-83-4	2,4,6-Trichlorophenol	200 U
7-68-7	2-Chloronaphthalene	200 U
85-74-4	2-Nitroaniline	1000 U
121-11-3	Dimethyl Phthalate	200 U
75-55-9	Acetophenone	200 U
85-75-2	3-Nitroaniline	1000 U

CAS Number	Compound	ug/Kg
83-32-6	Acenaphthene	200 U
51-28-5	2,4-Dinitrophenol	1000 U
100-03-7	4-Nitrophenol	1000 U
132-64-9	Dibenzofuran	200 U
121-14-2	2,4-Dinitrophenol	400 U
605-70-2	2,6-Dinitrophenol	400 U
84-84-3	Dibenzophthalate	200 U
7005-72-3	4-Chlorophenyl-phenyl ether	200 U
85-73-7	Phenol	200 U
105-91-4	4-Nitroaniline	1000 U
734-82-1	1,8-Dinitro-2-Methylphenol	400 U
85-38-5	N-Nitrosodiphenylamine(1)	200 U
101-43-3	4-Bromophenyl-phenyl ether	200 U
118-74-1	Hexachlorobenzene	200 U
87-58-6	Pentachlorophenol	200 U
88-01-3	Phenanthrene	200 U
120-12-7	Anthracene	200 U
84-74-3	3,4-Dibenzophthalate	200 U
205-44-0	Fluoranthene	200 U
129-00-0	Pyrene	200 U
83-68-7	8-ethylbenzophthalate	200 U
91-84-1	3,3'-Dichlorodiphenylamine	400 U
34-56-3	Benzo(a)Anthracene	200 U
117-21-7	bis(2-Ethylhexyl)Phthalate	200 U
218-01-6	Chrysene	400 U
117-84-0	Dim-Octyl Phthalate	200 U
205-85-2	Benzo(b)Fluoranthene	400 U
207-08-9	Benzo(k)Fluoranthene	400 U
50-32-8	Benzo(a)Pyrene	400 U
193-38-6	Indeno(1,2,3-cd)Pyrene	400 U
33-70-5	Dibenz(a,h)Anthracene	400 U
91-24-2	Benzo(g,h,i)Perylene	400 U

(1) - Cannot be separated from diphenylamine

Organics Analysis Data Sheet (Page 3)

Pesticide/PCBs

Concentration: LOW
Date Extracted/Prepared: 8/27/85
Date Analyzed: 9/18/85
Conc/Dil Factor: 1.5G/5ML

GPC Cleanup: NO
Separatory Funnel Extraction: YES
Continuous Liquid - Liquid Extraction: NO

CAS Number		ug/Kg
319-84-6	Alpha-BHC	3.0 U
319-85-7	Beta-BHC	3.0 U
319-86-8	Delta-BHC	3.0 U
55-98-9	Gamma-BHC (Lindane)	3.0 U
76-64-8	Heptachlor	3.0 U
309-00-2	Aldrin	3.0 U
1024-87-3	Heptachlor Epoxide	3.0 U
989-86-8	Endosulfan I	7.0 U
89-67-1	Dieldrin	7.0 U
72-68-8	4,4'-DDE	7.0 U
72-35-8	Endrin	7.0 U
33213-45-9	Endosulfan II	7.0 U
72-84-8	4,4'-DDD	15 U
1031-07-8	Endosulfan Sulfate	15 U
50-28-3	4,4'-DDT	15 U
72-43-8	Methoxychlor	67 U
53494-70-8	Envin Ketone	NA
57-74-8	Chlordane	67 U
8091-38-3	Toxaphene	67.0 U
12674-11-3	Aroclor-1016	NA
11104-28-2	Aroclor-1221	NA
11141-16-6	Aroclor-1232	NA
23468-21-8	Aroclor-1242	67 U
12673-29-6	Aroclor-1248	67 U
11097-68-1	Aroclor-1254	67 U
11096-82-8	Aroclor-1260	67 U

V_i = Volume of extract injected (ul)

V_s = Volume of water extracted (ml)

W_s = Weight of sample extracted (g)

V_t = Volume of total extract (ul)

$V_s = \text{NR}$

or $W_s = 1.5$

$V_t = 5000$

$V_i = 5$

354

Sample Number
IT-NCBC-R1-5-06

Organics Analysis Data Sheet (Page 1)

Laboratory Name: California Analytical Laboratories, Inc.

Case No: 21484

Lab Sample ID No: 21484-1

QC Report No: NR

Sample Matrix: SOIL

Contract No: NR

Date Release Authorized By: 704

Date Sample Received: 9/27/85

Volatile Compounds

Concentration: Medium

Date Extracted/Prepared: 9/17/85

Date Analyzed: 9/17/85

Conc/Dil Factor: 100 pH: NR

Percent Moisture: NR

Percent Moisture (Decanted): NR

CAS Number		ug/Kg
74-87-3	Chloromethane	200 U
74-83-6	Bromomethane	200 U
75-01-4	Vinyl Chloride	200 U
75-00-3	Chloroethane	200 U
75-09-2	Methylene Chloride	500 U
57-64-1	Acetone	500 U
75-15-3	Carbon Dioxide	200 U
75-35-4	1,1-Dichloroethane	200 U
75-34-3	1,1-Dichloroethane	200 U
156-60-8	Trans-1,2-Dichloroethane	200 U
57-66-3	Chloroform	200 U
127-06-2	1,2-Dichloroethane	200 U
78-93-2	2-Butanone	500 U
71-55-6	1,1,1-Trichloroethane	200 U
56-23-5	Carbon Tetrachloride	200 U
108-05-4	Vinyl Acetate	1000 U
75-27-4	Bromodichloromethane	200 U

CAS Number		ug/Kg
78-47-8	1,2-Dichlorobenzene	200 U
10661-08-6	Trans-1,3-Dichlorobenzene	200 U
78-01-6	Trichloroethane	200 U
124-48-1	Dibromodichloromethane	200 U
75-09-6	1,1,2-Trichloroethane	200 U
71-43-2	Benzene	1400
10061-01-6	cis-1,3-Dichlorobenzene	200 U
119-73-6	2-Chloroethylvinyl ether	1000 U
75-25-2	Bromoform	200 U
108-10-1	4-Methyl-2-Pentanone	500 U
591-78-6	2-Hexanone	500 U
127-18-4	Tetrachloroethane	200 U
78-34-6	1,1,2,2-Tetrachloroethane	200 U
105-68-3	Toluene	1800
108-90-7	Chlorobenzene	200 U
100-41-4	Ethylbenzene	460 U
100-42-5	Styrene	380 U
	Total Xylenes	1400

Data Reporting Qualifiers

For reporting results to EPA, the following results qualifiers are used. Additional flags or footnotes explaining results are encouraged, however, the definition of each flag must be explicit.

- Value: If the result is a value greater than or equal to the detection limit, report the value.
- U: Indicates compound was analyzed for but not detected. Report the minimum detection limit for the sample with the U (e.g., 10U) based on necessary concentration dilution factors. (This is not necessarily the instrument detection limit.) The footnotes should read: U: Compound was analyzed for but not detected. 10 is number is the minimum attainable detection limit for the sample.
- J: Indicates an estimated value. This flag is used either when estimating a concentration for "endogen" detected compounds where a 10% response is assumed or when the mass spectrum data indicated the presence of a compound that meets the identification criteria but the result is less than the specified detection limit but greater than zero, (e.g., 10U). If limit of detection is 10ug/l and a concentration of 3ug/l is calculated, report as 3U.

- C: This flag applies to pesticide parameters where the identification has been confirmed by GC/MS. Single component pesticides are 100% in the final extract should be confirmed by GC/MS.
- B: This flag is used when the analyte is found in the blank as well as a sample. It indicates possible probable blank contamination and warns the data user to take appropriate action.
- Other: Other specific flags and footnotes may be required to properly define the results. If used, they must be fully described and such description attached to the data summary report.
- NA: Not Analyzed.
- 6: See cover letter.
- NR: Not Required.
- 3: Seized Compound.

CLF 11/14/85

Form 1

Prepared by: 704

10/85

Organics Analysis Data Sheet
(Page 1)

Laboratory Name: California Analytical Laboratories, Inc.

Case No: 21349

Lab Sample ID No: 21349-8

QC Report No: NR

Sample Matrix: SOIL

Contract No: NR

Data Release Authorized By: *PJS*

Date Sample Received: 8/15/85

Volatile Compounds

Concentration: Medium

Date Extracted/Prepared: 11/13/85

Date Analyzed: 11/13/85

Conc/Dil Factor: 100 pH: NR

Percent Moisture: NR

Percent Moisture (Decanted): NR

CAS Number		ug/Kg
74-87-3	Chloromethane	200 U
74-83-8	Bromomethane	200 U
75-01-4	Vinyl Chloride	200 U
75-05-3	Chloroethane	1300
75-06-2	Methylene Chloride	200 U
67-64-1	Acetone	500 U
75-15-6	Carbon Disulfide	200 U
75-35-4	1,1-Dichloroethane	1900
75-34-3	1,1-Dichloroethane	200 U
156-60-6	Trans-1,2-Dichloroethane	200 U
67-66-3	Chloroform	200 U
107-06-2	1,2-Dichloroethane	200 U
78-03-3	2-Butanone	500 U
71-55-6	1,1,1-Trichloroethane	7300
56-23-6	Carbon Tetrachloride	200 U
103-06-4	Vinyl Acetate	1000 U
75-27-4	Bromodichloromethane	200 U

CAS Number		ug/Kg
75-87-8	1,2-Dichlorobenzene	200 U
10061-02-6	Trans-1,2-Dichlorobenzene	200 U
75-01-6	Trichloroethane	200 U
124-48-1	Dibromochloromethane	200 U
75-08-6	1,1,2-Trichloroethane	200 U
71-43-2	Benzene	3600
10061-01-6	cis-1,3-Dichloropropene	200 U
110-75-8	2-Chloroethylvinylether	1000 U
75-25-2	Bromobenzene	200 U
105-10-1	4-Methyl-2-Pentanone	500 U
391-78-6	2-Hexanone	500 U
127-18-4	Tetrachloroethane	200 U
78-34-6	1,1,2,2-Tetrachloroethane	200 U
105-60-3	Toluene	660
105-60-7	Chlorobenzene	200 U
100-41-4	Ethylbenzene	500 U
100-42-5	Styrene	200 U
	Total Xylenes	200 U

Data Reporting Qualifiers

For reporting results to EPA, the following results qualifiers are used. Additional flags or footnotes explaining results are encouraged, however, the definition of each flag must be explicit.

Value If the result is a value greater than or equal to the detection limit, report the value.

U Indicates compound was analyzed for but not detected. Report the minimum detection limit for the sample with the U (e.g. 10U) based on necessary concentration/dilution factors. (This is not necessarily the instrument detection limit.) The footnote should read: U - Compound was analyzed for but not detected. The number is the minimum attainable detection limit for the sample.

J Indicates an estimated value. This flag is used either when estimating a concentration for tentatively identified compounds where a 1:1 response is assumed or when the mass spectral data indicates the presence of a compound that meets the identification criteria but the result is less than the specified detection limit but greater than zero, (e.g. 10U). If limit of detection is 10U and a concentration of 3ug/l is calculated, report as 3J

C This flag applies to pesticide parameters where the identification has been confirmed by GC/MS. Single component pesticides >= 100ug/l in the final extract should be confirmed by GC/MS.

B This flag is used when the analyte is found in the blank as well as a sample. It indicates possible/carryover blank contamination and warns the data user to take appropriate action.

Other Other specific flags and footnotes may be required to properly define the results. If used, they must be fully described and such description attached to the data summary report.

NA Not Analyzed
See other footer
NR Not Required
S Suspect Compound

350

CLF: 11/14/85

Form I

Prepared by: *Kup*

1085

Organics Analysis Data Sheet (Page 2)

Semivolatile Compounds

Concentration: MEDIUM
Date Extracted/Prepared: 8/23/85, 9/3/85
Date Analyzed: 9/10/85
Conc/Dil Factor: 0.55g/ml

GPC Cleanup: NO
Separatory Funnel Extraction: YES
Continuous Liquid - Liquid Extraction: NO

CAS Number		ug/Kg
108-96-2	Phenol	45000
111-44-4	bis-(2-Chloroethyl) Ether	4000 U
95-57-8	2-Chlorophenol	1900 J
541-73-1	1,3-Dichlorobenzene	4000 U
106-46-7	1,4-Dichlorobenzene	4000 U
100-61-6	Benzyl Alcohol	4000 U
98-50-1	1,2-Dichlorobenzene	4000 U
95-48-7	2-Methylphenol	4000 U
79818-22-8	bis-(2-chloroethoxy) Ether	8000 U
108-44-6	4-Methylphenol	4000 U
921-84-7	N-Nitros-Di-n-Propylamine	4000 U
57-72-1	Hexachlorobenzene	4000 U
38-95-3	Nitrobenzene	4000 U
78-59-1	Isophenol	4000 U
28-73-3	2-Nitrophenol	8000 U
103-47-9	2,4-Dimethylphenol	4000 U
53-49-0	Benzoic Acid	17000 J
111-91-1	bis-(2-Chloroethoxy) Methane	8000 U
120-43-2	2,4-Dichlorophenol	3100 J
120-82-1	1,2,6-Trichlorobenzene	4000 U
91-20-3	Naphthalene	4000 U
108-47-8	4-Chloroaniline	4000 U
87-58-3	Hexachlorocyclopentadiene	4000 U
59-50-7	4-Chloro-3-Methylphenol	4000 U
91-57-8	2-Methylnaphthalene	4000 U
77-47-4	Hexachlorocyclopentadiene	4000 U
58-08-2	2,4,6-Trichlorophenol	4800 g
95-08-4	2,4,5-Trichlorophenol	g
91-58-7	2-Chloronaphthalene	4000 U
58-74-4	2-Nitroaniline	20000 U
131-11-3	Dimethyl Phthalate	4000 U
208-98-8	Azobenzene	4000 U
98-09-2	3-Nitroaniline	20000 U

CAS Number		ug/Kg
83-32-6	Acenaphthene	4000 U
51-28-4	2,4-Dinitrophenol	20000 U
100-02-7	4-Nitrophenol	20000 U
122-84-9	Ofenazofuran	4000 U
121-14-2	2,4-Dinitrotoluene	8000 U
609-39-2	2,6-Dinitrotoluene	8000 U
84-66-2	Diethylphthalate	4000 U
7009-72-3	4-Chlorobenzyl-phenyl ether	4000 U
88-73-7	Fluorene	4000 U
100-01-6	4-Nitroaniline	20000 U
534-42-1	5,6-Dinitro-2-Methylphenol	8000 U
88-30-6	N-Nitrosodiphenylamine(1)	4000 U
101-85-3	4-Bromophenyl-phenyl ether	4000 U
118-74-1	Hexachlorobenzene	4000 U
87-88-6	Pentachlorophenol	4000 U
85-01-8	Phenanthrene	4000 U
123-12-7	Anthracene	4000 U
84-74-2	Di-n-Butylphthalate	4000 U
208-44-0	Fluorene	4000 U
129-00-0	Pyrene	4000 U
85-68-7	Butylbenzylphthalate	4000 U
91-94-1	1,3-Dichlorobenzidine	8000 U
58-68-3	Benzo(a)Anthracene	4000 U
117-81-7	bis-(2-Ethylhexyl) Phthalate	4000 U
218-01-6	Chrysene	8000 U
117-84-0	Di-n-Octyl Phthalate	4000 U
205-99-2	Benzo(b)Fluoranthene	8000 U
207-08-8	Benzo(k)Fluoranthene	8000 U
50-12-6	Benzo(a)Pyrene	8000 U
193-38-3	Indeno(1,2,3-cd)Pyrene	8000 U
53-70-3	Ofen(a,h)Anthracene	8000 U
191-24-2	Benzo(g,h,i)Perylene	9000 U

(1) - Cannot be separated from diphenylamine

351

Organics Analysis Data Sheet (Page 3)

Pesticide/PCBs

Concentration: MEDIUM GPC Cleanup: NO
Date Extracted/Prepared: 8/23/85, 9/3/85 Separatory Funnel Extraction: YES
Date Analyzed: 9/9/85 Continuous Liquid - Liquid Extraction: NO
Conc/Oil Factor: 0.1 G/5ML

CAS Number		ug/Kg
319-84-6	Alpha-BHC	50 U
319-85-7	Beta-BHC	50 U
319-86-8	Delta-BHC	50 U
50-68-6	Gamma-BHC (Lindane)	50 U
75-44-8	Heptachlor	50 U
508-08-2	Aldrin	50 U
1024-87-3	Heptachlor Epoxide	50 U
500-88-8	Endosulfan I	100 U
66-87-1	Dieldrin	100 U
72-88-8	4,4'-DDE	100 U
72-80-4	Endrin	100 U
32213-68-6	Endosulfan II	100 U
72-84-4	4,4'-DDD	200 U
1051-87-8	Endosulfan Sulfate	200 U
36-28-3	4,4'-DDT	200 U
72-43-4	Methoxychlor	1000 U
53484-70-6	Endrin Ketone	NA
57-74-8	Chlordane	1000 U
8001-35-2	Toxaphene	10000 U
12876-11-3	Aroclor-1016	NA
11104-28-2	Aroclor-1221	NA
11141-18-4	Aroclor-1222	NA
53488-31-8	Aroclor-1242	1000 U
12872-38-4	Aroclor-1248	1000 U
11087-48-1	Aroclor-1254	1000 U
11088-82-6	Aroclor-1260	1000 U

V_i = Volume of extract injected (ul)

V_s = Volume of water extracted (ml)

W_s = Weight of sample extracted (g)

V_t = Volume of total extract (ul)

V_s = NR

or W_s = 0.11

V_t = 5000

V_i = 5

Sample Number
IT-NCBC-R2-09

Organics Analysis Data Sheet (Page 1)

Laboratory Name: California Analytical Laboratories, Inc.
Lab Sample ID No: 21413-7
Sample Matrix: SOIL
Data Release Authorized By: PAS

Case No: 21413
QC Report No: NR
Contract No: NR
Date Sample Received: 8/21/85

Volatile Compounds

Concentration: Medium
Date Extracted/Prepared: 9/17/85
Date Analyzed: 9/17/85
Conc/Dil Factor: 100 pH: NR
Percent Moisture: NR
Percent Moisture (Decanted): NR

CAS Number		ug/Kg
74-87-3	Chloromethane	200 U
74-83-8	Bromomethane	200 U
75-01-4	Vinyl Chloride	200 U
75-00-3	Chloroethane	200 U
75-08-3	Methylane Chloride	500 U
67-66-1	Acetone	500 U
75-15-0	Carbon Disulfide	200 U
75-35-4	1,1-Dichloroethane	500
75-34-3	1,1-Dichloroethene	200 U
136-60-8	Trans-1,2-Dichloroethane	200 U
67-66-3	Chloroform	200 U
107-06-2	1,2-Dichloroethane	200 U
78-93-3	2-Butanone	500 U
71-55-6	1,1,1-Trichloroethane	2000
56-23-6	Carbon Tetrachloride	200 U
108-66-4	Vinyl Acetate	1000 U
75-27-4	Bromodichloromethane	200 U

CAS Number		ug/Kg
75-87-5	1,2-Dichloropropane	200 U
10661-02-4	Trans-1,3-Dichloropropane	200 U
75-01-6	Trichloroethene	200 U
124-48-1	Dibromochloromethane	200 U
75-08-5	1,1,2-Trichloroethane	200 U
71-43-3	Benzene	5000
10661-01-6	cis-1,3-Dichloropropane	200 U
110-73-5	2-Chloroethylvinylether	1000 U
75-28-3	Bromotoluene	200 U
105-10-1	4-Methyl-2-Pentanone	500 U
981-75-6	2-Hexanone	500 U
127-18-4	Tetrachloroethane	200 U
75-34-6	1,1,2,2-Tetrachloroethane	200 U
105-85-3	Toluene	700
105-85-7	Chlorobenzene	200 U
105-41-4	Ethylbenzene	100 U
100-42-6	Styrene	200 U
	Total Xylenes	200

Data Reporting Qualifiers

For reporting results to EPA, the following results qualifiers are used. Additional flags or footnotes explaining results are encouraged. However, the definition of each flag must be exact.

- Value: If the result is a value greater than or equal to the detection limit, report the value.
- U: Indicates compound was analyzed for but not detected. Report the minimum detection limit for the sample with the U (e.g., 10U) based on necessary concentration/dilution factors. (This is not necessarily the instrument detection limit.) The footnotes should read: U - Compound was analyzed for but not detected. The number is the minimum achievable detection limit for the sample.
- J: Indicates an estimated value. This flag is used either when estimating a concentration for tentatively identified compounds where a 1:1 response is assumed or when the mass spectral data indicated the presence of a compound that meets the identification criteria but the result is less than the specified detection limit but greater than zero (e.g., 10U). If limit of detection is 10ug/l and a concentration of 3ug/l is calculated, report as 3U.

- C: This flag applies to pesticide parameters where the identification has been confirmed by GC/MS. Single component pesticides are 100ppm in the final extract should be confirmed by GC/MS.
- B: This flag is used when the analyte is found in the blank as well as a sample. It indicates possible/possible blank contamination and warns the data user to take appropriate action.
- Other: Other specific flags and footnotes may be required to properly define the results. If used, they must be fully described and such description attached to the data summary report.
- NA: Not Analyzed.
- R: See cover letter.
- NR: Not Required.
- S: Solvent Compound.

65

CLF 11/14/85

Form I

Prepared by: PAS

10/85

Organics Analysis Data Sheet
(Page 2)

Semivolatile Compounds

Concentration: MEDIUM
Date Extracted/Prepared: 8/27/85
Date Analyzed: 4/11/86
Conc/Dil Factor: 0.54g/0.5ml

GPC Cleanup: NO
Separatory Funnel Extraction: YES
Continuous Liquid - Liquid Extraction: NO

show lower DLV

CAS Number		ug/Kg
105-65-2	Phenol	3000 U
111-44-1	Isopropyl Chloroacetate	1000 U
26-27-8	2-Chlorophenol	1000 U
541-73-1	1,2-Dichlorobenzene	1000 U
105-65-7	1,4-Dichlorobenzene	1000 U
100-91-6	Benzyl Alcohol	1000 U
95-55-1	1,2-Dichlorobenzene	1000 U
95-45-7	2-Methylphenol	1000 U
205-25-2	Isopropyl Chloroacetate	2000 U
105-65-5	4-Methylphenol	1000 U
521-44-7	N-Nitrosodimethylamine	1000 U
67-73-1	Hexachlorobenzene	1000 U
95-55-3	Nitrobenzene	1000 U
75-55-1	Isophenol	1000 U
95-73-4	2-Nitrophenol	2000 U
105-67-8	2,4-Dichlorophenol	1000 U
55-55-5	Benzic Acid	5000 U
111-91-1	Isopropyl Chloroacetate	2000 U
120-82-2	2,4-Dichlorophenol	1000 U
120-82-1	1,2,4-Trichlorobenzene	1000 U
91-20-3	Naphthalene	1000 U
105-17-6	4-Chloroaniline	1000 U
67-68-3	Hexachlorobenzene	1000 U
55-55-7	4-Chloro-3-Methylphenol	1000 U
91-67-6	2-Methylnaphthalene	1000 U
77-47-4	Hexachlorocyclopentadiene	1000 U
95-55-2	2,4,6-Trichlorophenol	1000 U
95-55-4	2,4,5-Trichlorophenol	8000 U
91-65-7	2-Chloronaphthalene	1000 U
55-75-1	2-Nitroaniline	1000 U
121-11-3	Dimethyl Phthalate	1000 U
205-25-5	Acetophenone	1000 U
95-55-1	3-Nitroaniline	2000 U

CAS Number		ug/Kg
83-32-8	Acetophenone	1000 U
91-25-8	2,4-Dinitrophenol	3000 U
105-62-7	4-Nitrophenol	3000 U
121-44-8	Dibenzofuran	1000 U
121-14-2	2,4-Dinitrotoluene	2000 U
908-20-2	2,5-Dinitrotoluene	2000 U
94-45-2	Dibenzophthalate	1000 U
705-73-5	4-Chlorophenyl-phenyl ether	1000 U
85-73-7	Fluorene	1000 U
100-91-4	4-Nitroaniline	2000 U
534-52-1	4,6-Dinitro-3-Methylphenol	2000 U
85-39-6	N-Nitrosodiphenylamine(1)	1000 U
101-53-3	4-Bromophenyl-phenyl ether	1000 U
115-74-1	Hexachlorobenzene	1000 U
87-55-5	Pentachlorophenol	1000 U
85-51-5	Phenanthrene	1000 U
125-12-7	Anthracene	1000 U
84-74-2	Dim-Survylphthalate	2500
205-44-6	Fluorenone	1000 U
125-05-6	Pyrene	1000 U
85-55-7	Survylphthalate	1000 U
91-64-1	2,7-Dichloronaphthalene	2000 U
95-55-3	Benz(a) Anthracene	1000 U
117-51-7	Isopropyl Ethylphthalate	240 U
215-01-4	Chrysene	1000 U
117-84-0	Dim-Octyl Phthalate	1000 U
205-45-2	Benz(b) Fluoranthene	1000 U
207-08-9	Benz(c) Fluoranthene	1000 U
50-32-4	Benz(a) Pyrene	1000 U
183-39-5	Indeno(1,2,3-cd)Pyrene	1000 U
53-70-3	Dibenz(a,h) Anthracene	1000 U
191-24-2	Benz(g,h) Perylene	1000 U

(1) - Cannot be separated from diphenylamine

Organics Analysis Data Sheet
(Page 3)

Pesticide/PCBs

Concentration: MEDIUM GPC Cleanup: NO
Date Extracted/Prepared: 8/27/85, 9/3/85 Separatory Funnel Extraction: YES
Date Analyzed: 9/18/85 Continuous Liquid - Liquid Extraction: NO
Conc/Dil Factor: 0.16G/5ML

CAS Number		ug/Kg
319-84-6	Alpha-BHC	50 U
319-84-7	Beta-BHC	50 U
319-84-8	Delta-BHC	50 U
58-38-4	Gamma-BHC (Lindane)	50 U
75-44-8	Heptachlor	50 U
309-00-2	Aldrin	50 U
1024-67-3	Heptachlor Epoxide	50 U
958-48-6	Endosulfan I	100 U
95-67-1	Dieldrin	100 U
75-48-6	4,4'-DDE	100 U
75-29-8	Endrin	100 U
33313-48-6	Endosulfan II	100 U
75-54-8	4,4'-DDD	200 U
1031-97-8	Endosulfan Sulfate	200 U
95-29-3	4,4'-DDT	200 U
75-43-8	Methoxychlor	1000 U
53494-70-6	Endrin Ketone	NA
57-74-8	Chlordane	1000 U
6091-35-2	Toxaphene	10000 U
12874-11-2	Aroclor-1016	NA
11184-38-2	Aroclor-1221	NA
11141-18-8	Aroclor-1222	NA
13468-21-8	Aroclor-1242	1000 U
12872-29-6	Aroclor-1248	1000 U
11087-69-1	Aroclor-1254	1000 U
11086-62-8	Aroclor-1260	1000 U

V_i = Volume of extract injected (ul)

V_s = Volume of water extracted (ml)

W_s = Weight of sample extracted (g)

V_t = Volume of total extract (ul)

V_s = NR

or W_s = 0.10

V_t = 5000

V_i = 50

572

Organics Analysis Data Sheet
(Page 1)Laboratory Name: California Analytical Laboratories, Inc.Case No: 21484Lab Sample ID No: 21484-10QC Report No: NRSample Matrix: SOILContract No: NRData Release Authorized By: PJSDate Sample Received: 5/21/85

Volatile Compounds

Concentration: MediumDate Extracted/Prepared: 9/17/85Date Analyzed: 9/17/85Conc/Dil Factor: 100 pH: NRPercent Moisture: NRPercent Moisture (Decanted): NR

CAS Number		ug/Kg
74-87-3	Chloromethane	8000
74-83-8	Bromomethane	200 U
75-01-4	Vinyl Chloride	200 U
75-00-3	Chloroethane	2000
75-09-2	Methylene Chloride	1300 S
75-44-1	Acetone	500 U
75-18-0	Carbon Disulfide	200 U
75-33-4	1,1-Dichloroethane	200 U
75-34-3	1,1-Dichloroethane	200 U
156-60-3	Trans-1,2-Dichloroethane	200 U
67-66-3	Chloroform	200 U
107-06-2	1,2-Dichloroethane	200 U
78-93-3	2-Butanone	500 U
71-55-6	1,1,1-Trichloroethane	1300
56-23-5	Carbon Tetrachloride	200 U
108-05-4	Vinyl Acetate	1000 U
75-27-4	Bromodichloromethane	200 U

CAS Number		ug/Kg
78-87-5	1,2-Dichloropropane	200 U
10061-02-6	Trans-1,3-Dichloropropene	200 U
78-01-6	Trichloroethane	200 U
124-48-1	Dibromochloromethane	200 U
78-06-9	1,1,2-Trichloroethane	200 U
71-43-2	Benzene	490
10061-01-5	cis-1,3-Dichloropropene	200 U
110-75-8	2-Chloroethylvinylether	1000 U
75-25-2	Bromoform	200 U
108-10-1	4-Methyl-2-Pentanone	500 U
591-78-6	2-Hexanone	500 U
127-18-4	Tetrachloroethane	200 U
79-34-3	1,1,2,2-Tetrachloroethane	200 U
108-88-3	Toluene	200 U
108-90-7	Chlorobenzene	200 U
100-41-4	Ethylbenzene	500 U
100-42-5	Styrene	200 U
	Total Xylenes	200 U

Data Reporting Qualifiers

For reporting results to EPA, the following results qualifiers are used. Additional flags or footnotes explaining results are encouraged. However, the definition of each flag must be explicit.

Value: If the result is a value greater than or equal to the detection limit, report the value.

U: Indicates compound was analyzed for but not detected. Report the minimum detection limit for the sample with the U (e.g. 10U) based on necessary concentration/dilution factors. (This is not necessarily the instrument detection limit.) The footnote should read: U - Compound was analyzed for but not detected. The number is the minimum attainable detection limit for the sample.

J: Indicates an estimated value. This flag is used either when estimating a concentration for tentatively identified compounds where a 1:1 response is assumed or when the mass spectral data indicated the presence of a compound that meets the identification criteria but the result is less than the specified detection limit but greater than zero (e.g. 10U). If limit of detection is 10ug/l and a concentration of 3ug/l is calculated, report as 3U.

C: This flag applies to pesticide parameters where the identification has been confirmed by GC/MS. Single component pesticides will show up in the final report; should be confirmed by GC/MS.

B: This flag is used when the analyte is found in the blank as well as a sample. It indicates possible probable blank contamination and warns the data user to take appropriate action.

Other: Other specific flags and footnotes may be required to properly define the results. If used, they must be fully described and such description attached to the data summary report.

NA: Not Analyzed
: See cover letter
NR: Not Required
S: Spiked Compound

Organics Analysis Data Sheet (Page 2)

Semivolatile Compounds

Concentration: MEDIUM
Date Extracted/Prepared: 8/27/85, 9/3/85
Date Analyzed: 9/11/85
Conc/DIL Factor: 0.53G/mL

GPC Cleanup: NO
Separatory Funnel Extraction: YES
Continuous Liquid - Liquid Extraction: NO

CAS Number		ug/Kg
108-95-2	Phenol	15000
111-44-4	bis(2-Chloroethyl)Ether	4000 U
95-57-8	2-Chlorophenol	4000 U
541-73-1	1,3-Dichlorobenzene	4000 U
106-46-7	1,4-Dichlorobenzene	4000 U
100-51-6	Benzyl Alcohol	4000 U
95-50-1	1,2-Dichlorobenzene	4000 U
95-48-7	2-Methylphenol	4000 U
39638-32-9	bis(2-chloroisopropyl)Ether	8000 U
106-44-5	4-Methylphenol	4000 U
621-64-7	N-Nitroso-Di-n-Propylamine	4000 U
67-72-1	Hexachloroethane	4000 U
98-95-3	Nitrobenzene	4000 U
78-58-1	Isophorone	4000 U
88-75-5	2-Nitrophenol	8000 U
105-67-9	2,4-Dimethylphenol	4000 U
55-85-0	Benzoic Acid	20000 U
111-91-1	bis(2-Chloroethyl)Methane	8000 U
120-83-2	2,4-Dichlorophenol	4000 U
120-82-1	1,2,4-Trichlorobenzene	4000 U
91-20-3	Naphthalene	4000 U
106-47-8	4-Chloroaniline	4000 U
87-68-3	Hexachlorobutadiene	4000 U
59-50-7	4-Chloro-3-Methylphenol	4000 U
91-57-6	2-Methylnaphthalene	4000 U
77-47-4	Hexachlorocyclopentadiene	4000 U
88-06-2	2,4,6-Trichlorophenol	4000 U
95-95-4	2,4,5-Trichlorophenol	20000 U
91-58-7	2-Chloronaphthalene	4000 U
98-74-4	3-Nitroaniline	20000 U
131-11-3	Dimethyl Phthalate	4000 U
208-96-8	Acenaphthylene	4000 U
99-09-2	3-Nitroaniline	20000 U

CAS Number		ug/Kg
83-32-9	Acenaphthene	4000 U
91-28-5	2,4-Dinitrophenol	20000 U
100-02-7	4-Nitrophenol	20000 U
132-64-9	Dibenzofuran	4000 U
121-14-2	2,4-Dinitrotoluene	8000 U
608-20-2	2,6-Dinitrotoluene	8000 U
84-88-3	Diethylphthalate	4000 U
7005-72-3	4-Chlorophenyl-phenylether	4000 U
96-73-7	Fluorene	4000 U
100-01-6	4-Nitroaniline	20000 U
534-82-1	4,6-Dinitro-2-Methylphenol	8000 U
86-30-6	N-Nitrosodiphenylamine(1)	4000 U
101-55-3	4-Bromophenyl-phenylether	4000 U
118-74-1	Hexachlorobenzene	4000 U
87-88-5	Pentachlorophenol	4000 U
85-01-8	Phenanthrene	4000 U
120-12-7	Anthracene	4000 U
84-74-2	Di-n-Butylphthalate	4000 U
206-44-0	Fluoranthene	4000 U
129-00-0	Pyrene	4000 U
85-68-7	Butylbenzylphthalate	4000 U
91-94-1	3,3'-Dichlorobenzidine	8000 U
56-55-3	Benz(a)Anthracene	4000 U
117-81-7	bis(2-Ethylhexyl)Phthalate	4000 U
218-01-9	Chrysene	9000 U
117-84-0	Di-n-Octyl Phthalate	4000 U
205-99-2	Benz(b)Fluoranthene	8000 U
207-08-9	Benz(k)Fluoranthene	8000 U
50-32-8	Benz(a)Pyrene	8000 U
193-39-5	Indeno(1,2,3-cd)Pyrene	8000 U
55-70-3	Dibenz(a,h)Anthracene	8000 U
191-24-2	Benzo(g,h,i)Perylene	8000 U

(1) - Cannot be separated from Diphenylamine

911

982

Organics Analysis Data Sheet (Page 3)

Pesticide/PCBs

Concentration: MEDIUM
Date Extracted/Prepared: 8/27/85, 9/3/85
Date Analyzed: 9/18/85
Conc/Oil Factor: 0.1G/5ML

GPC Cleanup: NO
Separatory Funnel Extraction: YES
Continuous Liquid - Liquid Extraction: NO

CAS Number		ug X3
319-84-6	Alpha-BHC	50 U
319-85-7	Beta-BHC	50 U
319-86-8	Delta-BHC	50 U
58-88-8	Gamma-BHC (Lindane)	50 U
78-44-8	Heptachlor	50 U
909-00-3	Aldrin	50 U
1024-67-3	Heptachlor Epoxide	50 U
959-98-8	Endosulfan I	100 U
62-67-1	Dieldrin	100 U
72-65-8	4,4'-DDE	100 U
72-20-8	Endrin	100 U
33213-65-8	Endosulfan II	100 U
72-84-8	4,4'-DDD	200 U
1021-07-4	Endosulfan Sulfate	200 U
50-28-3	4,4'-DDT	200 U
72-43-5	Methoxychlor	1000 U
53494-100-6	Endrin Ketone	NA
57-74-8	Chlordane	1000 U
8001-35-2	Toxaphene	10000 U
12874-11-2	Aroclor-1015	NA
11104-28-2	Aroclor-1221	NA
11141-18-4	Aroclor-1232	NA
53469-21-8	Aroclor-1242	1000 U
12872-28-4	Aroclor-1248	1000 U
11097-58-1	Aroclor-1254	1000 U
11096-82-5	Aroclor-1250	1000 U

V_i = Volume of extract injected (ul)

V_s = Volume of water extracted (ml)

W_s = Weight of sample extracted (g)

V_t = Volume of total extrac. (ul)

V_s = NR

or W_s = 0.1

V_t = 5000

V_i = 5

310

Organics Analysis Data Sheet
(Page 1)Laboratory Name: California Analytical Laboratories, Inc.Case No: 21349Lab Sample ID No: 21349-9QC Report No: NRSample Matrix: SOILContract No: NRData Release Authorized By: PASDate Sample Received: 6/15/85

Volatile Compounds

Concentration: MediumDate Extracted/Prepared: 9/17/85Date Analyzed: 9/17/85Conc/Dil Factor: 100 pH: NRPercent Moisture: NRPercent Moisture (Decanted): NR

CAS Number		ug/Kg
74-87-3	Chloromethane	200 U
74-83-9	Bromomethane	200 U
75-01-4	Vinyl Chloride	200 U
75-00-3	Chloroethane	200 U
75-09-2	Methylene Chloride	500 U
64-1	Acetone	500 U
15-0	Carbon Disulfide	200 U
75-35-4	1,1-Dichloroethane	200 U
75-34-3	1,1-Dichloroethane	200 U
158-60-3	Trans-1,2-Dichloroethane	200 U
67-66-3	Chloroform	200 U
107-06-2	1,2-Dichloroethane	200 U
78-93-3	2-Butanone	500 U
71-55-6	1,1,1-Trichloroethane	200 U
56-23-5	Carbon Tetrachloride	200 U
108-05-4	Vinyl Acetate	1000 U
75-27-4	Bromodichloromethane	200 U

CAS Number		ug/Kg
78-87-5	1,2-Dichloropropane	200 U
10061-02-6	Trans-1,3-Dichloropropene	200 U
79-01-6	Trichloroethane	200 U
124-48-1	Dibromochloromethane	200 U
79-00-5	1,1,2-Trichloroethane	200 U
71-43-2	Benzene	200 U
10061-01-5	cis-1,3-Dichloropropene	200 U
110-75-8	2-Chloroethylvinylether	1000 U
75-25-2	Bromoform	200 U
108-10-1	4-Methyl-2-Pentanone	500 U
591-78-6	2-Hexanone	500 U
127-18-4	Tetrachloroethene	200 U
79-34-2	1,1,2,2-Tetrachloroethane	200 U
108-88-3	Toluene	200 U
108-90-7	Chlorobenzene	200 U
100-41-4	Ethylbenzene	500 U
100-42-6	Styrene	200 U
	Total Xylenes	200 U

Data Reporting Qualifiers

For reporting results to EPA, the following results qualifiers are used. Additional flags or footnotes explaining results are encouraged. However, the definition of each flag must be explicit.

Value If the result is a value greater than or equal to the detection limit, report the value.

U Indicates compound was analyzed for but not detected. Report the minimum detection limit for the sample with the U (e.g. 10U) based on necessary concentration dilution actions. (This is not necessarily the instrument detection limit.) The footnote should read: U - Compound was analyzed for but not detected. The number is the minimum attainable detection limit for the sample.

J Indicates an estimated value. This flag is used either when estimating a concentration for tentatively identified compounds where a 1:1 response is assumed or when the mass spectral data indicated the presence of a compound that meets the identification criteria but the result is less than the specified detection limit but greater than zero (e.g. 10U). If limit of detection is 10ug/l and a concentration of 3ug/l is calculated, report as 3J.

C This flag applies to pesticide parameters where the identification has been confirmed by GC/MS. Single component pesticides >= 10ng/l in the final extract should be confirmed by GC/MS.

B This flag is used when the analyte is found in the blank as well as a sample. It indicates possible probable blank contamination and warns the data user to take appropriate action.

Other Other specific flags and footnotes may be required to properly define the results. If used, they must be fully described and such description attached to the data summary report.

NA Not Analyzed
See cover letter
NR Not Required
S Socked Compound

461

Organics Analysis Data Sheet (Page 2)

Semivolatile Compounds

Concentration: LOW
Date Extracted/Prepared: 8/23/85
Date Analyzed: 9/10/85
Conc/Dil Factor: 290/ml

GPC Cleanup: NO
Separatory Funnel Extraction: YES
Continuous Liquid - Liquid Extraction: NO

CAS Number

CAS Number	Compound	ug/Kg
108-95-2	Phenol	200 U
111-44-4	bis(2-Chloroethyl)Ether	200 U
95-57-8	2-Chlorophenol	200 U
541-73-1	1,3-Dichlorobenzene	200 U
106-46-7	1,4-Dichlorobenzene	200 U
100-51-6	Benzyl Alcohol	200 U
133-50-1	1,2-Dichlorobenzene	200 U
95-48-7	2-Methylphenol	200 U
39638-12-9	bis(2-chloroisopropyl)Ether	400 U
106-44-5	4-Methylphenol	200 U
621-64-7	N-Nitroso-Di-n-Propylamine	200 U
57-72-1	Hexachloroethane	200 U
98-95-3	Nitrobenzene	200 U
78-59-1	Isophorone	200 U
88-75-5	2-Nitrophenol	400 U
105-67-9	2,4-Dimethylphenol	200 U
65-85-0	Benzoic Acid	1000 U
111-91-1	bis(2-Chloroethoxy)Methane	400 U
120-83-2	2,4-Dichlorophenol	200 U
120-82-1	1,2,4-Trichlorobenzene	200 U
91-20-3	Naphthalene	200 U
106-47-8	4-Chloroaniline	200 U
87-68-3	Hexachlorobutadiene	200 U
59-50-7	4-Chloro-3-Methylphenol	200 U
91-57-6	2-Methylnaphthalene	200 U
77-47-4	Hexachlorocyclopentadiene	200 U
88-06-2	2,4,6-Trichlorophenol	200 U
95-95-4	2,4,5-Trichlorophenol	200 U
115-58-7	2-Chloronaphthalene	200 U
124-74-4	2-Nitroaniline	1000 U
131-11-2	Dimethyl Phthalate	200 U
208-96-8	Acenaphthylene	200 U
99-09-2	3-Nitroaniline	1000 U

CAS Number

CAS Number	Compound	ug/Kg
83-32-9	Acenaphthene	200 U
51-28-5	2,4-Dinitrophenol	1000 U
100-02-7	4-Nitrophenol	1000 U
132-64-9	Dibenzofuran	200 U
121-14-2	2,4-Dinitrotoluene	400 U
506-20-2	2,6-Dinitrotoluene	400 U
84-56-2	Diethylphthalate	200 U
7005-72-3	4-Chlorophenyl-phenylether	200 U
86-73-7	Fluorene	200 U
100-01-6	4-Nitroaniline	1000 U
534-52-1	4,6-Dinitro-2-Methylphenol	400 U
56-30-6	N-Nitrosodiphenylamine(1)	200 U
101-53-3	4-Bromophenyl-phenylether	200 U
118-74-1	Hexachlorobenzene	200 U
87-66-5	Pentachlorophenol	200 U
85-01-8	Phenanthrene	200 U
120-12-7	Anthracene	200 U
84-74-2	Di-n-Butylphthalate	200 U
206-44-0	Fluoranthene	200 U
129-00-0	Pyrene	200 U
85-68-7	Butylbenzylphthalate	200 U
91-94-1	3,3'-Dichlorobenzidine	400 U
56-55-3	Benzo(a)Anthracene	200 U
117-81-7	bis(2-Ethylhexyl)Phthalate	200 U
218-01-9	Chrysene	400 U
117-84-0	Di-n-Octyl Phthalate	200 U
205-99-2	Benzo(b)Fluoranthene	400 U
207-08-9	Benzo(k)Fluoranthene	400 U
50-32-8	Benzo(a)Pyrene	400 U
193-39-5	Indeno(1,2,3-cd)Pyrene	400 U
53-70-3	Dibenz(a,h)Anthracene	400 U
131-24-2	Benzo(g,h,i)Perylene	400 U

(1) - Cannot be separated from diphenylamine

Organics Analysis Data Sheet (Page 3)

Pesticide/PCBs

Concentration: LOW GPC Cleanup: NO
Date Extracted/Prepared: 8/23/85 Separatory Funnel Extraction: YES
Date Analyzed: 9/19/85 Continuous Liquid - Liquid Extraction: NO
Conc/Dil Factor: 1.5G/5ML

CAS Number		ug/l
319-84-4	Alpha-BHC	3.0 U
319-83-7	Beta-BHC	3.0 U
319-86-8	Delta-BHC	3.0 U
58-89-9	Gamma-BHC (Lindane)	3.0 U
75-44-8	Heptachlor	3.0 U
309-00-2	Aldrin	3.0 U
1024-57-3	Heptachlor Epoxide	3.0 U
959-98-8	Endosulfan I	7.0 U
60-57-1	Dieldrin	7.0 U
72-55-8	4,4'-DDE	7.0 U
72-20-8	Endrin	7.0 U
33213-65-9	Endosulfan II	7.0 U
72-54-8	4,4'-DDD	13 U
1831-07-8	Endosulfan Sulfate	13 U
50-29-3	4,4'-DDT	13 U
72-43-5	Methoxychlor	67 U
33494-70-5	Endrin Ketone	NA
57-74-9	Chlordane	67 U
3001-35-2	Toxaphene	670 U
12674-11-2	Aroclor-1016	NA
11104-28-2	Aroclor-1221	NA
11141-16-5	Aroclor-1232	NA
53469-21-8	Aroclor-1242	67 U
12672-29-6	Aroclor-1248	67 U
11097-69-1	Aroclor-1254	67 U
11096-82-5	Aroclor-1260	67 U

V_i = Volume of extract injected (ul)

V_s = Volume of water extracted (ml)

W_s = Weight of sample extracted (g)

V_t = Volume of total extract (ul)

V_s = NR

or W_s = 1.5

V_t = 5000

V_i = 5166

Organics Analysis Data Sheet (Page 1)

Laboratory Name: California Analytical Laboratories, Inc.
Lab Sample ID No: 21413-B
Sample Matrix: SOIL
Data Release Authorized By: PAS

Case No: 21413
QC Report No: NR
Contract No: NR
Date Sample Received: 6/21/85

Volatile Compounds

Concentration: Medium
Date Extracted/Prepared: 9/17/85
Date Analyzed: 9/17/85
Conc/Dil Factor: 100 pH: NR
Percent Moisture: NR
Percent Moisture (Decanted): NR

CAS Number		ug/Kg
74-87-3	Chloromethane	9900
74-83-9	Bromomethane	200 U
75-01-4	Vinyl Chloride	130 J
75-00-3	Chloroethane	470
75-09-3	Methylene Chloride	500 U
64-17-8	Acetone	500 U
5-15-0	Carbon Disulfide	200 U
75-35-4	1,1-Dichloroethane	200 U
75-34-3	1,1-Dichloroethane	200 U
156-60-5	Trans-1,2-Dichloroethane	200 U
67-66-3	Chloroform	200 U
107-06-2	1,2-Dichloroethane	200 U
78-83-3	2-Butanone	500 U
71-55-6	1,1,1-Trichloroethane	200 U
56-23-5	Carbon Tetrachloride	200 U
108-05-4	Vinyl Acetate	1000 U
75-27-4	Bromodichloromethane	200 U

CAS Number		ug/Kg
75-87-5	1,2-Dichloropropane	200 U
10061-02-6	Trans-1,3-Dichloropropene	200 U
79-01-6	Trichloroethene	200 U
124-48-1	Dibromochloromethane	200 U
79-00-5	1,1,2-Trichloroethane	200 U
71-43-2	Benzene	170 J
10061-01-5	cis-1,3-Dichloropropene	200 U
110-75-8	2-Chloroethylvinylether	1000 U
75-25-2	Bromoform	200 U
108-10-1	4-Methyl-2-Pentanone	500 U
551-78-6	2-Hexanone	500 U
127-18-4	Tetrachloroethene	200 U
78-34-5	1,1,2,2-Tetrachloroethane	200 U
108-88-3	Toluene	200 U
108-90-7	Chlorobenzene	200 U
100-41-4	Ethylbenzene	500 U
100-42-5	Styrene	200 U
	Total Xylenes	200 U

Data Reporting Qualifiers

For reporting results to EPA, the following results qualifiers are used. Additional flags or footnotes explaining results are encouraged. However, the definition of each flag must be explicit.

Value If the result is a value greater than or equal to the detection limit, report the value.

U Indicates compound was analyzed for but not detected. Report the minimum detection limit for the sample with the U (e.g., 10U) based on necessary concentration/dilution factors. (This is not necessarily the instrument detection limit.) The footnote should read: U - Compound was analyzed for but not detected. The number is the minimum attainable detection limit for the sample.

J Indicates an estimated value. This flag is used either when estimating a concentration for tentatively identified compounds where a 1:1 response is assumed or when the mass spectral data indicated the presence of a compound that meets the identification criteria but the result is less than the specified detection limit but greater than zero (e.g., 10U). If limit of detection is 10ug/l and a concentration of 8ug/l is calculated, report as 3U.

C This flag applies to pesticide parameters where the detection has been confirmed by GC/MS. Since component pesticides will show up in the final extract, should be confirmed by GC/MS.

B This flag is used when the analyte is found in the blank as well as a sample. It indicates possible probable blank contamination and warns the data user to take appropriate action.

Other Other specific flags and footnotes may be used, as long as properly defined in the report. If used, they must be fully described and such description attached to the data summary report.

NA Not Analyzed
See Cover Sheet
NR Not Required
S Spiked Compound

Organics Analysis Data Sheet (Page 2)

Semivolatile Compounds

Concentration: Low
Date Extracted/Prepared: 8/27/85
Date Analyzed: 9/11/85
Conc/Dil Factor: 29G/ML

GPC Cleanup: NO
Separatory Funnel Extraction: YES
Continuous Liquid - Liquid Extraction: NO

CAS Number		ug/Kg
108-95-2	Phenol	200 U
111-44-4	bis(2-Chloroethyl)Ether	200 U
95-57-8	2-Chlorophenol	200 U
541-73-1	1,3-Dichlorobenzene	200 U
106-46-7	1,4-Dichlorobenzene	200 U
100-51-6	Benzyl Alcohol	200 U
95-50-1	1,2-Dichlorobenzene	200 U
95-48-7	2-Methylphenol	200 U
39538-32-9	bis(2-chloroisopropyl)Ether	400 U
106-44-5	4-Methylphenol	200 U
521-64-7	N-Nitroso-Di-n-Propylamine	200 U
67-72-1	Hexachloroethane	200 U
98-95-3	Nitrobenzene	200 U
78-59-1	Isophenene	200 U
98-75-5	2-Nitrophenol	400 U
105-67-9	2,4-Dimethylphenol	200 U
65-45-0	Benzoic Acid	1000 U
111-91-1	bis(2-Chloroethoxy)Methane	400 U
120-93-2	2,4-Dichlorophenol	200 U
120-62-1	1,2,4-Trichlorobenzene	200 U
91-20-3	Naphthalene	200 U
106-47-8	4-Chloroaniline	200 U
97-58-3	Hexachlorobutadiene	200 U
59-50-7	4-Chloro-3-Methylphenol	200 U
91-57-6	2-Methylnaphthalene	200 U
77-47-4	Hexachlorocyclopentadiene	200 U
88-06-2	2,4,6-Trichlorophenol	200 U
95-95-4	2,4,5-Trichlorophenol	200 U
91-58-7	2-Chloronaphthalene	200 U
15-74-4	2-Nitroaniline	1000 U
131-11-3	Dimethyl Phthalate	200 U
205-95-8	Acenaphthylene	200 U
59-03-2	3-Nitroaniline	1000 U

CAS Number		ug/Kg
83-32-9	Acenaphthene	200 U
51-28-5	2,4-Dinitrophenol	1000 U
100-02-7	4-Nitrophenol	1000 U
132-64-9	Dibenzofuran	200 U
121-14-2	2,4-Dinitrotoluene	400 U
606-20-2	2,6-Dinitrotoluene	400 U
84-66-2	Diethylphthalate	200 U
7005-72-3	4-Chlorophenyl-phenylether	200 U
86-73-7	Fluorene	200 U
100-01-6	4-Nitroaniline	1000 U
534-52-1	4,6-Dinitro-2-Methylphenol	400 U
86-30-6	N-Nitrosodiphenylamine(1)	200 U
101-55-3	4-Bromophenyl-phenylether	200 U
118-74-1	Hexachlorobenzene	200 U
87-86-6	Pentachlorophenol	200 U
85-01-8	Phenanthrene	200 U
120-12-7	Anthracene	200 U
84-74-2	Di-n-Butylphthalate	200 U
206-44-0	Fluoranthene	200 U
129-00-0	Pyrene	200 U
85-68-7	Butylbenzylphthalate	200 U
91-94-1	3,3'-Dichlorobenzidine	400 U
55-55-3	Benzo(a)Anthracene	200 U
117-81-7	bis(2-Ethylhexyl)Phthalate	200 U
218-01-9	Chrysene	400 U
117-84-0	Di-n-Octyl Phthalate	200 U
205-99-2	Benzo(b)Fluoranthene	400 U
207-08-9	Benzo(k)Fluoranthene	400 U
50-12-6	Benzo(a)Pyrene	400 U
193-19-5	Indeno(1,2,3-cd)Pyrene	400 U
53-70-3	Dibenzo(a,h)Anthracene	400 U
191-24-2	Benzo(g,h,i)Perylene	100 U

(1) - Cannot be separated from diphenylamine

Organics Analysis Data Sheet (Page 3)

Pesticide/PCBs

Concentration: LOW
Date Extracted/Prepared: 8/27/85
Date Analyzed: 9/18/85
Conc/Dil Factor: 1.5G/5ML

GPC Cleanup: NO
Separatory Funnel Extraction: YES
Continuous Liquid - Liquid Extraction: NO

CAS Number		ug Kg
319-84-8	Alpha-BHC	3.0 U
319-85-7	Beta-BHC	3.0 U
319-86-8	Delta-BHC	3.0 U
58-89-9	Gamma-BHC (Lindane)	3.0 U
76-44-8	Heptachlor	3.0 U
309-00-2	Aldrin	3.0 U
1024-57-3	Heptachlor Epoxide	3.0 U
959-98-8	Endosulfan I	7.0 U
60-87-1	Dieldrin	7.0 U
72-55-9	4,4'-DDE	7.0 U
72-20-8	Endrin	7.0 U
21213-63-9	Endosulfan II	7.0 U
72-54-8	4,4'-DDD	13 U
1031-07-8	Endosulfan Sulfate	13 U
50-29-3	4,4'-DDT	13 U
72-43-5	Methoxychlor	67 U
53494-70-5	Endrin Ketone	NA
57-74-8	Chlordane	67 U
8001-35-2	Toxaphene	670 U
12674-11-2	Aroclor-1016	NA
11104-28-2	Aroclor-1221	NA
11141-16-5	Aroclor-1232	NA
53469-21-8	Aroclor-1242	67 U
12672-29-6	Aroclor-1248	67 U
11087-69-1	Aroclor-1254	67 U
11096-82-5	Aroclor-1260	67 U

V_i = Volume of extract injected (ul)

V_s = Volume of water extracted (ml)

W_s = Weight of sample extracted (g)

V_t = Volume of total extract (ul)

V_s = NR

or W_s = 1.5

V_t = 5000

V_i = 5

Sample Number
IT-NCBC-R5-09A

Organics Analysis Data Sheet (Page 1)

Laboratory Name: California Analytical Laboratories, Inc.
Lab Sample ID No: 21484-11
Sample Name: SCIL
Data Release Authorized By: PLJ

Case No: 21484
GC Report No: NR
Contract No: NR
Date Sample Received: 8/21/85

Volatile Compounds

Concentration: Medium
Date Extracted/Prepared: 9/18/85
Date Analyzed: 9/18/85
Conc/Dil Factor: 100 pH: NR
Percent Moisture: NR
Percent Moisture (Decanted): NR

CAS Number		ug/Kg
74-87-3	Chloromethane	50000
74-83-9	Bromomethane	200 U
75-01-4	Vinyl Chloride	200 U
75-30-3	Chloroethane	200 U
75-08-2	Methylene Chloride	500 U
67-64-1	Aceflone	500 U
75-15-0	Carbon Dioxide	200 U
75-35-4	1,1-Dichloroethane	200 U
75-34-3	1,1-Dichloroethane	200 U
156-60-5	Trans-1,2-Dichloroethane	200 U
57-66-3	Chloroform	200 U
127-08-3	1,2-Dichloroethane	200 U
78-93-3	2-Butanone	500 U
71-55-6	1,1,1-Trichloroethane	200 U
56-25-4	Carbon Tetrachloride	200 U
105-04-4	Vinyl Acetate	1000 U
75-27-4	Bromochloromethane	200 U

CAS Number		ug/Kg
75-87-3	1,2-Dichloropropane	200 U
10061-03-6	Trans-1,3-Dichloropropane	200 U
75-01-4	Trichloroethane	200 U
124-48-1	Dibromochloromethane	200 U
75-08-6	1,1,2-Trichloroethane	200 U
71-43-2	Benzene	200 U
10061-01-6	cis-1,3-Dichloropropane	200 U
110-78-9	2-Chloroethylvinylether	1000 U
75-28-2	Bromotoluene	200 U
105-15-1	4-Methyl-2-Pentanone	500 U
591-78-6	2-Methanol	500 U
127-18-4	Tetrachloroethane	200 U
75-34-5	1,1,2,2-Tetrachloroethane	200 U
105-60-3	Toluene	200 U
105-60-7	Chlorobenzene	200 U
100-41-4	Ethylbenzene	500 U
100-42-6	Styrene	200 U
	Total Xylenes	200 U

Data Reporting Qualifiers

For reporting results to EPA, the following results qualifiers are used. Additional flags or footnotes explaining results are encouraged. However, the definition of each flag must be exact.

Value: If the result is a value greater than or equal to the detection limit, report the value.

U: Indicates compound was analyzed for but not detected. Report the minimum detection limit for the sample with the U (e.g., 10U) based on necessary concentration/dilution factors. (This is not necessarily the instrument detection limit.) The footnote should read: U - Compound was analyzed for but not detected. The number is the minimum attainable detection limit for the sample.

J: Indicates an isolated value. This flag is used either when estimating a concentration for tentatively identified compounds where a 1:1 response is assumed or when the mass spectral data indicated the presence of a compound that meets the identification criteria but the result is less than the specified detection limit but greater than zero (e.g., 10U). If limit of detection is 10ug/l and a concentration of 0.9ug/l is calculated, report as J.

C: This flag applies to pesticide parameters where the identification has been confirmed by GC/MS. Single component pesticides > 10ug/l in the final extract should be confirmed by GC/MS.

B: This flag is used when the analyte is found in the blank as well as a sample. It indicates possible/probable blank contamination and warns the data user to take appropriate action.

Other: Other specific flags and footnotes may be required to properly define the results. If used, they must be fully described and such description attached to the data summary report.

NA: Not Analyzed.
NR: Not Required.
S: Suspect Compound.

973

Organics Analysis Data Sheet (Page 2)

Semivolatile Compounds

Concentration: Low
Date Extracted/Prepared: 8/27/85
Date Analyzed: 9/11/85
Conc/Dil Factor: 29G/ML

GPC Cleanup: NO
Separatory Funnel Extraction: YES
Continuous Liquid - Liquid Extraction: NO

CAS Number		ug/Kg
108-95-2	Phenol	200 U
111-46-4	bis-3-Chloroethoxy Ether	200 U
95-57-8	2-Chlorophenol	200 U
561-73-1	1,3-Dichlorobenzene	200 U
106-46-7	1,4-Dichlorobenzene	200 U
108-91-4	Benzyl Alcohol	200 U
95-50-1	1,2-Dichlorobenzene	200 U
95-48-7	2-Methylphenol	200 U
2938-33-9	bis(2-chloroethoxy) Ether	400 U
106-44-6	4-Methylphenol	200 U
521-64-7	N-Nitroso-Di-n-Propylamine	200 U
67-72-1	Hexachlorobenzene	200 U
98-93-3	Nitrobenzene	200 U
78-59-1	Isochlorobenzene	200 U
86-73-8	2-Nitrophenol	400 U
105-67-9	2,4-Dimethylphenol	200 U
65-65-9	Benzic Acid	1000 U
111-91-1	bis-3-Chloroethoxy Methane	400 U
120-83-2	2,4-Dichlorophenol	200 U
120-82-1	1,2,4-Trichlorobenzene	200 U
91-20-3	Naphthalene	200 U
106-47-8	4-Chloronitrobenzene	200 U
67-68-3	Hexachlorobutadiene	200 U
59-52-7	4-Chloro-3-Methylphenol	200 U
21-17-8	2-Methylnaphthalene	200 U
77-74-1	Hexachlorocyclopentadiene	200 U
88-06-2	2,4,6-Trichlorophenol	200 U
95-95-4	2,4,5-Trichlorophenol	1000 U
91-58-7	2-Chloronaphthalene	200 U
68-74-4	2-Nitronitrobenzene	1000 U
131-11-3	Dimethyl Phthalate	200 U
205-25-2	Acetophenone	200 U
98-09-3	5-Nitronitrobenzene	1000 U

CAS Number		ug/Kg
83-32-6	Acenaphthene	200 U
51-28-6	2,4-Dinitrophenol	1000 U
100-02-7	4-Nitrophenol	1000 U
122-44-9	Dibenzofuran	200 U
121-14-2	2,4-Dinitrotoluene	400 U
806-20-2	2,6-Dinitrotoluene	400 U
64-68-2	Dibenzophthalate	200 U
7005-72-3	4-Chlorophenyl-phenylether	200 U
86-75-7	Fluorene	200 U
100-01-8	4-Nitronitrobenzene	1000 U
574-12-1	4,6-Dinitro-2-Methylphenol	400 U
86-30-4	4-Nitrodiphenylmethane	200 U
101-55-3	4-Bromophenyl-phenylether	200 U
118-74-1	Hexachlorobenzene	200 U
87-86-5	Pentachlorophenol	200 U
95-01-4	Phenanthrene	200 U
120-12-7	Anthracene	200 U
84-74-2	Di-n-Butylphthalate	200 U
208-44-0	Fluorenone	200 U
129-00-0	Pyrene	200 U
65-64-7	Butylbenzylphthalate	200 U
91-94-1	3,3'-Dichlorobenzidine	400 U
56-65-3	Benzotriazepine	200 U
117-81-7	bis(2-Ethylhexyl) Phthalate	200 U
218-01-3	Chrysene	400 U
117-84-0	Din-Octyl Phthalate	200 U
205-28-2	Benzotriphenylene	400 U
207-03-9	Benzotriphenylene	400 U
50-12-4	Benzotriphenylene	400 U
193-38-8	Indeno(1,2,3-cd)Pyrene	400 U
53-70-3	Dibenz(a,h) Anthracene	400 U
191-24-2	Benzotriphenylene	400 U

(1) - Cannot be separated from diphenylamine

CLF: 10/11/85

Form I Prepared by: 

85

Laboratory Name: CALIFORNIA ANALYTICAL LABORATORIES, INC.
Case No: 21434

Sample Number
IT-NC8C-R5-09A

Organics Analysis Data Sheet
(Page 3)

Pesticide/PCBs

Concentration: LOW

GPC Cleanup: NO

Date Extracted/Prepared: 8/27/85

Separatory Funnel Extraction: YES

Date Analyzed: 9/18/85

Continuous Liquid - Liquid Extraction: NO

Conc/Oil Factor: 1.5G/5ML

CAS Number		ug/Kg
319-84-6	Alpha-BHC	3.0 U
319-86-7	Beta-BHC	3.0 U
319-88-8	Delta-BHC	3.0 U
56-89-0	Gamma-BHC (Lindane)	3.0 U
76-44-8	Heptachlor	3.0 U
308-09-3	Aldrin	3.0 U
1034-67-3	Heptachlor Epoxide	3.0 U
959-88-8	Endosulfan I	7.0 U
69-67-1	Dieldrin	7.0 U
72-68-6	4,4'-DDE	7.0 U
72-20-8	Endrin	7.0 U
33213-68-6	Endosulfan II	7.0 U
72-64-6	4,4'-DDD	13 U
1031-67-8	Endosulfan Sulfate	13 U
50-29-3	4,4'-DDT	13 U
72-43-8	Methoxychlor	67 U
33484-70-6	Enann Ketene	NA
57-74-8	Chlordane	67 U
8001-38-2	Toxaphene	670 U
12874-11-2	Aroclor-1018	NA
11104-29-3	Aroclor-1221	NA
11141-18-6	Aroclor-1232	NA
33468-21-6	Aroclor-1242	67 U
12872-29-6	Aroclor-1248	67 U
11067-58-1	Aroclor-1254	67 U
11096-82-6	Aroclor-1260	67 U

V_i = Volume of extract injected (ul)

V_s = Volume of water extracted (ml)

W_s = Weight of sample extracted (g)

V_t = Volume of total extract (ul)

V_s = NR

or W_s = 1.5

V_t = 5000

V_i = 5

CLF 11/14/85

Form I

Prepared by: Kir

785

975

Organics Analysis Data Sheet (Page 1)

Laboratory Name: California Analytical Laboratories, Inc.
Lab Sample ID No: 21484-2
Sample Matrix: SOIL
Data Release Authorized By: PL

Case No: 21484
QC Report No: NR
Contract No: NR
Date Sample Received: 8/21/85

Volatile Compounds

Concentration: Medium
Date Extracted/Prepared: 9/17/85
Date Analyzed: 9/17/85
Conc/Dil Factor: 100 pH: NR
Percent Moisture: NR
Percent Moisture (Decanted): NR

CAS Number		ug/Kg
74-87-3	Chloroethane	2000
74-83-6	Bromoethane	200 U
75-01-6	Vinyl Chloride	200 U
75-00-3	Chloroethane	200 U
75-05-2	Methylene Chloride	800 U
67-66-1	Acetone	500 U
75-15-6	Carbon Disulfide	200 U
75-35-4	1,1-Dichloroethane	200 U
75-34-3	1,1-Dichloroethane	200 U
156-60-6	Trans-1,2-Dichloroethane	200 U
67-65-3	Chloroform	200 U
107-06-2	1,2-Dichloroethane	200 U
75-83-3	2-Butanone	500 U
71-55-6	1,1,1-Trichloroethane	200 U
56-23-6	Carbon Tetrachloride	200 U
108-05-4	Vinyl Acetate	1000 U
75-27-4	Bromodichloromethane	200 U

CAS Number		ug/Kg
75-87-5	1,2-Dichloropropane	200 U
10061-02-6	Trans-1,3-Dichloropropane	200 U
75-01-6	Trichloroethane	200 U
124-48-1	Dibromochloromethane	200 U
75-05-6	1,1,2-Trichloroethane	200 U
71-43-2	Benzene	200 U
10061-01-8	cis-1,3-Dichloropropane	200 U
110-73-8	2-Chloroethylvinyl ether	1000 U
75-25-2	Bromobenzene	200 U
108-10-1	4-Methyl-2-Pentanone	500 U
391-78-4	2-Hexanone	500 U
127-18-4	Tetrachloroethane	200 U
75-34-6	1,1,2,2-Tetrachloroethane	200 U
106-58-3	Toluene	200 U
106-60-7	Chlorobenzene	200 U
100-41-4	Ethylbenzene	500 U
100-42-6	Styrene	200 U
	Total Xylenes	200 U

Data Report: g Qualifiers

For reporting results to EPA, the following results qualifiers are used.
Appropriate flags or footnotes explaining results are encouraged. However, the definition of each flag must be explicit.

- Value: If the result is a value greater than or equal to the detection limit, report the value.
- U: Indicates compound was analyzed for but not detected. Report the minimum detection limit for the sample with the U (e.g. 10U) based on necessary concentration dilution factors. (This is not necessarily the instrument detection limit.) The footnote should read: U - Compound was analyzed for but not detected. The number is the minimum achievable detection limit for the sample.
- J: Indicates an estimated value. This flag is used either when estimating a concentration for tentatively identified compounds where a 1:1 response is assumed or when the mass spectral data indicated the presence of a compound that meets the identification criteria but the result is less than the specified detection limit (but greater than zero, i.e. 10U). If limit of detection is 10ug/l and a concentration of 3ug/l is calculated, report as 3U.

- C: This flag applies to pesticide parameters where the identification has been confirmed by GC/MS. Single component pesticides are "C" only in the final extract should be confirmed by GC/MS.
- B: This flag is used when the analyte is found in the blank as well as a sample. It indicates possible pesticide contamination and warns the data user to take appropriate action.
- Other: Other specific flags and footnotes may be required to properly define the results. If used, they must be fully described and such description attached to the data summary report.
- NA: Not Analyzed.
- R: See cover letter.
- NR: Not Required.
- S: Spiked Compounds.

CLF: 11/14/85

Form I

Prepared by: PL

10/85

Organics Analysis Data Sheet (Page 2)

Semivolatile Compounds

Concentration: Low
Date Extracted/Prepared: 8/27/85
Date Analyzed: 9/11/85
Conc/Dil Factor: 230/ML

GPC Cleanup: NO
Separatory Funnel Extraction: YES
Continuous Liquid - Liquid Extraction: NO

CAS Number		ug/Kg
105-85-2	Phenol	200 U
111-44-4	bis(2-Chloroethyl)Ether	200 U
95-57-8	2-Chlorophenol	200 U
541-73-1	1,3-Dichlorobenzene	200 U
106-46-7	1,4-Dichlorobenzene	200 U
100-51-6	Benzyl Alcohol	200 U
95-60-1	1,2-Dichlorobenzene	200 U
95-48-7	3-Methylphenol	200 U
79838-32-9	bis(2-chloroisopropyl)Ether	400 U
105-64-6	4-Methylphenol	200 U
621-64-7	N-Nitroso-Di-n-Propylamine	200 U
67-72-1	Hexachlorobenzene	200 U
95-45-3	Nitrobenzene	200 U
78-38-1	Isophenol	200 U
85-75-8	2-Nitrophenol	400 U
105-87-9	2,4-Dimethylphenol	200 U
65-85-0	Benzole Acid	1000 U
111-91-1	bis(2-Chloroethoxy)Methane	400 U
120-82-2	2,4-Dichlorophenol	200 U
120-82-1	1,2,4-Trichlorobenzene	200 U
91-20-3	Naphthalene	200 U
105-47-8	4-Chloraniline	200 U
87-68-3	Hexachlorocyclopentadiene	200 U
58-50-7	4-Chloro-3-Methylphenol	200 U
91-57-4	2-Methylnaphthalene	200 U
77-47-4	Hexachlorocyclopentadiene	200 U
68-08-2	2,6,6-Trichlorophenol	200 U
95-85-4	2,4,5-Trichlorophenol	1000 U
91-58-7	2-Chloronaphthalene	200 U
68-74-4	2-Nitroaniline	1000 U
131-11-3	Dimethyl Phthalate	200 U
205-98-8	Aroclor 1248	200 U
78-06-2	3-Nitroaniline	1000 U

CAS Number		ug/Kg
83-32-9	Acenaphthene	200 U
91-38-6	2,4-Dinitrophenol	1000 U
105-03-7	4-Nitrophenol	1000 U
133-64-9	Dibenzofuran	200 U
121-14-2	2,4-Dinitrotoluene	400 U
605-20-2	2,5-Dinitrotoluene	400 U
64-66-2	Dibenzophthalate	200 U
7055-72-3	4-Chlorophenyl-phenylether	200 U
85-73-7	Phenol	200 U
105-01-4	4-Nitroaniline	1000 U
534-82-1	4,5-Dinitro-2-Methylphenol	400 U
85-30-6	N-Nitrosodiphenylamine(1)	200 U
101-63-3	4-Bromophenyl-phenylether	200 U
118-76-1	Hexachlorobenzene	200 U
87-86-6	Pentachlorophenol	200 U
85-01-6	Phenanthrene	200 U
120-12-7	Anthracene	200 U
84-74-2	Di-n-Butylphthalate	200 U
208-44-0	Fluoranthene	200 U
129-00-0	Pyrene	200 U
85-48-7	Butylbenzylphthalate	200 U
91-94-1	3,7-Dichlorobenzidine	400 U
56-45-3	Benz(a)Anthracene	200 U
117-61-7	Hex(2-Ethylhexyl)Phthalate	200 U
218-01-8	Chrysene	400 U
117-84-0	Di-n-Octyl Phthalate	200 U
205-99-2	Benz(b)Fluoranthene	400 U
207-08-8	Benz(k)Fluoranthene	400 U
50-32-6	Benz(a)Pyrene	400 U
193-39-6	Indene(1,2,3-cd)Pyrene	400 U
53-70-3	Dibenz(a,h)Anthracene	400 U
191-24-2	Benz(g,h,i)Perylene	400 U

(1) - Cannot be separated from diphenylamine

523

Organics Analysis Data Sheet (Page 3)

Pesticide/PCBs

Concentration: LOW GPC Cleanup: NO
Date Extracted/Prepared: 3/27/85 Separatory Funnel Extraction: YES
Date Analyzed: 3/18/85 Continuous Liquid - Liquid Extraction: NO
Conc/Dil Factor: 1.5G/5ML

CAS Number		ug/Kg
319-84-6	Alpha-BHC	1.0 U
319-86-7	Beta-BHC	1.0 U
319-88-8	Delta-BHC	1.0 U
58-88-6	Gamma-BHC (Lincane)	1.0 U
78-44-8	Heptachlor	1.0 U
308-09-2	Aldrin	1.0 U
1024-67-3	Heptachlor Epoxide	1.0 U
959-89-8	Endosulfan I	7.0 U
89-67-1	Dieldrin	7.0 U
73-66-6	4,4'-DDE	7.0 U
73-20-8	Endrin	7.0 U
33213-45-0	Endosulfan II	7.0 U
73-64-4	4,4'-DDD	13 U
1021-67-0	Endosulfan Sulfate	13 U
50-29-3	4,4'-DDT	13 U
72-43-8	Methoxychlor	67 U
33484-70-8	Endrin Ketone	NA
57-74-8	Chlordane	67 U
8001-35-2	Toxaphene	670 U
12874-11-2	Aroclor-1018	NA
11104-25-2	Aroclor-1221	NA
11141-16-6	Aroclor-1232	NA
53488-31-8	Aroclor-1242	67 U
12872-29-4	Aroclor-1248	67 U
11097-60-1	Aroclor-1254	67 U
11096-82-6	Aroclor-1260	67 U

V_i = Volume of extract injected (ul)

V_s = Volume of water extracted (ml)

W_s = Weight of sample extracted (g)

V_t = Volume of total extract (ul)

V_s = NR

or W_s = 1.5

V_t = 5000

V_i = 5

324

Organics Analysis Data Sheet (Page 1)

Laboratory Name: California Analytical Laboratories, Inc.

Case No: 21591

Lab Sample ID No: 21591MR

QC Report No: NR

Sample Matrix: SOIL

Contract No: NR

Date Release Authorized By: [Signature]

Date Sample Received: 8/29/85

Volatile Compounds

Concentration: LOW

Date Extracted/Prepared: NR

Date Analyzed: NR

Conc/Oil Factor: NR pH: NR

Percent Moisture: NR

Percent Moisture (Decanted): NR

CAS Number		ug/Kg
74-87-3	Chloromethane	NR
74-83-8	Bromomethane	NR
75-01-4	Vinyl Chloride	NR
75-00-3	Chloroethane	NR
75-01-3	Methylene Chloride	NR
64-17-1	Acetone	NR
75-15-0	Carbon Disulfide	NR
75-15-4	1,1-Dichloroethane	NR
75-34-2	1,1-Dichloroethane	NR
106-60-4	Trans-1,2-Dichloroethane	NR
67-66-3	Chloroform	NR
107-06-2	1,2-Dichloroethane	NR
78-03-3	2-Butanone	NR
71-55-6	1,1,1-Trichloroethane	NR
55-23-5	Carbon Tetrachloride	NR
105-05-4	Vinyl Acetate	NR
75-27-4	Bromodichloromethane	NR

CAS Number		ug/Kg
75-87-4	1,2-Dichloropropane	NR
10661-08-6	Trans-1,2-Dichloropropane	NR
75-01-6	Trichloroethane	NR
124-48-1	Dibromochloromethane	NR
75-05-6	1,1,2-Trichloroethane	NR
71-43-2	Benzene	NR
10661-01-8	cis-1,2-Dichloropropane	NR
116-76-6	2-Chloroethylvinyl ether	NR
75-25-2	Bromobenzene	NR
105-10-1	4-Methyl-2-Pentanone	NR
891-78-6	3-Hexanone	NR
127-18-4	Tetrahydrofuran	NR
75-24-6	1,1,2,2-Tetrachloroethane	NR
105-68-3	Toluene	NR
105-60-7	Chlorobenzene	NR
105-41-4	Ethylbenzene	NR
105-42-6	Styrene	NR
	Total Xylenes	NR

Data Reporting Qualifiers

For reporting results to EPA, the following results qualifiers are used. Additional flags or footnotes explaining results are encouraged. However, the definition of each flag must be explicit.

Value If the result is a value greater than or equal to the detection limit, report the value.

U Indicates compound was analyzed for but not detected. Report the minimum detection limit for the sample with the U (e.g. 10U) based on necessary concentration/dilution actions. (This is not necessarily the instrument detection limit.) The footnote should read: U - Compound was analyzed for but not detected. The number is the minimum attainable detection limit for the sample.

J Indicates an estimated value. This flag is used either when estimating a concentration for tentatively identified compounds where a 1:1 response is assumed or when the mass spectral data indicated the presence of a compound that meets the identification criteria but the result is less than the specified detection limit but greater than zero. (e.g. 10U). If limit of detection is 10ug/l and a concentration of 3ug/l is calculated, report as 3U.

C This flag applies to pesticide parameters where the identification has been confirmed by GC/MS. Single component pesticides >= 10ug/l in the final extract should be confirmed by GC/MS.

B This flag is used when the analyte is found in the blank as well as a sample. It indicates possible/probable blank contamination and warns the data user to use appropriate action.

Other Other specific flags and footnotes may be required to properly define the results. If used, they must be fully described and such description attached to the data summary report.

NA Not Analyzed
S See cover letter
NR Not Required
S Spiked Compounds

Organics Analysis Data Sheet (Page 2)

Semivolatile Compounds

Concentration: LOW
Date Extracted/Prepared: 8/27/85
Date Analyzed: 4/1/88
Conc/Dil Factor: 29G/0.5ML

GPC Cleanup: NO
Separatory Funnel Extraction: YES
Continuous Liquid - Liquid Extraction: NO

CAS Number		ug/Kg
105-65-2	Phenol	100 U
111-46-6	bis(2-Chloroethyl)Ether	100 U
95-67-6	2-Chlorophenol	100 U
941-73-1	1,2-Dichlorobenzene	100 U
105-65-7	1,4-Dichlorobenzene	100 U
100-61-6	Benzyl Alcohol	100 U
95-65-1	1,2-Dichlorobenzene	100 U
95-65-7	2-Methylphenol	100 U
3958-32-4	bis(2-Chloroethyl)Ether	200 U
105-64-6	4-Methylphenol	100 U
621-64-7	N-Methyl-O-m-Propylamine	100 U
67-72-1	Mesitylene	100 U
95-65-3	Nitrobenzene	100 U
75-65-1	Isophenol	100 U
95-75-6	2-Nitrophenol	200 U
105-67-9	2,4-Dimethylphenol	100 U
65-65-9	Benzoic Acid	500 U
111-91-1	bis(2-Chloroethyl)Methane	200 U
130-63-2	2,4-Dichlorophenol	100 U
130-63-1	1,2,4-Trichlorobenzene	100 U
91-70-3	Naphthalene	100 U
105-67-8	4-Chloroaniline	100 U
87-62-3	Mesitylene	100 U
88-50-7	4-Chloro-3-Methylphenol	100 U
91-57-6	2-Methylnaphthalene	100 U
77-47-4	Mesitylene	100 U
95-65-2	2,4,6-Trichlorophenol	100 U
5-65-4	2,4,5-Trichlorophenol	5
1-23-7	2-Chloronaphthalene	100 U
88-76-4	2-Nitroaniline	500 U
131-11-3	Dibutyl Phthalate	100 U
205-65-6	Acenaphthylene	100 U
95-65-2	2-Nitroaniline	500 U

CAS Number		ug/Kg
83-32-6	Acenaphthene	100 U
51-28-6	2,4-Dinitrophenol	500 U
2000-02-7	4-Nitrophenol	500 U
132-64-9	Dibenzofuran	100 U
121-14-2	2,4-Dinitrotoluene	200 U
806-20-2	2,5-Dinitrotoluene	200 U
84-66-2	Dibutylphthalate	100 U
708-77-3	4-Chlorophenyl phenylether	100 U
85-72-7	Fluorene	100 U
2000-01-4	4-Nitroaniline	500 U
534-33-1	4,6-Dinitro-2-Methylphenol	200 U
85-30-6	N-Nitrosodiphenylamine(1)	100 U
101-43-3	4-Bromophenyl phenylether	100 U
118-76-1	Mesitylene	100 U
87-65-6	Pentachlorophenol	500 U
85-01-6	Phenanthrene	100 U
120-12-7	Anthracene	100 U
84-74-2	Di-n-Butylphthalate	100 U
205-64-0	Fluoranthene	100 U
129-60-0	Pyrene	100 U
88-62-7	Bis(2-benzoyl)phthalate	100 U
91-84-1	2,3-Dichlorobenzidine	200 U
56-43-3	Benzos(1)Anthracene	100 U
117-81-7	bis(2-Ethylhexyl)Phthalate	100 U
218-91-9	Chrysene	200 U
117-84-6	Di-n-Octyl Phthalate	100 U
205-65-2	Benzos(2)Fluoranthene	200 U
207-08-9	Benzos(1)Fluoranthene	200 U
50-32-6	Benzos(1)Pyrene	200 U
153-36-5	Indeno(1,2,3-cd)Pyrene	200 U
53-70-3	Dibenz(a,h)Anthracene	200 U
191-24-2	Benzos(a,h)Perylene	200 U

(1) - Cannot be separated from diononylamine

LABORATORY INSTRUMENT DETECTION LIMITS
Organics Analysis Data Sheet
 (Page 1)

Laboratory Name: California Analytical Laboratories, Inc.

Case No: E616

Sample ID No: _____

QC Report No: _____

Sample Matrix: _____

Contract No: 88-01-6958, 88-01-6963, 88-01-7140, 88-01-7167

Date Release Authorized By: _____

Date Sample Received: _____

Volatile Compounds

Concentration: _____

Date Extracted/Prepared: _____

Date Analyzed: _____

Conc/Dil Factor: _____

Percent Moisture: _____

Percent Moisture (Decanted): _____

CAS Number		MDL
74-87-3	Chloromethane	48
74-83-6	Bromomethane	22
75-01-4	Vinyl Chloride	23
75-05-2	Chloroethane	19
75-08-2	Methylene Chloride	8.8
67-66-1	Axetone	8.5
74-82-8	Carbon Disulfide	7.4
106-88-3	1,1-Dichloroethane	7.3
106-88-3	1,1-Dichloroethane	8.7
126-45-4	Trans-1,2-Dichloroethane	7.5
67-66-3	Chloroform	7.7
107-06-3	1,2-Dichloroethane	16
75-05-3	2-Butanone	4.8
71-43-4	1,1,1-Trichloroethane	6.0
85-29-3	Carbon Tetrachloride	4.1
105-05-4	Vinyl Acetate	4.1
75-27-4	Bromochloromethane	2.3

CAS Number		MDL
75-07-4	1,2-Dichloropropane	8.1
10681-49-4	Trans-1,3-Dichloropropane	8.3
75-01-6	Trichloroethane	4.6
126-45-1	Dibromochloromethane	2.1
75-05-4	1,1,2-Trichloroethane	4.6
71-43-2	Benzene	6.8
10681-49-4	cis-1,3-Dichloropropane	8.2
119-79-6	2-Chloroethylvinyl ether	3.1
75-28-2	Bromotoluene	2.4
105-10-1	4-Methyl-2-Pentanone	8.7
891-79-6	2-Heptanone	10
127-18-4	Tetrahydrofuran	4.9
75-34-4	1,1,2,2-Tetrachloroethane	6.9
105-05-3	Toluene	4.8
105-05-7	Chlorobenzene	2.7
105-01-4	Ethylbenzene	2.1
105-02-6	Styrene	3.3
	Total Xylenes	2.9

Data Reporting Qualifiers

For reporting results to EPA, the following results qualifiers are used. Additional flags or footnotes explaining results are encouraged. However, the definition of each flag must be explicit.

Value If the result is a value greater than or equal to the detection limit, report the value.

U Indicates compound was analyzed for but not detected. Report the minimum detection limit for the sample with the U (e.g. 10UL) based on necessary concentration/dilution factors. (This is not necessarily the instrument detection limit.) The footnote should read: U - Compound was analyzed for but not detected. The number is the minimum detectable detection limit for the sample.

J Indicates an estimated value. This flag is used either when estimating a concentration for tentatively identified compounds where a 1:1 response is assumed or when the mass spectral data indicated the presence of a compound that meets the verification criteria but the result is less than the specified detection limit but greater than zero (e.g. 10UL). If limit of detection is 10ug/L and a concentration of 3ug/L is calculated, report as 3J.

C This flag applies to pesticide parameters where the identification has been confirmed by GC/MS. Single compound pesticides $\geq 10\mu\text{g/L}$ in the final extract should be confirmed by GC/MS.

B This flag is used when the analyte is found in the blank as well as a sample. It indicates possible/possible blank contamination and warns the data user to take appropriate action.

Other Other specific flags and footnotes may be required to properly define the results. If used, they must be fully described and such description attached to the data summary report.

NA Not Analyzed.
R See cover letter.
NR Not Required.
S Spiked Compound.

LABORATORY INSTRUMENT DETECTION LIMITS
Organics Analysis Data Sheet
(Page 2)

Semivolatile Compounds

Concentration: _____
Date Extracted/Prepared: _____
Date Analyzed: _____
Conc/Dil Factor: _____

GPC Cleanup: _____
Secondary Funnel Extraction: _____
Continuous Liquid - Liquid Extraction: _____

CAS Number	MS	MS
105-85-2	Phenol	5.1
111-44-4	Methyl-2-Chlorophenyl Ether	1.7
95-57-5	2-Chlorophenol	4.5
841-73-1	1,2-Dichlorobenzene	0.88
105-85-2	1,4-Dichlorobenzene	1.9
106-91-4	Benzyl Alcohol	7.8
106-91-4	1,2-Dichlorobenzene	1.8
6-7	2-Methylphenol	2.3
20538-32-8	Methyl-2-chlorophenyl Ether	3.8
105-85-2	4-Methylphenol	4.3
621-64-7	N-Methyl-2-pyrrolidone	6.0
87-73-1	Hexachlorocyclopentadiene	2.9
78-08-3	Nitrobenzene	3.0
78-08-3	Isophenol	2.1
88-75-5	2-Methylphenol	5.2
105-87-9	2,4-Dimethylphenol	1.8
85-36-8	Benzoic Acid	12
111-91-1	Methyl-3-Chlorophenyl Ether	2.5
120-82-2	2,4-Dichlorophenol	2.3
120-82-1	1,2,4-Trichlorobenzene	2.3
91-79-3	Naphthalene	4.4
105-87-8	4-Chlorophenol	5.3
67-68-3	Hexachlorocyclopentadiene	2.9
88-80-7	4-Chloro-2-Methylphenol	3.0
91-87-4	2-Methylphenol	2.7
77-47-4	Hexachlorocyclopentadiene	7.2
88-06-2	2,4,6-Trichlorophenol	10
88-06-4	2,4,6-Trichlorophenol	3.7
10-7	2-Chlorophenol	1.3
10-4	2-Nitrophenol	5.9
111-44-4	Chlorophenol	2.2
205-85-8	Acetophenone	0.57
88-06-2	2-Nitrophenol	10

CAS Number	MS	MS
85-84-8	Acetophenone	2.3
91-88-8	2,4-Dichlorophenol	6.7
105-85-2	4-Methylphenol	7.5
122-64-8	Chlorophenol	2.3
121-14-2	2,4-Dichlorobenzene	3.2
88-06-2	2,4-Dichlorophenol	2.8
84-88-2	Chlorophenol	2.9
105-73-3	4-Chlorophenyl phenyl ether	3.5
83-73-7	Fluorene	2.1
100-91-4	4-Nitrophenol	4.3
834-52-1	4,6-Dichloro-2-Methylphenol	6.2
85-36-8	N-Methyl-2-pyrrolidone	4.1
101-85-3	4-Bromophenyl phenyl ether	3.8
115-75-1	Hexachlorocyclopentadiene	24
87-68-3	Hexachlorocyclopentadiene	6.8
84-01-8	Phenanthrene	2.3
128-12-7	Anthracene	2.8
84-74-2	2-Methylphenol	0.78
205-84-8	Fluorene	1.4
128-00-8	Pyrene	2.3
85-84-8	Benzophenone	0.9
91-84-1	2,3-Dichlorophenol	0.9
85-84-2	Benzophenone	7.3
117-91-7	Methyl-2-Nitrophenyl Ether	2.1
218-01-0	Chrysene	8.5
117-44-9	2-Nitrophenol	6.3
205-85-2	Benzophenone	9.4
207-08-8	Benzophenone	9.4
88-32-4	Benzophenone	4.8
105-79-6	Isophenol (1,2,3-trichlorophenol)	4.7
83-70-3	2,3-Dichlorophenol	6.2
191-24-2	Benzophenone	6.7

(1) - Cannot be separated from diphenylamine

LABORATORY INSTRUMENT DETECTION LIMITS
Organics Analysis Data Sheet
 (Page 3)

Pesticide/PCBs

Concentration: _____
 Date Extracted/Prepared: _____
 Date Analyzed: _____
 Cone/Oil Factor: _____

GPC Cleanup: _____
 Separatory Funnel Extraction: _____
 Continuous Liquid - Liquid Extraction: _____

CAS Number		MS
319-84-6	Alpha-BHC	1
319-85-7	Beta-BHC	1
319-86-8	Gamma-BHC	1
88-89-4	Gamma-BHC (Lindane)	1
75-44-4	Heptachlor	1
289-88-2	Aldrin	1
1884-37-3	Heptachlor Epoxide	1
88-89-4	Endosulfan I	2
88-87-1	Endosulfan	2
75-88-4	4,4'-DDE	2
75-32-4	Endrin	2
23213-88-6	Endosulfan II	2
75-84-4	4,4'-DDD	4
1881-47-3	Endosulfan Sulfate	4
88-38-2	4,4'-DDT	4
75-43-4	Methoxychlor	20
23434-70-8	Endrin Ketone	4
57-74-4	Chlordane	20
8007-36-2	Toxaphene	200
12876-11-8	Aroclor-1216	20
11184-28-3	Aroclor-1221	20
11141-16-8	Aroclor-1232	20
83453-21-8	Aroclor-1242	20
12873-35-8	Aroclor-1248	20
11087-49-1	Aroclor-1254	20
11086-82-6	Aroclor-1260	20

V_i = Volume of extract injected (ul)

V_g = Volume of water extracted (ml)

W_g = Weight of sample extracted (g)

V_t = Volume of total extract (ul)

$V_g =$

or $W_g = NR$

$V_t =$

$V_i =$

IT-NCBC-R1-01

MODIFIED PRIORITY POLLUTANT LIST
(EG & G Subcontract No. C85-130761-KAM-177-85)
INORGANIC ANALYSIS SHEET

LAB NAME: CALIF. ANAL. LAB.

CASE NO: 21349

SOW NO.: 784

QC RPT. # 21349

LAB SAMPLE NO.: 21349-1

DATE: 3-12-76

ELEMENTS IDENTIFIED AND MEASURED

MATRIX: SOIL

UNITS: MG/KG
DRY WEIGHT

ELEMENTS..METHOD

2. ANTIMONY....P	<30	R
3. ARSENIC....P	6.0	*
5. BERYLLIUM...P	<0.30	
6. CADMIUM....P	<0.30	
8. CHROMIUM....P	7.0	*
10. COPPER.....P	2.4	
12. LEAD.....P	2.4	
15. MERCURY....CV	<0.10	
16. NICKEL.....P	2.1	
18. SELENIUM....P	<0.30	
19. SILVER.....P	<0.50	R
21. THALLIUM....F	<0.50	R
24. ZINC.....P	12.4	
25. CYANIDE.....C	<0.50	

COMMENTS:

ICP Interelement and background corrections applied? Yes.

AA corrections consist of Zeeman effect background correction on Perkin-Elmer 3030 instruments and correction of background absorption by D2 lamp on Varian 875 instruments. Corrections are applied before generation of raw data.

FOOTNOTES:

NR - not required by contract at this time

Value - If the result is a value greater than or equal to the instrument detection limit but less than the contract required detection limit, report the value in brackets (ie. [10]).
Indicate the analytical method used with P (for ICP/Flame AA), F (for furnace), or CV (for cold vapor).

- U - Indicates element was analyzed for but not detected. Report with the detection limit value (e.g., <10U).
- E - Indicates a value estimated or not reported due to the presence of interference. Explanatory note included on cover page.
- S - Indicates value determined by Method of Standard Addition.
- R - Indicates spike sample recovery is not within control limits.
- * - Indicates duplicate analysis is not within control limits.
- + - Indicates the correlation coefficient for method of standard addition is less than 0.995.

1969

FORM V

SPIKE SAMPLE RECOVERY

LAB NAME: CALIF. ANAL. LABS.

EG & G ID

17-NCBC-R1-01

DATE: 3-19-86
MATRIX: SOIL

UNITS: ppb

COMPOUNDS METALS:	CONTROL LIMIT % R	SPIKED SAMPLE RESULT (SSR)	SAMPLE RESULT (SR)	SPIKED ADDED (SA)	% R
ELEMENTS..METHOD					
2. ANTIMONY....P	75 TO 125	57.4	<20	200	29 R
3. ARSENIC....P	75 TO 125	410	114	300	114
5. BERYLLIUM...P	75 TO 125	42.7	<20	100	34
6. CADMIUM....P	75 TO 125	43.7	<20	100	63
8. CHROMIUM....P	75 TO 125	493	140	400	26
10. COPPER.....P	75 TO 125	281	47	250	83
12. LEAD.....P	75 TO 125	1410	480	1000	97
15. MERCURY....CV	75 TO 125	NIR	NIR	-	-
16. NICKEL.....P	75 TO 125	255	41	250	86
18. SELENIUM....P	75 TO 125	50	<20	50	100
19. SILVER.....P	75 TO 125	52.2	<20	100	52 R
21. THALLIUM....F	75 TO 125	31.7	<20	50	64 R
24. ZINC.....P	75 TO 125	7500	2480	5000	94
25. CYANIDE.....C	75 TO 125	NIR	NIR	-	-

COMMENTS:

1974

DUPLICATE SAMPLE RECOVERY

LAB NAME: CALIF. ANAL. LABS.

EG & G ID NO.:

IT-NCBC-R1-01

DATE: 3-19-86
MATRIX: SOIL

UNITS: ppb

COMPOUNDS
METALS:CONTROL SAMPLE(S) DUPLICATES(D)
LIMIT

RPD

ELEMENTS..METHOD
 2. ANTIMONY....P
 3. ARSENIC.....P
 5. BERYLLIUM...P
 6. CADMIUM.....P
 8. CHROMIUM....P
 10. COPPER.....P
 12. LEAD.....P
 13. MERCURY....CV
 16. NICKEL.....P
 18. SELENIUM....P
 19. SILVER.....P
 21. THALLIUM....P
 24. ZINC.....P
 25. CYANIDE.....C

<20	<20	0
119	1161	30 *
<20	<20	0
<20	<20	0
140	145	33 *
48	51.3	5.6
480	572	14
NIR	NIR	—
41	38.8	5.5
<20	<20	0
<20	<20	0
<20	<20	0
2480	2560	3.2
NIR	NIR	—

COMMENTS:

1975

IT-NCBC-R2-01

MODIFIED PRIORITY POLLUTANT LIST
(EG & G Subcontract No. C85-130761-KAM-177-85)
INORGANIC ANALYSIS SHEET

LAB NAME: CALIF. ANAL. LAB.

CASE NO: 21349

SOW NO.: 784

QC RPT. # 21349

LAB SAMPLE NO.: 21349-2

DATE: 2-14-86

ELEMENTS IDENTIFIED AND MEASURED

MATRIX: SOIL

UNITS: MG/KG
DRY WEIGHT

ELEMENTS..METHOD

2. ANTIMONY....P	<30	R
3. ARSENIC.....P	44	*
5. BERYLLIUM...P	<1.30	
6. CADMIUM.....P	<0.30	
8. CHROMIUM....P	11	*
10. COPPER.....P	3.2	
12. LEAD.....P	28	
15. MERCURY....CV	20.10	
16. NICKEL.....P	3.5	
18. SELENIUM....P	<0.30	
19. SILVER.....P	<0.20	R
21. THALLIUM....F	<0.50	R
24. ZINC.....P	115	
25. CYANIDE.....C	<0.50	

COMMENTS:

ICP Interelement and background corrections applied? Yes.

AA corrections consist of Zeeman effect background correction on Perkin-Elmer 3030 instruments and correction of background absorption by D2 lamp on Varian 875 instruments. Corrections are applied before generation of raw data.

FOOTNOTES:

NR - not required by contract at this time

Value - If the result is a value greater than or equal to the instrument detection limit but less than the contract required detection limit, report the value in brackets (ie. [10]).

Indicate the analytical method used with P (for ICP/Flame AA), F (for furnace), or CV (for cold vapor).

U - Indicates element was analyzed for but not detected. Report with the detection limit value (e.g., <100).

E - Indicates a value estimated or not reported due to the presence of interference. Explanatory note included on cover page.

S - Indicates value determined by Method of Standard Addition.

R - Indicates spike sample recovery is not within control limits.

* - Indicates duplicate analysis is not within control limits.

+ - Indicates the correlation coefficient for method of standard addition is less than 0.995.

1970

17-NCBC-R3-01

MODIFIED PRIORITY POLLUTANT LIST
(EG & G Subcontract No. C85-130761-KAM-177-85)
INORGANIC ANALYSIS SHEET

LAB NAME: CALIF. ANAL. LAB.
SOW NO.: 784
LAB SAMPLE NO.: 21349-A

CASE NO: 21349
QC RPT. # 21349
DATE: 3-14-86

ELEMENTS IDENTIFIED AND MEASURED

MATRIX: SOIL

UNITS: MG/KG
DRY WEIGHT

ELEMENTS..METHOD
2. ANTIMONY....P
3. ARSENIC.....P
5. BERYLLIUM...P
6. CADMIUM.....P
8. CHROMIUM....P
10. COPPER.....P
12. LEAD.....P
15. MERCURY....CV
16. NICKEL.....P
18. SELENIUM....P
19. SILVER.....P
21. THALLIUM....F
24. ZINC.....P
25. CYANIDE.....C

<30 R
11 *
<0.30
<0.50
10 *
2.9
26
2.1 = 2.1
3
<0.30
<0.50 R
<0.50 R
118
<0.50

COMMENTS:

ICP Interelement and background corrections applied? Yes.

AA corrections consist of Zeeman effect background correction on Perkin-Elmer 3030 instruments and correction of background absorption by D2 lamp on Varian 875 instruments. Corrections are applied before generation of raw data.

FOOTNOTES:

NR - not required by contract at this time

Value - If the result is a value greater than or equal to the instrument detection limit but less than the contract required detection limit, report the value in brackets (ie. [10]).

Indicate the analytical method used with P (for ICP/Flame AA), F (for furnace), or CV (for cold vapor).

U - Indicates element was analyzed for but not detected. Report with the detection limit value (e.g., <10U).

E - Indicates a value estimated or not reported due to the presence of interference. Explanatory note included on cover page.

S - Indicates value determined by Method of Standard Addition.

R - Indicates spike sample recovery is not within control limits.

* - Indicates duplicate analysis is not within control limits.

+ - Indicates the correlation coefficient for method of standard addition is less than 0.995.

1971

IT-NCBC-R4-01

MODIFIED PRIORITY POLLUTANT LIST
(EG & G Subcontract No. C85-130761-KAM-177-85)
INORGANIC ANALYSIS SHEET

LAB NAME: CALIF. ANAL. LAB. CASE NO: 21349
SOW NO.: 784 QC RPT. # 21349
LAB SAMPLE NO.: 21340-5 DATE: 3-14-81

ELEMENTS IDENTIFIED AND MEASURED

MATRIX: SoilUNITS: MG/KG
DRY WEIGHT

ELEMENTS..METHOD

2. ANTIMONY....P	<u><3.0</u>	R
3. ARSENIC....P	<u>4.3</u>	*
5. BERYLLIUM...P	<u><0.30</u>	
6. CADMIUM....P	<u><0.30</u>	
8. CHROMIUM....P	<u>10</u>	*
10. COPPER.....P	<u>3</u>	
12. LEAD.....P	<u>27</u>	
15. MERCURY....CV	<u><0.10</u>	
16. NICKEL.....P	<u>2.3</u>	
18. SELENIUM....P	<u><0.30</u>	
19. SILVER.....P	<u><0.50</u>	R
21. THALLIUM....P	<u><0.50</u>	R
24. ZINC.....P	<u>127</u>	
25. CYANIDE.....C	<u><0.50</u>	

COMMENTS:

ICP Interelement and background corrections applied? Yes.

AA corrections consist of Zeeman effect background correction on Perkin-Elmer 3030 instruments and correction of background absorption by D2 lamp on Varian 875 instruments. Corrections are applied before generation of raw data.

FOOTNOTES:

NR - not required by contract at this time

Value - If the result is a value greater than or equal to the instrument detection limit but less than the contract required detection limit, report the value in brackets (ie. [10]).
Indicate the analytical method used with P (for ICP/Flame AA), F (for furnace), or CV (for cold vapor).

U - Indicates element was analyzed for but not detected. Report with the detection limit value (e.g., <10U).

E - Indicates a value estimated or not reported due to the presence of interference. Explanatory note included on cover page.

S - Indicates value determined by Method of Standard Addition.

R - Indicates spike sample recovery is not within control limits.

* - Indicates duplicate analysis is not within control limits.

+ - Indicates the correlation coefficient for method of standard addition is less than 0.995.

1972

17-NCBC-R5-01

MODIFIED PRIORITY POLLUTANT LIST
(EG & G Subcontract No. C85-130761-KAM-177-85)
INORGANIC ANALYSIS SHEET

LAB NAME: CALIF. ANAL. LAB.

CASE NO: 21349

SOW NO.: 784

QC RPT. # 21349

LAB SAMPLE NO.: 21349-6

DATE: 2-19-86

ELEMENTS IDENTIFIED AND MEASURED

MATRIX: Soil

UNITS: MG/KG
DRY WEIGHT

ELEMENTS..METHOD

2. ANTIMONY....P	<30	R
3. ARSENIC.....P	8.6	*
5. BERYLLIUM....P	<0.30	
6. CADMIUM.....P	<0.30	
8. CHROMIUM....P	41	*
10. COPPER.....P	2.7	
12. LEAD.....P	24	
15. MERCURY....CV	<0.10	
16. NICKEL.....P	2.5	
18. SELENIUM....P	<0.30	
19. SILVER.....P	<0.30	R
21. THALLIUM....F	<0.30	R
24. ZINC.....P	131	
25. CYANIDE.....C	<0.20	

COMMENTS:

ICP Interelement and background corrections applied? Yes.

AA corrections consist of Zeeman effect background correction on Perkin-Elmer 3030 instruments and correction of background absorption by D2 lamp on Varian 875 instruments. Corrections are applied before generation of raw data.

FOOTNOTES:

NR - not required by contract at this time

Value - If the result is a value greater than or equal to the instrument detection limit but less than the contract required detection limit, report the value in brackets (ie. [10]).

Indicate the analytical method used with P (for ICP/Flame AA), F (for furnace), or CV (for cold vapor).

U - Indicates element was analyzed for but not detected. Report with the detection limit value (e.g., <10U).

E - Indicates a value estimated or not reported due to the presence of interference. Explanatory note included on cover page.

S - Indicates value determined by Method of Standard Addition.

R - Indicates spike sample recovery is not within control limits.

* - Indicates duplicate analysis is not within control limits.

+ - Indicates the correlation coefficient for method of standard addition is less than 0.995.

1973

IT-NBC-R1-02

MODIFIED PRIORITY POLLUTANT LIST
(EG & G Subcontract No. C85-130761-KAM-177-85)
INORGANIC ANALYSIS SHEET

LAB NAME: CALIF. ANAL. LAB.

CASE NO: 21349

SOW NO.: 784

QC RPT. # 21349

LAB SAMPLE NO.: 21349-7

DATE: 2-10-76

ELEMENTS IDENTIFIED AND MEASURED

MATRIX: SOIL

UNITS: MG/KG
DRY WEIGHT

ELEMENTS..METHOD

2. ANTIMONY....P	<30 R
3. ARSENIC.....P	4.9
5. BERYLLIUM...P	<1.50
6. CADMIUM.....P	<0.50
8. CHROMIUM....P	4.6
10. COPPER.....P	2.9
12. LEAD.....P	2.9
15. MERCURY....CV	<0.10
16. NICKEL.....P	4.1 R
18. SELENIUM....P	<0.50 R
19. SILVER.....P	<0.50
21. THALLIUM....F	<0.50 R
24. ZINC.....P	11.5
25. CYANIDE.....C	<0.50

COMMENTS:

ICP Interelement and background corrections applied? Yes.

AA corrections consist of Zeeman effect background correction on Perkin-Elmer 3030 instruments and correction of background absorption by D2 lamp on Varian 875 instruments. Corrections are applied before generation of raw data.

FOOTNOTES:

NR - not required by contract at this time

Value - If the result is a value greater than or equal to the instrument detection limit but less than the contract required detection limit, report the value in brackets (ie. [10]). Indicate the analytical method used with P (for ICP/Flame AA), F (for furnace), or CV (for cold vapor).

U - Indicates element was analyzed for but not detected. Report with the detection limit value (e.g., <10U).

E - Indicates a value estimated or not reported due to the presence of interference. Explanatory note included on cover page.

S - Indicates value determined by Method of Standard Addition.

R - Indicates spike sample recovery is not within control limits.

* - Indicates duplicate analysis is not within control limits.

+ - Indicates the correlation coefficient for method of standard addition is less than 0.995.

1976

FORM V

SPIKE SAMPLE RECOVERY

LAB NAME: CALIF. ANAL. LABS.

EG & G ID

DATE: 3-19-86
MATRIX: SOIL

IT-NEBC-R1-02

21343-7

UNITS: ppb

COMPOUNDS METALS:	CONTROL LIMIT % R	SPIKED SAMPLE RESULT (SSR)	SAMPLE RESULT (SR)	SPIKED ADDED (SA)	% R
ELEMENTS...METHOD					
2. ANTIMONY....P	75 TO 125	46.8	<20	200	23 R
3. ARSENIC....P	75 TO 125	527	197	380	110
5. BERYLLIUM...P	75 TO 125	54.4	<20	100	64
6. CADMIUM....P	75 TO 125	67.9	<20	100	41
8. CHROMIUM....P	75 TO 125	501	192	400	77
10. COPPER.....P	75 TO 125	277	57.9	250	82
12. LEAD.....P	75 TO 125	1230	577	1020	85
15. MERCURY....CV	75 TO 125	NIR	NIR	-	-
16. NICKEL.....P	75 TO 125	229	92.6	250	11 R
18. SELENIUM....P	75 TO 125	18.3	<20	50	37 R
19. SILVER.....P	75 TO 125	74.2	<20	100	77
21. THALLIUM....P	75 TO 125	24.3	<20	50	50 R
24. ZINC.....P	75 TO 125	6370	2267	5000	52
25. CYANIDE.....C	75 TO 125	NIR	NIR	-	-

COMMENTS:

1980

FM VI

DUPLICATE SAMPLE RECOVERY

LAB NAME: CALIF. ANAL. LABS.

EG & G ID NO.:

DATE: 3-19-86
MATRIX: SOIL

IT-NCBC-R1-02

21349-7

UNITS: ppb

COMPOUNDS
METALS:

CONTROL SAMPLE(S) DUPLICATES(D)
LIMIT

RPD

ELEMENTS..METHOD			
2. ANTIMONY....P	<20	<20	0
3. ARSENIC.....P	148	180	43
5. BERYLLIUM...P	<20	<20	0
6. CADMIUM.....P	<20	<20	0
8. CHROMIUM....P	102	109	13
10. COPPER.....P	57.4	109.8	14
12. LEAD.....P	577	484	17
15. MERCURY....CV	NIR	NIR	-
16. NICKEL.....P	75.10	74.1	11
18. SELENIUM....P	<20	<20	0
19. SILVER.....P	<20	<20	0
21. THALLIUM....P	<20	<20	0
24. ZINC.....P	221.1	2270	0.03
25. CYANIDE.....C	NIR	NIR	-

COMMENTS:

1981

17-NCBC-R2-02

MODIFIED PRIORITY POLLUTANT LIST
(EG & G Subcontract No. C85-130761-KAM-177-85)
INORGANIC ANALYSIS SHEET

LAB NAME: CALIF. ANAL. LAB.
SOW NO.: 784
LAB SAMPLE NO.: 21413-5

CASE NO: 21413
QC RPT. # 21413
DATE: 3-10-86

ELEMENTS IDENTIFIED AND MEASURED

MATRIX: Soil

UNITS: MG/KG
DRY WEIGHT

ELEMENTS...METHOD

2. ANTIMONY....P
3. ARSENIC.....P
5. BERYLLIUM...P
6. CADMIUM.....P
8. CHROMIUM....P
10. COPPER.....P
12. LEAD.....P
15. MERCURY....CV
16. NICKEL.....P
18. SELENIUM....P
19. SILVER.....P
21. THALLIUM....F
24. ZINC.....P
25. CYANIDE.....C

<3.0 R
8.4
<0.30
<0.30
4.1
3.1
2.1
<0.10
4.1 R
<0.30 R
<0.50 R
<0.50 R
12.4
<0.50

COMMENTS:

ICP Interelement and background corrections applied? Yes.

AA corrections consist of Zeeman effect background correction on Perkin-Elmer 3030 instruments and correction of background absorption by D2 lamp on Varian 875 instruments. Corrections are applied before generation of raw data.

FOOTNOTES:

NR - not required by contract at this time

Value - If the result is a value greater than or equal to the instrument detection limit but less than the contract required detection limit, report the value in brackets (ie. [10]). Indicate the analytical method used with P (for ICP/Flame AA), F (for furnace), or CV (for cold vapor).

U - Indicates element was analyzed for but not detected. Report with the detection limit value (e.g., <10U).

E - Indicates a value estimated or not reported due to the presence of interference. Explanatory note included on cover page.

S - Indicates value determined by Method of Standard Addition.

R - Indicates spike sample recovery is not within control limits.

* - Indicates duplicate analysis is not within control limits.

+ - Indicates the correlation coefficient for method of standard addition is less than 0.995.

1991

IT-NCCB-R3-02

MODIFIED PRIORITY POLLUTANT LIST
(EG & G Subcontract No. C85-130761-KAM-177-85)
INORGANIC ANALYSIS SHEET

LAB NAME: CALIF. ANAL. LAB.
SOW NO.: 784
LAB SAMPLE NO.: 21413-11

CASE NO: 21413
QC RPT. # 21413
DATE: 2-14-76

ELEMENTS IDENTIFIED AND MEASURED

MATRIX: Soil

UNITS: MG/KG
DRY WEIGHT

ELEMENTS..METHOD

2. ANTIMONY....P
3. ARSENIC.....P
5. BERYLLIUM....P
6. CADMIUM.....P
8. CHROMIUM....P
10. COPPER.....P
12. LEAD.....P
15. MERCURY....CV
16. NICKEL.....P
18. SELENIUM....P
19. SILVER.....P
21. THALLIUM....F
24. ZINC.....P
25. CYANIDE.....C

<30 R
1.5
<0.30
<0.30
4.2
3.2
20
<0.10
3.4 R
<0.30 R
<0.50 R
<0.50 R
11
<30

COMMENTS:

ICP Interelement and background corrections applied? Yes.

AA corrections consist of Zeeman effect background correction on Perkin-Elmer 3030 instruments and correction of background absorption by D2 lamp on Varian 875 instruments. Corrections are applied before generation of raw data.

FOOTNOTES:

NR - not required by contract at this time

Value - If the result is a value greater than or equal to the instrument detection limit but less than the contract required detection limit, report the value in brackets (ie. [10]).

Indicate the analytical method used with P (for ICP/Flame AA), F (for furnace), or CV (for cold vapor).

U - Indicates element was analyzed for but not detected. Report with the detection limit value (e.g., <10U).

E - Indicates a value estimated or not reported due to the presence of interference. Explanatory note included on cover page.

S - Indicates value determined by Method of Standard Addition.

R - Indicates spike sample recovery is not within control limits.

* - Indicates duplicate analysis is not within control limits.

+ - Indicates the correlation coefficient for method of standard addition is less than 0.995.

1992

17-NL5C-R4-02

MODIFIED PRIORITY POLLUTANT LIST
(EG & G Subcontract No. C85-130761-KAM-177-85)
INORGANIC ANALYSIS SHEET

LAB NAME: CALIF. ANAL. LAB.

CASE NO: 21484

SOW NO.: 784

QC RPT. # 31414

LAB SAMPLE NO.: 21484-1

DATE: 3-14-86

ELEMENTS IDENTIFIED AND MEASURED

MATRIX: SOIL

UNITS: MG/KG
DRY WEIGHT

ELEMENTS..METHOD

2. ANTIMONY....P	<3.0 U R
3. ARSENIC.....P	6.4
5. BERYLLIUM...P	<0.30
6. CADMIUM.....P	<0.30
8. CHROMIUM....P	1.2
10. COPPER.....P	1.9
12. LEAD.....P	2.2
15. MERCURY....CV	<0.10
16. NICKEL.....P	3.6 R
18. SELENIUM....P	<0.30 R
19. SILVER.....P	<0.50
21. THALLIUM....F	<0.50 R
24. ZINC.....P	12.5
25. CYANIDE.....C	<0.50

COMMENTS:

ICP Interelement and background corrections applied? Yes.

AA corrections consist of Zeeman effect background correction on Perkin-Elmer 3030 instruments and correction of background absorption by D2 lamp on Varian 875 instruments. Corrections are applied before generation of raw data.

FOOTNOTES:

NR - not required by contract at this time

Value - If the result is a value greater than or equal to the instrument detection limit but less than the contract required detection limit, report the value in brackets (ie. [10]).

Indicate the analytical method used with P (for ICP/Flame AA), F (for furnace), or CV (for cold vapor).

U - Indicates element was analyzed for but not detected. Report with the detection limit value (e.g., <10U).

E - Indicates a value estimated or not reported due to the presence of interference. Explanatory note included on cover page.

S - Indicates value determined by Method of Standard Addition.

R - Indicates spike sample recovery is not within control limits.

* - Indicates duplicate analysis is not within control limits.

+ - Indicates the correlation coefficient for method of standard addition is less than 0.995.

1978

17-NC8C-R5-02

MODIFIED PRIORITY POLLUTANT LIST
(EC & G Subcontract No. C85-130761-KAM-177-85)
INORGANIC ANALYSIS SHEET

LAB NAME: CALIF. ANAL. LAB.

CASE NO: 21484

SOW NO.: 784

QC RPT. # 21484

LAB SAMPLE NO.: 21484-9

DATE: 3-14-86

ELEMENTS IDENTIFIED AND MEASURED

MATRIX: Soil

UNITS: MG/KG
DRY WEIGHT

ELEMENTS..METHOD

2. ANTIMONY....P
3. ARSENIC.....P
5. BERYLLIUM...P
6. CADMIUM.....P
8. CHROMIUM....P
10. COPPER.....P
12. LEAD.....P
15. MERCURY....CV
16. NICKEL.....P
18. SELENIUM....P
19. SILVER.....P
21. THALLIUM....F
24. ZINC.....P
25. CYANIDE.....C

430 R
10.4
20.30
20.30
7.2
3.1
2.2
20.10
2.8 R
20.30 R
20.50
20.50 R
10.7
20.50

COMMENTS:

ICP Interelement and background corrections applied? Yes.

AA corrections consist of Zeeman effect background correction on Perkin-Elmer 3030 instruments and correction of background absorption by D2 lamp on Varian 875 instruments. Corrections are applied before generation of raw data.

FOOTNOTES:

NR - not required by contract at this time

Value - If the result is a value greater than or equal to the instrument detection limit but less than the contract required detection limit, report the value in brackets (ie. [10]). Indicate the analytical method used with P (for ICP/Flame AA), F (for furnace), or CV (for cold vapor).

U - Indicates element was analyzed for but not detected. Report with the detection limit value (e.g., <10U).

E - Indicates a value estimated or not reported due to the presence of interference. Explanatory note included on cover page.

S - Indicates value determined by Method of Standard Addition.

R - Indicates spike sample recovery is not within control limits.

* - Indicates duplicate analysis is not within control limits.

+ - Indicates the correlation coefficient for method of standard addition is less than 0.995.

1979

17-NCBC-R1-04

MODIFIED PRIORITY POLLUTANT LIST
(EG & G Subcontract No. C85-130761-KAM-177-85)
INORGANIC ANALYSIS SHEET

LAB NAME: CALIF. ANAL. LAB.

CASE NO: 21413

SOW NO.: 784

QC RPT. # 21413

LAB SAMPLE NO.: 21413-1

DATE: 2-21-86

ELEMENTS IDENTIFIED AND MEASURED

MATRIX: SOLVENT

UNITS: UG/L

ELEMENTS..METHOD

2. ANTIMONY....P	<100
3. ARSENIC....P	<20
5. BERYLLIUM...P	<20
6. CADMIUM....P	<20
8. CHROMIUM....P	<240
10. COPPER.....P	600
12. LEAD.....P	<200
15. MERCURY....CV	<0.0002
16. NICKEL.....P	640
18. SELENIUM....P	<20
19. SILVER.....P	<40
21. THALLIUM....F	<20
24. ZINC.....P	<20
25. CYANIDE.....C	<500

COMMENTS:

ICP Interelement and background corrections applied? Yes.

AA corrections consist of Zeeman effect background correction on Perkin-Elmer 3030 instruments and correction of background absorption by D2 lamp on Varian 875 instruments. Corrections are applied before generation of raw data.

FOOTNOTES:

NR - not required by contract at this time

Value - If the result is a value greater than or equal to the instrument detection limit but less than the contract required detection limit, report the value in brackets (ie. [10]).

Indicate the analytical method used with P (for ICP/Flame AA), F (for furnace), or CV (for cold vapor).

U - Indicates element was analyzed for but not detected. Report with the detection limit value (e.g., <10U).

E - Indicates a value estimated or not reported due to the presence of interference. Explanatory note included on cover page.

S - Indicates value determined by Method of Standard Addition.

R - Indicates spike sample recovery is not within control limits.

* - Indicates duplicate analysis is not within control limits.

+ - Indicates the correlation coefficient for method of standard addition is less than 0.995.

1986

17-NCBC-R3-04

MODIFIED PRIORITY POLLUTANT LIST
(EG & G Subcontract No. C85-130761-KAM-177-85)
INORGANIC ANALYSIS SHEET

LAB NAME: CALIF. ANAL. LAB.

CASE NO: 21484

SOW NO.: 784

QC RPT. # 21484

LAB SAMPLE NO.: 21484-13

DATE: 3-21-86

ELEMENTS IDENTIFIED AND MEASURED

MATRIX: SOLVENT

UNITS: UG/L

ELEMENTS..METHOD

2. ANTIMONY....P	<100
3. ARSENIC.....P	<20
5. BERYLLIUM...P	<20
6. CADMIUM.....P	<20
8. CHROMIUM....P	264
10. COPPER.....P	<120
12. LEAD.....P	<250
15. MERCURY....CV	<0.0002
16. NICKEL.....P	<200
18. SELENIUM...P	<20
19. SILVER.....P	<40
21. THALLIUM...F	<20
24. ZINC.....P	174
25. CYANIDE.....C	<500

COMMENTS:

ICP Interelement and background corrections applied? Yes.

AA corrections consist of Zeeman effect background correction on Perkin-Elmer 3030 instruments and correction of background absorption by D2 lamp on Varian 875 instruments. Corrections are applied before generation of raw data.

FOOTNOTES:

NR - not required by contract at this time

Value - If the result is a value greater than or equal to the instrument detection limit but less than the contract required detection limit, report the value in brackets (ie. [10]). Indicate the analytical method used with P (for ICP/Flame AA), F (for furnace), or CV (for cold vapor).

U - Indicates element was analyzed for but not detected. Report with the detection limit value (e.g., <10U).

E - Indicates a value estimated or not reported due to the presence of interference. Explanatory note included on cover page.

S - Indicates value determined by Method of Standard Addition.

R - Indicates spike sample recovery is not within control limits.

* - Indicates duplicate analysis is not within control limits.

- - Indicates the correlation coefficient for method of standard addition is less than 0.995.

1987

17-NCBC-R1-5-06

MODIFIED PRIORITY POLLUTANT LIST
(EG & G Subcontract No. C85-130761-KAM-177-85)
INORGANIC ANALYSIS SHEET

LAB NAME: CALIF. ANAL. LAB.

CASE NO: 21484

SOW NO.: 784

QC RPT. # 31282

LAB SAMPLE NO.: 21484-1

DATE: 3-14-86

ELEMENTS IDENTIFIED AND MEASURED

MATRIX: SOIL

UNITS: MG/KG
DRY WEIGHT

ELEMENTS..METHOD

2. ANTIMONY....P	430 R
3. ARSENIC....P	26.4
5. BERYLLIUM...P	<0.30
6. CADMIUM....P	<0.30
8. CHROMIUM....P	16
10. COPPER.....P	44
12. LEAD.....P	80
15. MERCURY....CV	0.1
16. NICKEL.....P	312 R
18. SELENIUM....P	<0.30 R
19. SILVER.....P	<0.30
21. THALLIUM....F	<0.30 R
24. ZINC.....P	409
25. CYANIDE.....C	<0.30

COMMENTS:

ICP Interelement and background corrections applied? Yes.

AA corrections consist of Zeeman effect background correction on Perkin-Elmer 3030 instruments and correction of background absorption by D2 lamp on Varian 875 instruments. Corrections are applied before generation of raw data.

FOOTNOTES:

NR - not required by contract at this time

Value - If the result is a value greater than or equal to the instrument detection limit but less than the contract required detection limit, report the value in brackets (ie. [10]).
Indicate the analytical method used with P (for ICP/Flame AA), F (for furnace), or CV (for cold vapor).

U - Indicates element was analyzed for but not detected. Report with the detection limit value (e.g., <10U).

E - Indicates a value estimated or not reported due to the presence of interference. Explanatory note included on cover page.

S - Indicates value determined by Method of Standard Addition.

R - Indicates spike sample recovery is not within control limits.

* - Indicates duplicate analysis is not within control limits.

+ - Indicates the correlation coefficient for method of standard addition is less than 0.995.

1977

17-NCBC-R1-09

MODIFIED PRIORITY POLLUTANT LIST
(EG & G Subcontract No. C85-130761-FAM-177-85)
INORGANIC ANALYSIS SHEET

LAB NAME: CALIF. ANAL. LAB.

CASE NO: 21349

SOW NO.: 784

QC RPT. #: 21349

LAB SAMPLE NO.: 21349-8

DATE: 3-14-86

ELEMENTS IDENTIFIED AND MEASURED

MATRIX: CHARCOAL

UNITS: MG/KG
DRY WEIGHT

ELEMENTS..METHOD

2. ANTIMONY....P	430 R
3. ARSENIC.....P	<0.50
5. BERYLLIUM...P	<0.30
6. CADMIUM.....P	<0.30
8. CHROMIUM....P	5.9
10. COPPER.....P	1.3
12. LEAD.....P	2.1
15. MERCURY....CV	<0.10
16. NICKEL.....P	3.3
18. SELENIUM....P	<0.50 R
19. SILVER.....P	<0.50 R
21. THALLIUM....F	<0.50 R
24. ZINC.....P	12 R
25. CYANIDE.....C	<0.50

COMMENTS:

ICP Interelement and background corrections applied? Yes.

AA corrections consist of Zeeman effect background correction on Perkin-Elmer 3030 instruments and correction of background absorption by D2 lamp on Varian 875 instruments. Corrections are applied before generation of raw data.

FOOTNOTES:

NR - not required by contract at this time

Value - If the result is a value greater than or equal to the instrument detection limit but less than the contract required detection limit, report the value in brackets (ie. [10]). Indicate the analytical method used with P (for ICP/Flame AA), F (for furnace), or CV (for cold vapor).

U - Indicates element was analyzed for but not detected. Report with the detection limit value (e.g., <10U).

E - Indicates a value estimated or not reported due to the presence of interference. Explanatory note included on cover page.

S - Indicates value determined by Method of Standard Addition.

R - Indicates spike sample recovery is not within control limits.

* - Indicates duplicate analysis is not within control limits.

+ - Indicates the correlation coefficient for method of standard addition is less than 0.995.

FORM V

SPIKE SAMPLE RECOVERY

LAB NAME: CALIF. ANAL. LABS.

EG & G ID

1T-NCBC-R1-09

DATE: 3-19-96
MATRIX: PHARMACAL

UNITS: ppb

COMPOUNDS METALS:	CONTROL LIMIT % R	SPIKED SAMPLE RESULT (SSR)	SAMPLE RESULT (SR)	SPIKED ADDED (SA)	% R
ELEMENTS...METHOD					
2. ANTIMONY....P	75 TO 125	25.1	<20	200	13 R
3. ARSENIC....P	75 TO 125	266	<20	300	86
5. BERYLLIUM...P	75 TO 125	48.2	<20	100	48
6. CADMIUM....P	75 TO 125	41.1	<20	100	41
8. CHROMIUM....P	75 TO 125	477	117	400	47
10. COPPER.....P	75 TO 125	232	264	250	78
12. LEAD.....P	75 TO 125	1234	182	350	40
15. MERCURY....CV	75 TO 125	NIR	NIR	-	-
16. NICKEL.....P	75 TO 125	307	105.8	250	41
18. SELENIUM....P	75 TO 125	247	<20	50	48 R
19. SILVER.....P	75 TO 125	52.3	<20	100	52 R
21. THALLIUM....F	75 TO 125	12.4	<20	20	25 R
24. ZINC.....P	75 TO 125	433	304	300	126 R
25. CYANIDE.....C	75 TO 125	NIR	NIR	-	-

COMMENTS:

1984

FM VI

DUPLICATE SAMPLE RECOVERY

LAB NAME: CALIF. ANAL. LABS.

EG & G ID NO.:

17-NCBC-R1-09

DATE: 3-19-86
MATRIX: URBAN

UNITS: ppb

COMPOUNDS
METALS:

CONTROL SAMPLE(S) DUPLICATES (D)
LIMIT

RPD

ELEMENTS..METHOD			
2. ANTIMONY....P	<20	21	4.2 0
3. ARSENIC....P	<20	<20	0
5. BERYLLIUM...P	<20	<20	0
6. CADMIUM....P	<20	<20	0
8. CHROMIUM....P	11.7	133	13
10. COPPER.....P	26.9	27.8	2.3
12. LEAD.....P	182	173	2.1
15. MERCURY....CV	NIR	NIR	-
16. NICKEL.....P	65.2	61.7	6.4
18. SELENIUM....P	<20	<20	0
19. SILVER.....P	<20	<20	0
21. THALLIUM....F	<20	<20	0
24. ZINC.....P	304	342	12
25. CYANIDE.....C	NIR	NIR	-

COMMENTS:

1985

17-NCBC-R2-09

MODIFIED PRIORITY POLLUTANT LIST
(EG & G Subcontract No. C85-130761-KAM-177-85)
INORGANIC ANALYSIS SHEET

LAB NAME: CALIF.ANAL.LAB.

CASE NO: 21413

SOW NO.: 784

QC RPT. # 21413

LAB SAMPLE NO.: 21413-7

DATE: 2-14-86

ELEMENTS IDENTIFIED AND MEASURED

MATRIX: CHARCOAL

UNITS: MG/KG
DRY WEIGHT

ELEMENTS..METHOD

2. ANTIMONY....P	<30 R
3. ARSENIC.....P	1.1
5. BERYLLIUM...P	<0.20
6. CADMIUM.....P	<0.30
8. CHROMIUM....P	0.4
10. COPPER.....P	1.2
12. LEAD.....P	2.4
15. MERCURY....CV	0.45
16. NICKEL.....P	3.8
18. SELENIUM....P	<0.30 R
19. SILVER.....P	<0.50 R
21. THALLIUM....F	<0.50 R
24. ZINC.....P	1.9 *
25. CYANIDE.....C	<0.50

COMMENTS:

ICP Interelement and background corrections applied? Yes.

AA corrections consist of Zeeman effect background correction on Perkin-Elmer 3030 instruments and correction of background absorption by D2 lamp on Varian 875 instruments. Corrections are applied before generation of raw data.

FOOTNOTES:

NR - not required by contract at this time

Value - If the result is a value greater than or equal to the instrument detection limit but less than the contract required detection limit, report the value in brackets (ie. [10]). Indicate the analytical method used with P (for ICP/Flame AA), F (for furnace), or CV (for cold vapor).

U - Indicates element was analyzed for but not detected. Report with the detection limit value (e.g., <100).

E - Indicates a value estimated or not reported due to the presence of interference. Explanatory note included on cover page.

S - Indicates value determined by Method of Standard Addition.

R - Indicates spike sample recovery is not within control limits.

* - Indicates duplicate analysis is not within control limits.

+ - Indicates the correlation coefficient for method of standard addition is less than 0.995.

1996

17-NCBC-R5-09

MODIFIED PRIORITY POLLUTANT LIST
(EG & G Subcontract No. C85-130761-KAM-177-85)
INORGANIC ANALYSIS SHEET

LAB NAME: CALIF. ANAL. LAB.

CASE NO: 21484

SOW NO.: 784

QC RPT. # 21484

LAB SAMPLE NO.: 21484-1A

DATE: 2-12-86

ELEMENTS IDENTIFIED AND MEASURED

MATRIX: CHLOROPAL

UNITS: MG/KG
DRY WEIGHT

ELEMENTS...METHOD

2. ANTIMONY....P
3. ARSENIC.....P
5. BERYLLIUM...P
6. CADMIUM.....P
8. CHROMIUM....P
10. COPPER.....P
12. LEAD.....P
15. MERCURY....CV
16. NICKEL.....P
18. SELENIUM....P
19. SILVER.....P
21. THALLIUM....F
24. ZINC.....P
25. CYANIDE.....C

<30 R
1.2
20.20
20.20
10.7
2
10
0.1
3.4
20.30 R
20.20 R
20.50 R
10
20.30

COMMENTS:

ICP Interelement and background corrections applied? Yes.

AA corrections consist of Zeeman effect background correction on Perkin-Elmer 3030 instruments and correction of background absorption by D2 lamp on Varian 875 instruments. Corrections are applied before generation of raw data.

FOOTNOTES:

NR - not required by contract at this time

Value - If the result is a value greater than or equal to the instrument detection limit but less than the contract required detection limit, report the value in brackets (ie. [10]).
Indicate the analytical method used with P (for ICP/Flame AA), F (for furnace), or CV (for cold vapor).

U - Indicates element was analyzed for but not detected. Report with the detection limit value (e.g., <10U).

E - Indicates a value estimated or not reported due to the presence of interference. Explanatory note included on cover page.

S - Indicates value determined by Method of Standard Addition.

R - Indicates spike sample recovery is not within control limits.

* - Indicates duplicate analysis is not within control limits.

+ - Indicates the correlation coefficient for method of standard addition is less than 0.995.

2011

17-NCBC-R1-09A

MODIFIED PRIORITY POLLUTANT LIST
(EG & G Subcontract No. C85-130761-KAM-177-85)
INORGANIC ANALYSIS SHEET

LAB NAME: CALIF. ANAL. LAB.

CASE NO: 21340

SOW NO.: 784

QC RPT. # 21340

LAB SAMPLE NO.: 21340-9

DATE: 3-10-86

ELEMENTS IDENTIFIED AND MEASURED

MATRIX: CHARCOAL

UNITS: MG/KG
DRY WEIGHT

ELEMENTS..METHOD

2. ANTIMONY....P	<3U	R
3. ARSENIC.....P	14	
5. BERYLLIUM...P	<0.3U	
6. CADMIUM.....P	<0.3U	
8. CHROMIUM....P	7.5	
10. COPPER.....P	2.1	
12. LEAD.....P	11	
13. MERCURY....CV	<0.1U	
16. NICKEL.....P	3.7	
18. SELENIUM....P	<0.3U	R
19. SILVER.....P	<0.3U	R
21. THALLIUM....F	<0.5U	R
24. ZINC.....P	31	R
25. CYANIDE.....C	<0.5U	

COMMENTS:

ICP Interelement and background corrections applied? Yes.

AA corrections consist of Zeeman effect background correction on Perkin-Elmer 3030 instruments and correction of background absorption by D2 lamp on Varian 875 instruments. Corrections are applied before generation of raw data.

FOOTNOTES:

NR - not required by contract at this time

Value - If the result is a value greater than or equal to the instrument detection limit but less than the contract required detection limit, report the value in brackets (ie. [10]). Indicate the analytical method used with P (for ICP/Flame AA), F (for furnace), or CV (for cold vapor).

U - Indicates element was analyzed for but not detected. Report with the detection limit value (e.g., <10U).

E - Indicates a value estimated or not reported due to the presence of interference. Explanatory note included on cover page.

S - Indicates value determined by Method of Standard Addition.

R - Indicates spike sample recovery is not within control limits.

* - Indicates duplicate analysis is not within control limits.

+ - Indicates the correlation coefficient for method of standard addition is less than 0.995.

1983

17-NCBC-R2-09A

MODIFIED PRIORITY POLLUTANT LIST
(EG & G Subcontract No. C85-130761-KAM-177-85)
INORGANIC ANALYSIS SHEET

LAB NAME: CALIF. ANAL. LAB.

CASE NO: 21413

SOW NO.: 784

QC RPT. # 21413

LAB SAMPLE NO.: 21413-8

DATE: 2-14-76

ELEMENTS IDENTIFIED AND MEASURED

MATRIX: CHARCOAL

UNITS: MG/KG
DRY WEIGHT

ELEMENTS...METHOD

2. ANTIMONY....P
3. ARSENIC....P
5. BERYLLIUM...P
6. CADMIUM....P
8. CHROMIUM....P
10. COPPER.....P
12. LEAD.....P
15. MERCURY....CV
16. NICKEL.....P
18. SELENIUM....P
19. SILVER.....P
21. THALLIUM....F
24. ZINC.....P
25. CYANIDE.....C

<30 R
1.2
20.30
2.30
1.2
3
11
20.10
2.7
20.30 R
20.50 R
20.50 R
11
20.50 *

COMMENTS:

ICP Interelement and background corrections applied? Yes.

AA corrections consist of Zeeman effect background correction on Perkin-Elmer 3030 instruments and correction of background absorption by D2 lamp on Varian 875 instruments. Corrections are applied before generation of raw data.

FOOTNOTES:

NR - not required by contract at this time

Value - If the result is a value greater than or equal to the instrument detection limit but less than the contract required detection limit, report the value in brackets (ie. [10]).
Indicate the analytical method used with P (for ICP/Flame AA), F (for furnace), or CV (for cold vapor).

U - Indicates element was analyzed for but not detected. Report with the detection limit value (e.g., <10U).

E - Indicates a value estimated or not reported due to the presence of interference. Explanatory note included on cover page.

S - Indicates value determined by Method of Standard Addition.

R - Indicates spike sample recovery is not within control limits.

* - Indicates duplicate analysis is not within control limits.

+ - Indicates the correlation coefficient for method of standard addition is less than 0.995.

1997

EG&G ID NO.

17-NCBC-R5-09A

MODIFIED PRIORITY POLLUTANT LIST
(EG & G Subcontract No. CS5-130761-KAM-177-85)
INORGANIC ANALYSIS SHEET

LAB NAME: CALIF. ANAL. LAB.

CASE NO: 21484

SOW NO.: 784

QC RPT. # 21484

LAB SAMPLE NO.: 21484-11

DATE: 3-14-86

ELEMENTS IDENTIFIED AND MEASURED

MATRIX: CHARCOAL

UNITS: MG/KG
DRY WEIGHT

ELEMENTS..METHOD

2. ANTIMONY....P	<30 R
3. ARSENIC.....P	1.5
5. BERYLLIUM...P	<0.30
6. CADMIUM.....P	<0.30
8. CHROMIUM....P	10.3
10. COPPER.....P	1.4
12. LEAD.....P	10
15. MERCURY....CV	<0.10
16. NICKEL.....P	5.5
18. SELENIUM....P	<0.30 R
19. SILVER.....P	<0.30 R
21. THALLIUM....F	<0.10 R
24. ZINC.....P	15
25. CYANIDE.....C	<0.50

COMMENTS:

ICP Interelement and background corrections applied? Yes.

AA corrections consist of Zeeman effect background correction on Perkin-Elmer 3030 instruments and correction of background absorption by D2 lamp on Varian 875 instruments. Corrections are applied before generation of raw data.

FOOTNOTES:

NR - not required by contract at this time

Value - If the result is a value greater than or equal to the instrument detection limit but less than the contract required detection limit, report the value in brackets (ie. [10]). Indicate the analytical method used with P (for ICP/Flame AA), F (for furnace), or CV (for cold vapor).

U - Indicates element was analyzed for but not detected. Report with the detection limit value (e.g., <10U).

E - Indicates a value estimated or not reported due to the presence of interference. Explanatory note included on cover page.

S - Indicates value determined by Method of Standard Addition.

R - Indicates spike sample recovery is not within control limits.

* - Indicates duplicate analysis is not within control limits.

+ - Indicates the correlation coefficient for method of standard addition is less than 0.995.

2012

17-NCBC-R1-5-10

MODIFIED PRIORITY POLLUTANT LIST
(EG & G Subcontract No. C85-130761-KAM-177-85)
INORGANIC ANALYSIS SHEET

LAB NAME: CALIF. ANAL. LAB.

CASE NO: 21484

SOW NO.: 784

QC RPT. # 21484

LAB SAMPLE NO.: 21484-2

DATE: 3-19-86

ELEMENTS IDENTIFIED AND MEASURED

MATRIX: CHACCOAL

UNITS: MG/KG
DRY WEIGHT

ELEMENTS...METHOD

2. ANTIMONY....P	<30 R
3. ARSENIC.....P	1.1
5. BERYLLIUM...P	<0.30
6. CADMIUM.....P	<0.30
8. CHROMIUM....P	1.5
10. COPPER.....P	1.5
12. LEAD.....P	4.3
15. MERCURY....CV	<0.10
16. NICKEL.....P	2.4
18. SELENIUM....P	<0.30 R
19. SILVER.....P	<0.50 R
21. THALLIUM....F	<0.50 R
24. ZINC.....P	1.4
25. CYANIDE.....C	<0.50

COMMENTS:

ICP Interelement and background corrections applied? Yes.

AA corrections consist of Zeeman effect background correction on Perkin-Elmer 3030 instruments and correction of background absorption by D2 lamp on Varian 875 instruments. Corrections are applied before generation of raw data.

FOOTNOTES:

NR - not required by contract at this time

Value - If the result is a value greater than or equal to the instrument detection limit but less than the contract required detection limit, report the value in brackets (ie. [10]).

Indicate the analytical method used with P (for ICP/Flame AA), F (for furnace), or CV (for cold vapor).

U - Indicates element was analyzed for but not detected. Report with the detection limit value (e.g., <10U).

E - Indicates a value estimated or not reported due to the presence of interference. Explanatory note included on cover page.

S - Indicates value determined by Method of Standard Addition.

R - Indicates spike sample recovery is not within control limits.

* - Indicates duplicate analysis is not within control limits.

+ - Indicates the correlation coefficient for method of standard addition is less than 0.995.

2010

2,4-D and 2,4,5-T by EPA Method 8150

CAL I.D.	mg/Kg (ppm) 2,4-D	mg/Kg (ppm) 2,4,5-T
<u>21349-MB</u>	<u><0.01</u>	<u><0.01</u>
-1 IT R1-01	890	1400
-2 IT R2-01	920	1300
-4 IT R3-01	1100	1600
-5 IT R4-01	990	1200
-6 IT R5-01	1200	2400
-7 IT R1-02	0.18	0.50
-7MS (0.05)	0.25 (160%)	0.73 (460%)
-7MSD (0.05)	0.27 (180%)	0.70 (400%)
-8 IT R1-09	<0.01	0.014
-9 IT R1-09A	<0.01	0.01
<u>21591-1MB</u>	<u><0.01</u>	<u><0.01</u>
-1 -	360	770
-2 -	280	610
-3 -	<0.01	<0.01
-4 -	<0.01	<0.01
-5 -	<0.01	0.011
-6 -	<0.01	<0.01
<u>21484-2MB</u>	<u><0.01</u>	<u>0.06</u>
-2 IT R1-5-10	<0.01	<0.01
-9 IT R5-02	0.17	0.54
-10 IT R5-09	<0.01	<0.01
-11 IT R5-09A	<0.01	<0.01
-13 IT R3-04	<20	<2.0
<u>21413-1MB</u>	<u><0.01</u>	<u><0.01</u>
-1 IT R1-04	<1.0	<0.2
-2 -	<0.01	<0.01
-3 -	<0.01	<0.01
-5 IT R2-02	0.05	0.17
-7 IT R2-09	<0.01	<0.01
-8 IT R2-09A	<0.01	<0.01
-11 IT R3-02	0.02	0.06

Phenoxy Acids
Reanalyses

21349-MB	<0.005	<0.005
-MBS or MS 50 ppb	0.051	0.067
7RX	0.039	0.220
-7MS (50 ppb)	0.077 (76%)	0.260 (80%)
-7MSD (50 ppb)	0.0102 (130%)	0.420 (400%)

California Analytical Laboratories, Inc.

CREOSOTE

Creosote (the 'coal tar' variety) is a mixture of polynuclear aromatic hydrocarbons used as biocide/biostat in the preservation of wood. Most of the principal components of the mixture are priority pollutants. We have examined both commercial creosote and the chromatogram in the reference cited in K. McKay's letter of December 23, 1985 and compared these data to the raw mass chromatograms raw Quan Lists for the samples IT-NCBC-R1-01 and IT-NCBC-R2-01. There are a variety of polynuclear aromatic hydrocarbons present in the samples. Nevertheless, it is our conclusion that it is impossible to say that the creosote profile is present in the data. We base this conclusion on the low amounts of 2-methyl naphthalene and fluorene in one or both of the samples. Further, our own creosote data shows that phenanthrene dominates anthracene by a factor of greater than 6 to 1 in creosote. This does not occur in the cited samples. The data does not rule out the presence of creosote, but it is clear that the bulk of polynuclear aromatic hydrocarbons came from other hydrocarbon sources and further that the analysis for only "creosote" is not possible.

ICDD DATA REPORT
California Analytical Laboratories
2546 Industrial Blvd.
W. Sacramento, CA 95691

Lab: California Analytical Laboratories
Case No. 21932
Batch/shipment No.

Report Date: 9-25-85
Column: SP-2331

Cal ID	Sample Header	C Aliquot U (sample)	ng/sample ICDD Mean	Det. Lim	Inst ID	Date	Time	320/ 322	332/ 334	ng/sample Surr Meas	% Acc'd	320	322	257	320*	332	334	Comments
21932MB	METHOD BLANK	Y	1.00	MD	0.16	0	09/25/85	16:59:00										
21932MBMS	MEIN. BLNK MS	Y	1.00	13.6		0	09/25/85	17:20:00	0.72	9.42	94	1117640	1556910	555346	938741	1096630	1526890	
21932-1	1131	Y	1.00	MD	0.59	0	09/25/85	17:30:00	0.72	9.75	98				2036677	2136660	3127800	136% Recovery
21932-2	1132	Y	1.00	MD	0.27	0	09/25/85	17:38:00	1.27	9.71	91				203501	245439	343673	
21932-3	1133	Y	1.00	MD	0.27	0	09/25/85	17:58:00	1.27	9.77	97	21096	16597	12632	2315250	2730770	3559650	Ratio Unacceptable
21932-4	1134	Y	1.00	MD	0.17	0	09/25/85	18:15:00	0.85	9.75	98	133020	157416	62752	1952223	2230600	2994490	
21932-5	1135	Y	1.00	MD	0.17	0	09/25/85	18:59:00	0.85	9.75	96				850411	999907	1336710	
21932-6	1136	Y	1.00	MD	0.16	0	09/25/85	19:28:00	1.16	9.75	98	5477	4724	5756	1997467	2302480	3080640	Ratio Unacceptable
21932-7	1137	Y	1.00	MD	0.28	0	09/25/85	20:03:00	0.65	9.73	95	11472	17556		1603652	1873420	2559090	Ratio Unacceptable
21932-8	1138	Y	1.00	MD	0.22	0	09/25/85	20:21:00	0.74	9.75	97				1444240	1684630	2235380	
21932-9	1139	Y	1.00	MD	0.13	0	09/25/85	20:46:00	0.74	9.74	97	6080	8208		1022516	1173740	1586130	
21932-10	1140	Y	1.00	MD	0.13	0	09/25/85	21:13:00	0.75	9.78	95				1863680	2247320	2896000	
21932-11	1141	Y	1.00	MD	0.11	0	09/25/85	21:36:00	0.75	9.77	95	8980	11936	4581	1891322	2279920	2959730	
21932-12	1142	Y	1.00	MD	0.11	0	09/25/85	22:12:00	0.62	9.77	100	116104	141300	53963	2419758	2749520	3591470	
21932-13	1143	Y	1.00	MD	0.12	0	09/25/85	22:55:00	0.77	9.72	97				1231550	1448860	1886030	

MD = Method Blank
P = Partial Scan/Confirmatory Analysis
MS = Native ICDD Spike
D = Duplicate/fortified field blank
RI = Re-injection
FB = Field Blank
ND = Not Detected
DL = Detection Limit
RE = Re-extraction

*Corrected for contribution by native ICDD; 0.9% of m/z 322 subtracted

Comments:

Ratio Unacceptable - the sample shows ion current for m/e 320 and m/e 322, but their ratio is unacceptable (outside the 0.67 - 0.87 window) for positive 2,3,7,8-ICDD identification.

Summary of TCOD & TSP in Filter Samples

CAL Lab I.D.	Sample Number	Method	Blank	N3	C Allquot U (sample)	ng/sample TCDD Meas	ng/sample Detection Limit	TSP (ug/m ³)	Vol (m ³)
21932-MB	-MBNS				1.00	ND	0.14	--	--
-1	1131	Method	Blank	Y	1.00	13.6	--	--	--
-2	1132			Y	1.00	ND	0.59	18.6	4845.99
-3	1133			Y	1.00	ND	0.27	44.9	4635.54
-4	1134			Y	1.00	1.5	--	36.4	4845.99
-1	1135			Y	1.00	ND	0.17	17.4	2877.06
-2	1136			Y	1.00	ND	0.14	26.9	4547.10
-3	1137			Y	1.00	ND	0.28	31.8	4637.07
-4	1138			Y	1.00	ND	0.22	25.2	4547.10
-5	1139			Y	1.00	0.14	--	24.4	4721.23
-6	1140			Y	1.00	ND	0.13	41.9	1761.05
-7	1141			Y	1.00	0.11	--	38.5	1596.16
-8	1143			Y	1.00	1.1	--	55.7	1761.05
						ND	0.12	35.8	1828.50

James Earl Ray